

100mm

130mm



RadioShack Wireless Headphones

Model 3304478




User Manual

Thank you for purchasing your **RadioShack Wireless Headphones**. For a better experience, please read this guide carefully and keep it for future reference.

Product Overview

The RadioShack Wireless Bluetooth Headphones combine modern design with high quality stereo sound. They support Bluetooth playback, TF card audio, and wired connection, making them suitable for everyday use at home, work, or on the go.

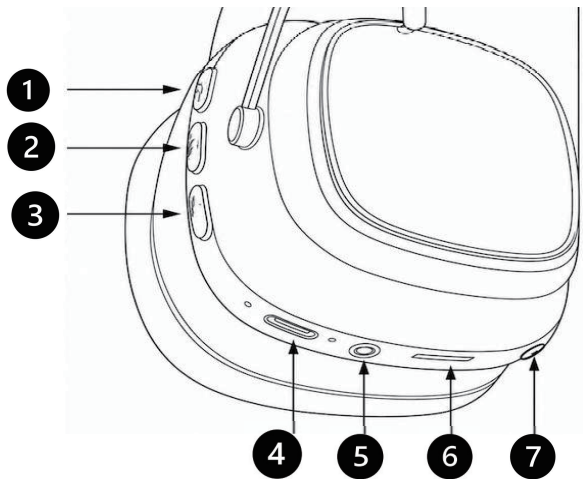

Ports & Components

1. **Vol + / Next Track**
2. **Play Pause/ Answer Hang up**
3. **Vol - / Previous Track**
4. **USB- C Charging Port**
5. **3.5 mm Audio Jack**
6. **TF Card Slot**
7. **Power / Function Buttons**

Button Functions

1. **Power / Function Button**
 - Press and hold for **3 seconds**: Power ON / OFF
 - Short press after power on: Switch between **Bluetooth / FM / TF Card mode**
2. **Volume + / Next Track**
 - Long press: Increase volume
 - Short press: Next track
3. **Volume - / Previous Track**
 - Long press: Decrease volume
 - Short press: Previous track
4. **Play Button**
 - Short press: Play / Pause
 - Incoming call: Short press to answer / hang up
 - Incoming call: Long press to reject
 - Double press: Redial last number
5. **Reset**
 - Press the **Power button 5 times** to clear pairing history
 - Reconnect by selecting **"3304478"** on your device

Pairing

This product is compatible with Bluetooth technology. **Bluetooth** is a registered trademark of **Bluetooth SIG, Inc.**

- With the headphones turned on, they will enter pairing mode automatically. The LED Red and Blue flashes rapidly.
- On your device, enable **Bluetooth** and search for available devices.
- Select **"3304478"** from the device list.
- When successfully paired, the LED remains solid.

Technical Specifications

- Charging Input:** USB- C, DC 5V
- Wireless Frequency:** 2.402 – 2.480 GHz
- Wireless Range:** Up to 10 m
- Speaker Size:** 40 mm
- Impedance:** 16 Ω
- Charging Time:** Approx. 3 hours
- Battery Capacity:** 400 mAh
- Playback Time:** Up to 18 hours
- Compatibility:** All Bluetooth enabled phones and computers

Safety & Care

- Do not expose the product to water or moisture
- Use only the recommended charging cable
- Do not disassemble the product
- Keep away from extreme heat and children

Troubleshooting Guide

Problem	Possible Cause	Solution
Headphones do not turn on	Battery is completely discharged	Charge the headphones fully using the USB- C charging port.
Cannot connect to Bluetooth	Device not in pairing mode	Turn the headphones on and select "3304478" from your phone' s Bluetooth list.
Bluetooth connection fails	Previous pairing information stored	Press the Power button 5 times to reset pairing, then reconnect.
No sound during playback	Volume level is too low	Increase the volume using the Volume + button.
Music skips or disconnects	Device is out of Bluetooth range	Keep the connected device within 10 meters of the headphones.
TF card not detected	Card not inserted correctly or unsupported	Reinsert the TF card or try another compatible TF card.
Cannot answer phone calls	Bluetooth not connected to phone	Ensure the headphones are properly connected via Bluetooth.
Buttons do not respond	Temporary system issue	Power off the headphones and turn them on again.
Short battery life	Battery not fully charged	Fully charge the battery before use.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.



Auriculares inalámbricos RadioShack




Modelo 3304478

Manual de usuario

Gracias por comprar tus **auriculares inalámbricos RadioShack**. Para una mejor experiencia, por favor lee esta guía detenidamente y guárdala para futuras referencias.

Descripción del Producto

Los audífonos Bluetooth inalámbricos RadioShack combinan un diseño moderno con sonido estéreo de alta calidad. Admiten reproducción por Bluetooth, tarjeta TF, conexión por cable, ideales para el uso diario.

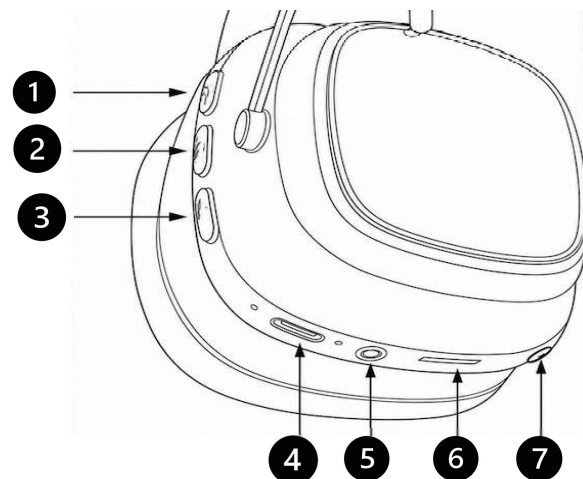

Puertos y Componentes

1. **Vol + / Siguiente pista**
2. **Reproducir pausa/responder Colgar**
3. **Vol - / Pista anterior**
4. **Puerto de carga USB-C**
5. **Puerto de audio de 3,5 mm**
6. **Ranura de tarjeta TF**
7. **Botón de encendido / función**

Funciones de los Botones

1. **Botón de Encendido**
 - Mantener presionado **3 segundos**: Encender / Apagar
 - Pulsación corta tras encender: Cambiar entre **Bluetooth / FM / Tarjeta TF**
2. **Volumen + / Siguiente pista**
 - Pulsación larga: Subir volumen
 - Pulsación corta: Siguiente pista
3. **Volumen - / Pista anterior**
 - Pulsación larga: Bajar volumen
 - Pulsación corta: Pista anterior
4. **Botón de Reproducción**
 - Pulsación corta: Reproducir / Pausar
 - Llamada entrante: Pulsación corta para responder / colgar
 - Llamada entrante: Pulsación larga para rechazar
 - Doble pulsación: Rellamar
5. **Reinicio**
 - Presione el **botón de encendido 5 veces** para borrar el emparejamiento
 - Vuelva a conectar seleccionando **"3304478"**

Emparejamiento

Este producto es compatible con la tecnología Bluetooth. **Bluetooth** es una marca registrada de **Bluetooth SIG, Inc.**

- Enciende los auriculares; entrarán automáticamente en modo de emparejamiento (LED rojo y azul parpadeando).
- Activa el **Bluetooth** en tu dispositivo y busca dispositivos cercanos.
- Selecciona **"3304478"** en la lista.
- Una vez emparejados, el LED permanecerá fijo.

Especificaciones Técnicas

- Entrada de carga:** USB- C, DC 5V
- Frecuencia inalámbrica:** 2.402 – 2.480 GHz
- Distancia inalámbrica:** Hasta 10 m
- Altavoz:** 40 mm
- Impedancia:** 16 Ω
- Tiempo de carga:** Aprox. 3 horas
- Batería:** 400 mAh
- Tiempo de uso:** Hasta 18 horas
- Compatibilidad:** Teléfonos y computadoras con Bluetooth

Seguridad y Cuidado

- No exponer al agua o humedad
- No desmontar el producto
- Usar solo cargadores compatibles
- Mantener fuera del alcance de los niños

Solución de Problemas

Problema	Causa Posible	Solución
Los audífonos no encienden	Batería completamente descargada	Cargue los audífonos completamente usando el puerto USB- C.
No se puede conectar por Bluetooth	El dispositivo no está en modo de emparejamiento	Encienda los audífonos y seleccione "3304478" en la lista Bluetooth del teléfono.
Falla la conexión Bluetooth	Información de emparejamiento previa almacenada	Presione el botón de encendido 5 veces para reiniciar y vuelva a conectar.
No hay sonido durante la reproducción	Volumen demasiado bajo	Aumente el volumen usando el botón Volumen + .
El audio se corta o se desconecta	El dispositivo está fuera del rango Bluetooth	Mantenga el dispositivo dentro de un rango de 10 metros .
La tarjeta TF no es detectada	Tarjeta mal insertada o incompatible	Vuelva a insertar la tarjeta TF o utilice una tarjeta compatible.
No se pueden contestar llamadas	Bluetooth no conectado al teléfono	Verifique que los audífonos estén correctamente conectados por Bluetooth.
Los botones no responden	Error temporal del sistema	Apague los audífonos y vuelva a encenderlos.
Duración de batería reducida	Batería no completamente cargada	Cargue la batería completamente antes de usar.