 




User Manual



The RadioShack Wireless ANC Bluetooth Headphones deliver high quality stereo sound with **Active Noise Cancellation (ANC)** technology. Designed for extended use, they support Bluetooth wireless playback and wired audio connection.



1. ANC On / Off
2. Vol + / Next Track
3. Vol - / Previous Track
4. Power / Multi Functions Button
5. 3.5 mm Audio Jack
6. USB- C Charging Port

Power / Multi- Function Button

- Long press : Power ON / OFF
- Short press: Play / Pause
- Double press: Redial last number
- Triple press: Activate voice assistant
- Incoming call:
 - Short press: Answer / Hang up
 - Long press 1.5 s: Reject call

- Long press: Increase volume
- Short press: Next track

- Long press: Decrease volume
- Short press: Previous track

- Short press (after power on): Turn **ANC ON / OFF**

- Press the **Power button 5 times** to power off and clear pairing information
- Reconnect by selecting **"3304479"** on your device

This product is compatible with Bluetooth technology. **Bluetooth** is a registered trademark of Bluetooth SIG, Inc.

1. With the headphones turned on, they will enter pairing mode automatically. The LED Red and Blue flashes.
2. On your device, enable **Bluetooth** and search for available devices.
3. Select **"3304479"** from the device list.
4. When successfully paired, the blue light keeps slow flashing.

Bluetooth searching name is 3304479

Charging Input: USB- C, DC 5V
Wireless Frequency: 2.402 ~ 2.480 GHz
Wireless Range: >10 m
Speaker Size: 40 mm
Impedance: 32 Ω
Charging Time: Approx. 3 hours
Battery Capacity: 400 mAh
Playback Time: Over 30 hours
Compatibility: All Bluetooth enabled phones and computers

- Do not expose the product to water or moisture
- Use only the recommended charging cable
- Do not disassemble the product
- Keep away from extreme heat and children

Problem	Possible Cause	Solution
Headphones do not turn on	Battery fully discharged	Charge the headphones using the USB-C port before use.
Cannot connect to Bluetooth	Not in pairing mode	Turn on the headphones and select "3304479" from the Bluetooth list.
Bluetooth connection unstable	Distance exceeds range	Keep the device within 10 meters of the headphones.
No sound	Volume too low	Increase volume using the Volume + button.
ANC not working	ANC not activated	Press the ANC button again after powering on.
Buttons not responding	System temporary error	Power off the headset and turn it on again.
Pairing issues persist	Old pairing data stored	Press the Power button 5 times to reset pairing information.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

 The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.



Los audífonos Bluetooth inalámbricos RadioShack con **Cancelación Activa de Ruido (ANC)** ofrecen sonido estéreo de alta calidad y larga duración de batería, ideales para uso diario.



1. ANC Encendido/Apagado
2. Vol + / Siguiente pista
3. Vol - / Pista anterior
4. Botón de encendido / multifunción
5. Puerto de audio de 3,5 mm
6. Puerto de carga USB-C

Botón de Encendido / Multifunción

- Mantener presionado : Encender / Apagar
- Pulsación corta: Reproducir / Pausar
- Doble pulsación: Rellamar
- Triple pulsación: Asistente de voz
- Llamada entrante:
 - Pulsación corta: Responder / Colgar
 - Pulsación larga 1.5 s: Rechazar

- Pulsación larga: Subir volumen
- Pulsación corta: Pista anterior

- Pulsación larga: Bajar volumen
- Pulsación corta: Pista siguiente

- Pulsación corta (con el equipo encendido): Activar / Desactivar **ANC**

- Presione el **botón de encendido 5 veces** para apagar y borrar el emparejamiento.
- Vuelva a conectar seleccionando "3304479"

Este producto es compatible con la tecnología Bluetooth. **Bluetooth** es una marca registrada de **Bluetooth SIG, Inc.**

1. Enciende los auriculares; entrarán automáticamente en modo de emparejamiento (LED rojo y azul parpadeando).
2. Activa el **Bluetooth** en tu dispositivo y busca dispositivos cercanos.
3. Selecciona "3304479" en la lista.
4. Una vez emparejados, la luz azul sigue parpadeando lentamente.

Entrada de carga: USB- B, DC 5V
Frecuencia inalámbrica: 2.402 ~ 2.480 GHz
Distancia inalámbrica: >10 m
Altavoz: 40 mm
Impedancia: 32 Ω
Tiempo de carga: Aprox. 3 horas
Batería: 400 mAh
Tiempo de uso: Más de 30 horas
Compatibilidad: Teléfonos y computadoras con Bluetooth

- No exponer al agua o humedad
- No desmontar el producto
- Usar solo cargadores compatibles
- Mantener fuera del alcance de los niños

Problema	Causa Posible	Solución
Los audífonos no responden	Batería descargada	Cargue los audífonos usando el cargador USB-C.
No se conecta por Bluetooth	No está en modo emparejamiento	Encienda los audífonos y selecciónelos. 33864379
Conexión Bluetooth intermite	Distancia excesiva	Mantenga el dispositivo dentro de 10 metros.
No hay sonido	Volumen bajo	Suba el volumen con el botón Volumen +.
ANC no funciona	ANC desactivado	Presione el botón ANC una vez tras encenderlo.
Botones no responden	Error temporal	Apague y vuelva a encender los audífonos.
Problemas de emparejamiento	Datos antiguos guardados	Presione el botón de encendido 5 veces para reiniciar.