



INTEGRATED SERIES



Operation explanation:

Specifications:

Output power: 60W (RMS)

Driver Units: 5.25" x 1 + 2" x 2

Frequency response: 50Hz-20KHz

Separation: ≥40 dB

S / N: ≥55 dB

Distortion: ≤1% (1K, 1W)

Build-in Li-battery: 7.4V/6000mAh

Dimensions: L210 x H275 x D160 (mm)

Features:


- Quality integrated with built-in amplifier
- Full audio spectrum performances, ideal for your favorite entertainment from Mp3, Mp4, CD/DVD movies and digital playbacks.
- Quality materials : Only the best components to recreate sound faithfully across all frequencies.

Package contents:

Speake Unit	-----	1 pc
User Manual	-----	1 pc
Audio Input Cord	-----	1 pc
TYPE-C Cord	-----	1 pc

NO.1

Rear panel

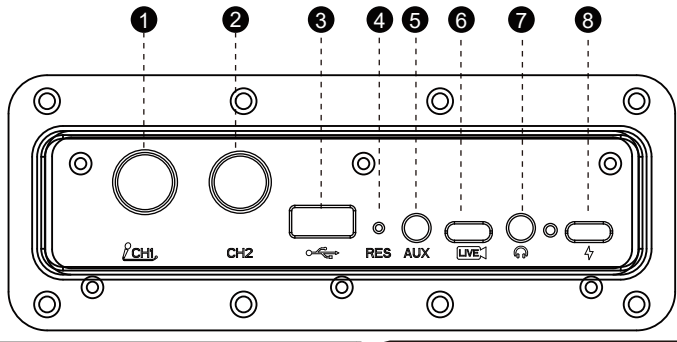

1. Micphone slot 1
2. Micphone slot 2
3. USB slot
4. RES: Press and hold the button at the back plate of subwoofer, and connect to power at the same time, wait for 5 seconds, then stop pressing, Subwoofer will be reset.
5. Input Connect to sound sources such as computer, CD player, Mp3, etc.
6. Live streaming slot
7. Headphone output
8. TYPE-C charging slot




*** Do NOT use USB for charging devices, as it is not designed for charging. Thank you.

NO.2

BT Pairing Method

Press top side "Mode" goes Bluetooth input mode, and the Bluetooth key light starts to blink slowly to search for Bluetooth devices. Turn on your mobile Bluetooth device and search for the device name " 4001989 " to match them nicely. When you successfully pair, your phone is connected to the speaker system, and the Bluetooth key lights up. When the phone music starts to play, the Bluetooth key lights up. You can perform functions such as PLAY/PAUSE on the top panel. In BT mode, when connecting the mobile phone, long press the "PLAY/PAUSE" button, the Bluetooth function can be forced to disconn ect.

Top Panel

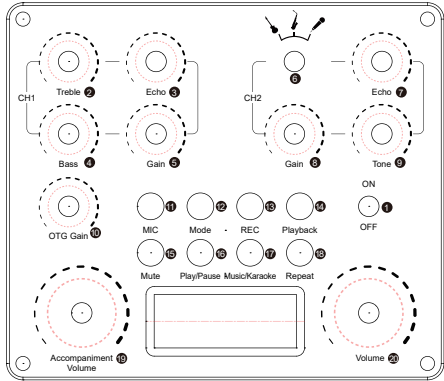

1. ON/OFF: Pull up turn on, Pull down turn off.
2. CH1 Treble: Mic 1 Mode, Increase or Reduce treble.
3. CH1 Echo: Mic 1 Mode, Increase or Reduce echo.
4. CH1 Bass: Mic 1 Mode, Increase or Reduce bass.
5. CH1 Gain: Mic 1 Mode, Increase or Reduce Gain.
6. Turn the knob to switch guitar, sax or microphone mode.
7. CH2 Echo: Mic 2 Mode, Increase or Reduce echo.
8. CH2 Gain: Mic 2 Mode, Increase or Reduce Gain.
9. CH2 Tone: Mic 2 Mode, Increase or Reduce Tone.
10. OTG Gain: Adjust the volume of the viewer during live broadcast.
11. : Short click, the microphone priority on/off; Press and hold the microphone on/off
12. : Short click, change mode, BT-AUX-USB.(When the USB is inserted, the USB mode is automatically switched. No USB flash drive is inserted ,Cannot switch USB mode)
13. : Press to start/stop recording (with USB)
14. : Press to start/stop recording (with USB)
15. : Short press mute/unmute.

NO.3

In use please pay attention to the following items:



NO.4

NO.5

NO.6

NO.7