



INTEGRATED SERIES

4001990



Operation explanation:

Specifications:

Driver Units: 4" x 2
Frequency response: 50Hz-20KHz
Separation: ≥40 dB
S / N: ≥55 dB
Distortion: ≤1% (1K, 1W)
Voltage/Frequency: DC 5V --- 2A
Build-in Li-battery: 7.4V/5400mAh
Dimensions: W326 x D150 x H211.5 (mm)

Features:


- Quality integrated with built-in amplifier
- Full audio spectrum performances, ideal for your favorite entertainment from Mp3, Mp4, CD/DVD movies and digital playbacks.
- Quality materials : Only the best components to recreate sound faithfully across all frequencies.

Package contents:

Speaker	-----	1 pc
User manual	-----	1 pc
Remote control	-----	1 pc
Audio input cord	-----	1 pc
Type-C cable	-----	1 pc

NO.1

 Top Panel

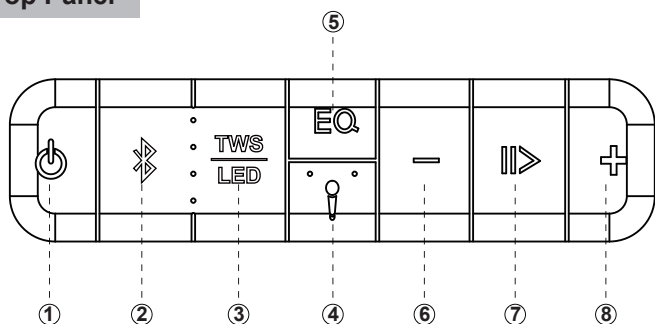


1. : Press the " "key to switch between BT-AUX -USB long press to power on, in the power on state, long press to power off.
2. BT: Short press change to BT mode.
3. TWS/LED: Short Press to open or close the TWS function;
Long press to switch LED lights
4. : Short press for microphone priority, long press for microphone on/off
5. EQ :Short press Tap indoor and outdoor sound loops to switch;
Long press Turn on/off the backing vocals.
6. - :Short press to reduce the volume;
long press to switch to the previous one.
7. :When playing in Bluetooth and USB mode, short press play/pause;
Short press to mute AUX mode; Long press Bluetooth to disconnect or connect
8. + :Short press to add volume ;
long press to switch to the next track.

*** After No signal in any mode or mute, pause for 15 minutes unit automatic shutdown

NO.2

 How to use the remote control

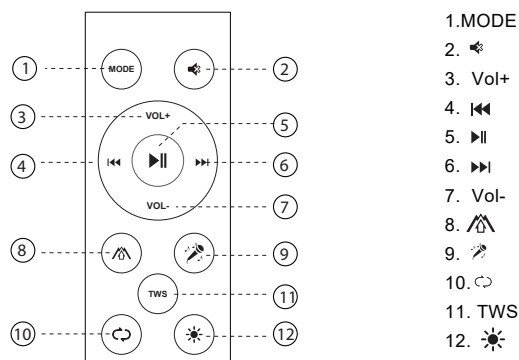

1. MODE: Switching sequence is BT-AUX-USB Loop,the corresponding audio source playback will be displayed on the indicator light. (USB flash drive automatically switches to USB mode when inserted. It cannot switch to USB mode if there is no USB disk inserted).
2. : Short press mute and long press for 5 seconds to restore factory Settings.
3. Vol+: Short press to add volume, long press to add volume continuously.
4. : In Bluetooth and USB mode, short press to switch to the previous one;
Long press to quickly retract
5. : When playing in Bluetooth and USB mode, short press play/pause;Short press to mute AUX mode; Long press to disconnect Bluetooth connection
6. : In Bluetooth/USB mode, short press to switch to the next track; Long press to fast forward
7. Vol- :Short press to reduce the volume, long press continuously reduce the volume.
8. :Short press Tap indoor and outdoor sound loops to switch;
Long press Turn on/off the backing vocals.
9. : Short press for microphone priority, long press for microphone on/off
10. : Short press in USB mode, single/all loop.
11. TWS: open or close the TWS function;
12. : Press to switch LED lights

NO.3

FCC Compliance:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

15.21 Information to the user:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

15.105 Information to the user:

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in residential installations. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

 
FCC RF Exposure Warning Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment can be used in portable exposure conditions

BT Pairing Method

Press "Mode" button on the remote or "U/M" button on speaker top panel goes BT mode , and the Bluetooth key light starts to blink slowly to search for Bluetooth devices. Turn on your mobile Bluetooth device and search for the device name " 4001990 " to match them nicely. When you successfully pair, your phone is connected to the speaker system, and the Bluetooth key lights up. When the phone music starts to play, the Bluetooth key lights up. You can perform functions such as PLAY/PAUSE on the top panel. In BT mode, when connecting the mobile phone, long press the " > " button, the Bluetooth function can be forced to disconnect.

Rear panel

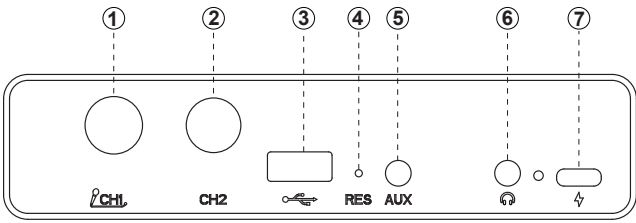


- 1. Micphone slot1.
- 2. Guitar Slot.
- 3. USB slot.
- 4. RES: Press and hold the button at the back plate of subwoofer, and connect to power at the same time, wait for 5 seconds, then stop pressing, Subwoofer will be reset.
- 5. Input Connect to sound sources such as computer, CD player, Mp3, etc.
- 6. Earphone slot
- 7. DC Power cord.



*** Do NOT use USB for charging devices, as it is not designed for charging. Thank you.

 In use please pay attention to the following items:

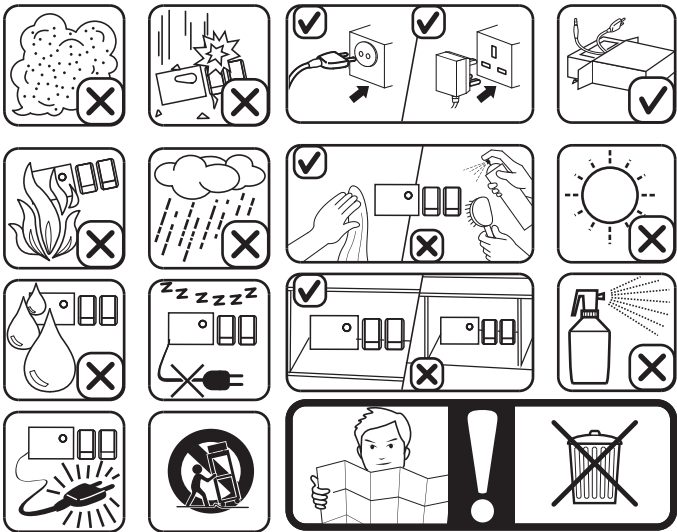

*if the remote control cannot function, it is because the battery of remote control has been used up. thank you.

