

 
 
Roller shade system driver

Instruction

Specification


Product Model	Input Voltage	Rated Power	Rated Current
MT25B	5V/2A	9.6W	0.8A
Torque	Rated RPM	Battery Capacity	Degree of Protection
1.1NM	20/25/30rpm	2600mAh	IP44

Product Instruction

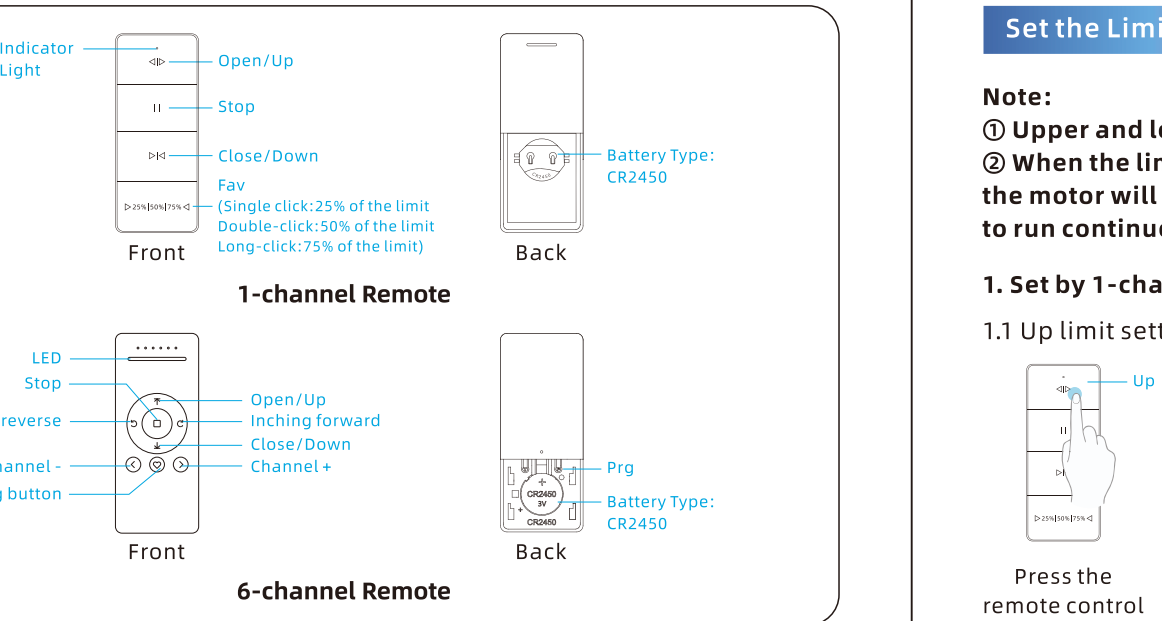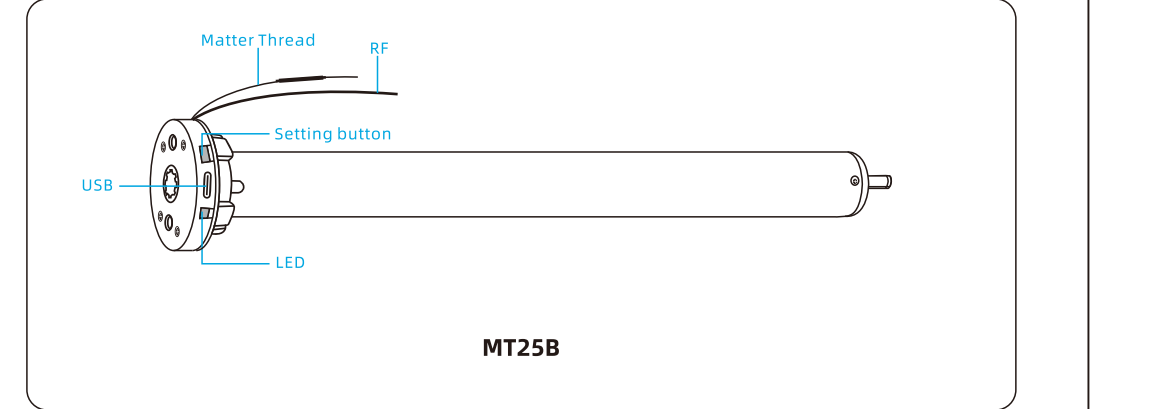


Motor Pair to Remote Control

 1. Motor Pair to 1-channel Remote

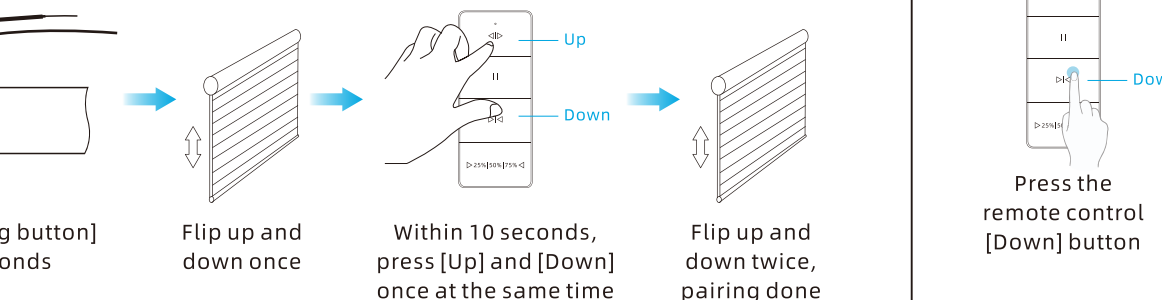

 2. Motor Pair to 6-channel Remote

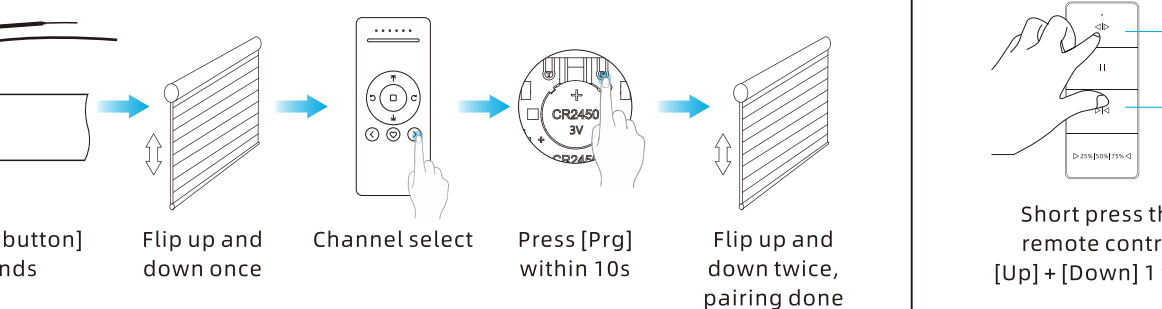

Set the Limit

 
Note:

① Upper and lower limit points can't be set in the same position.


② When the limits are not set, short press the transmitter Up or Down key, the motor will run on point, long press the motor for more than 2 seconds to run continuously.

1. Set by 1-channel remote



1.1 Up limit setting

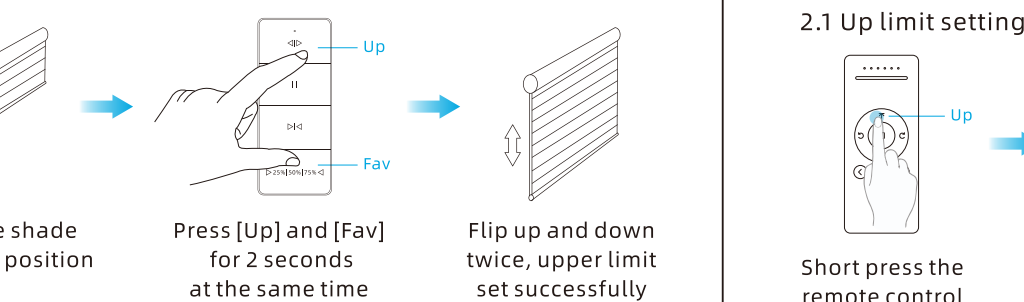

 1.2 Down limit setting

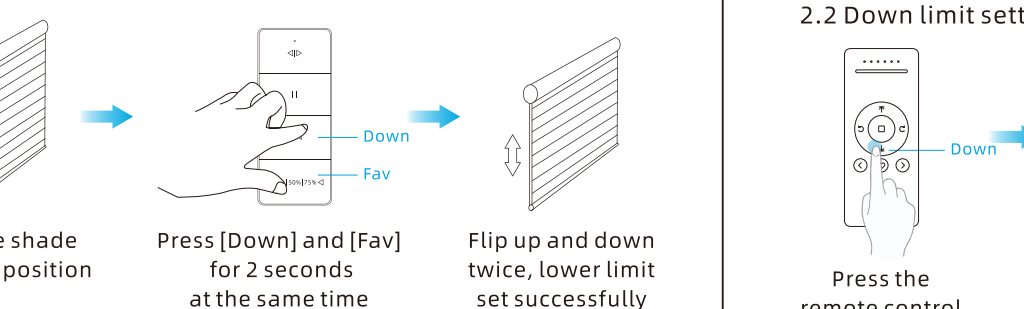


  1.3 Delete limit

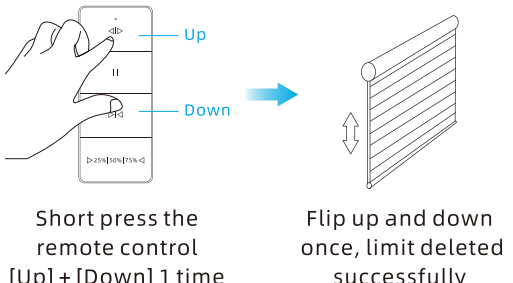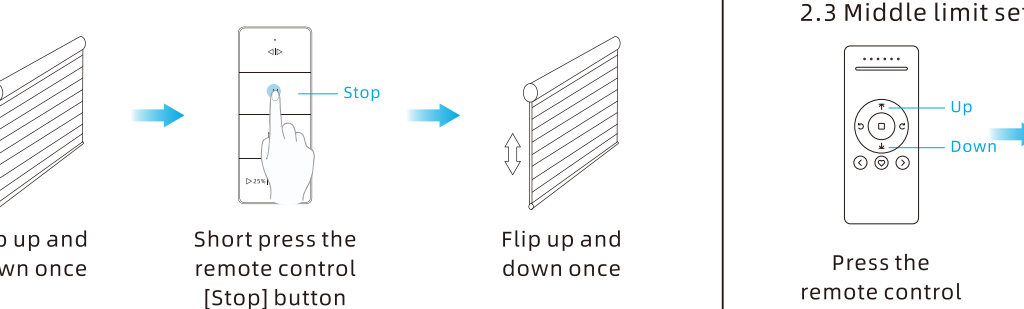


2. Set by 6-channel remote


 
2.1 Up limit setting

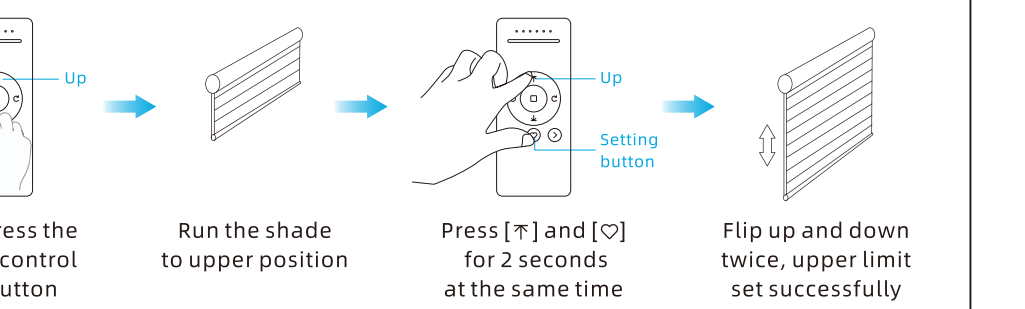

 
2.2 Down limit setting

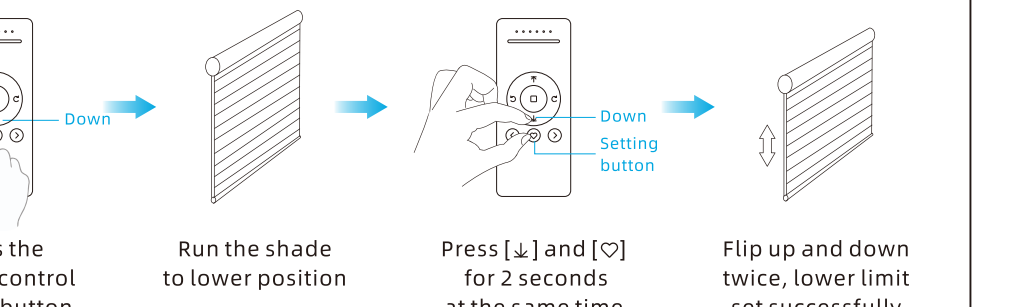

  
2.3 Middle limit setting

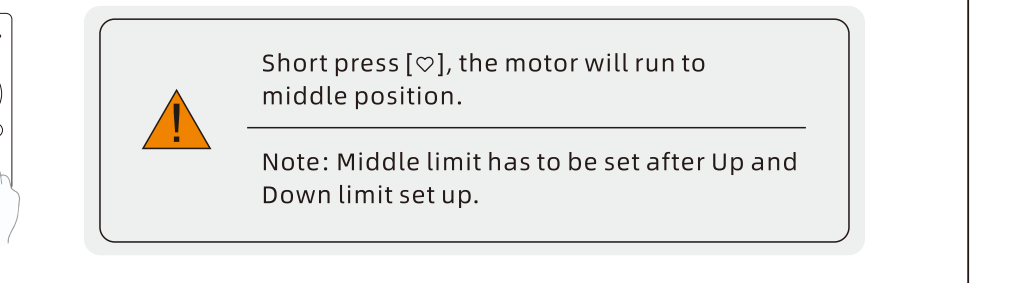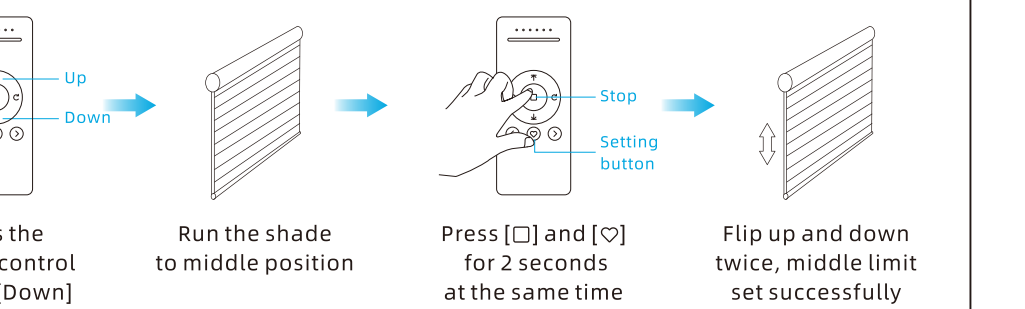

 2.4 Delete middle limit


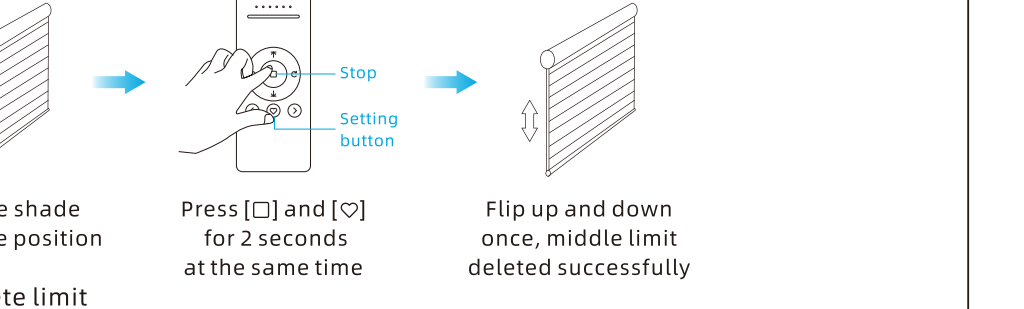


 2.5 Delete limit

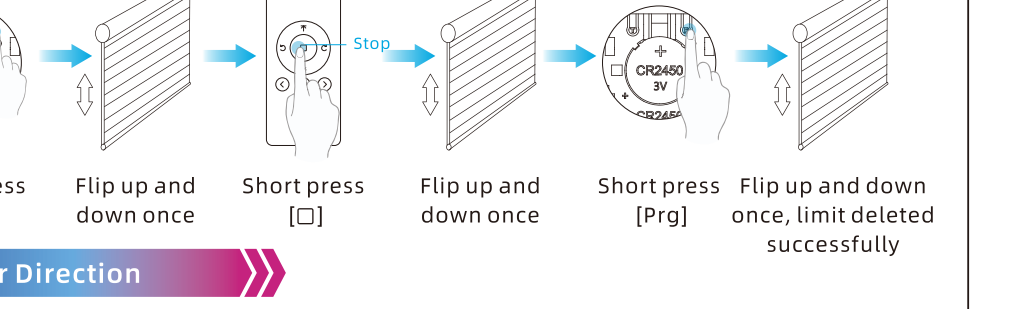

Motor Direction

  1. Set by 1-channel remote

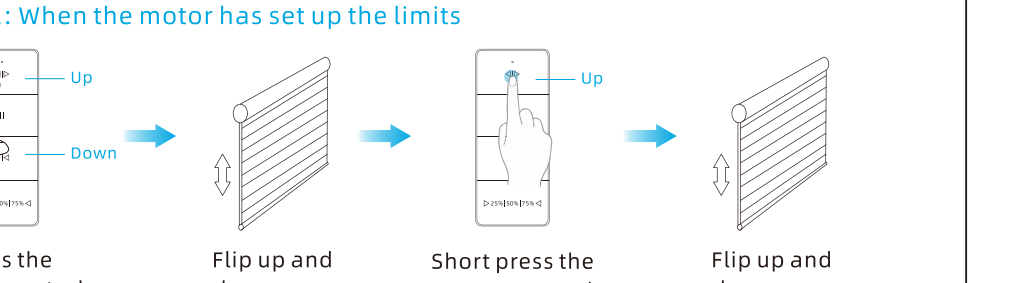
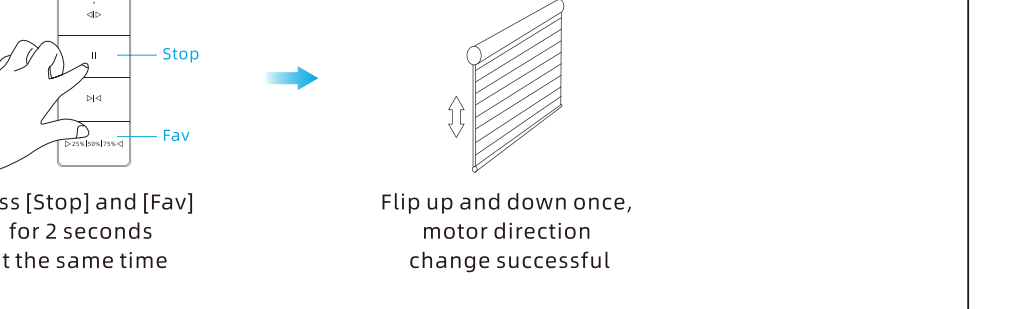


2. Set by 6-channel remote

Method 1: When the motor hasn't set up the limits




  Method 2: When the motor has set up the limits

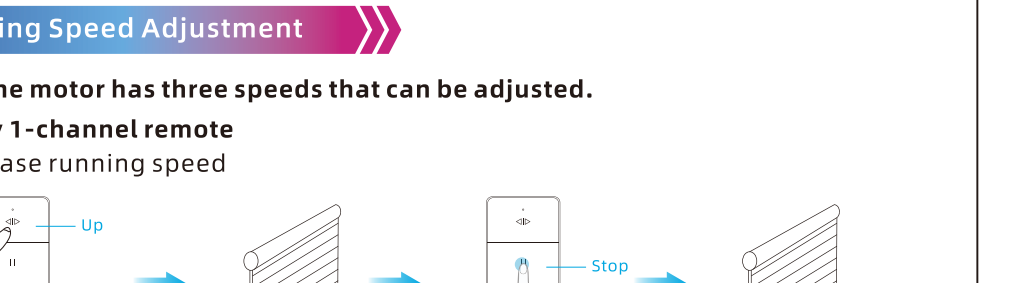
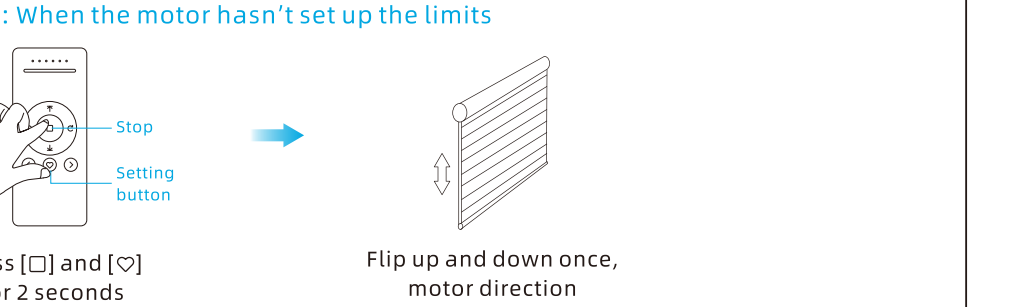


2. Set by 6-channel remote

 Method 1: When the motor hasn't set up the limits

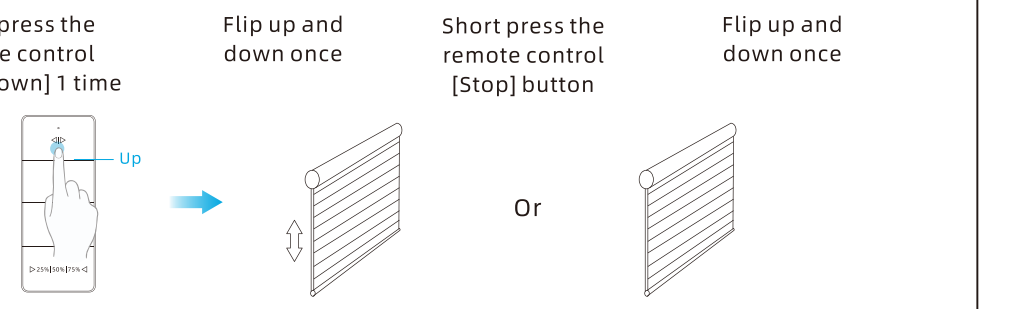


Method 2: When the motor has set up the limits

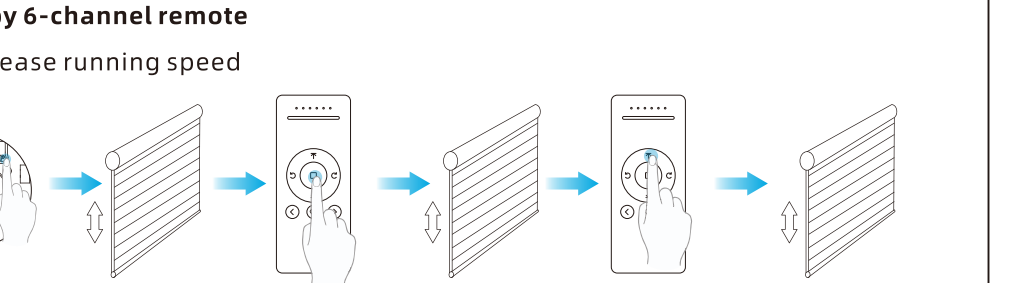 
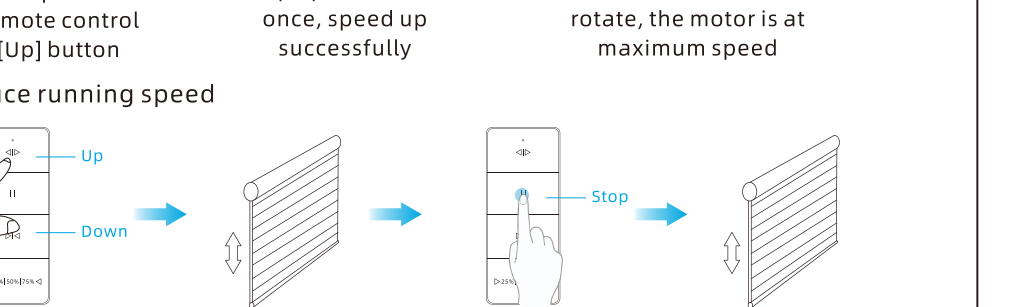 


2. Set by 6-channel remote

 Method 1: When the motor hasn't set up the limits

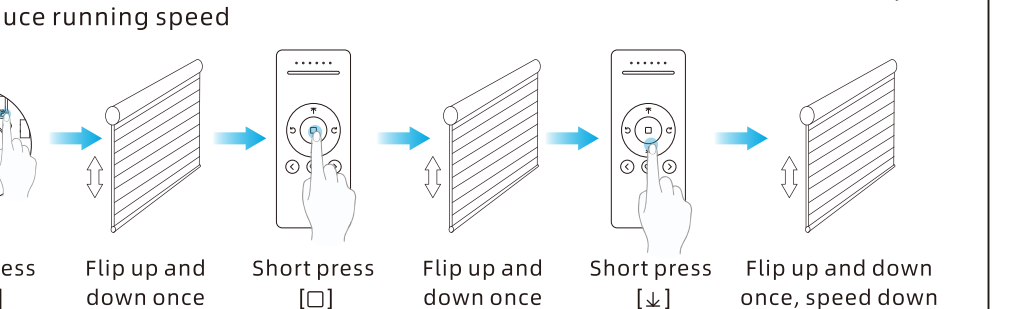


Method 2: When the motor has set up the limits

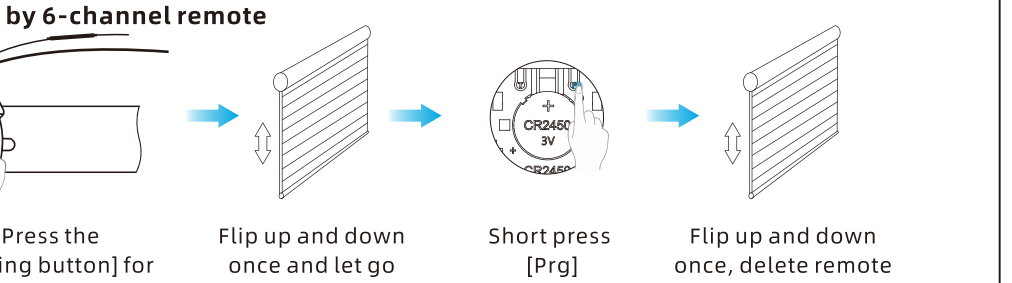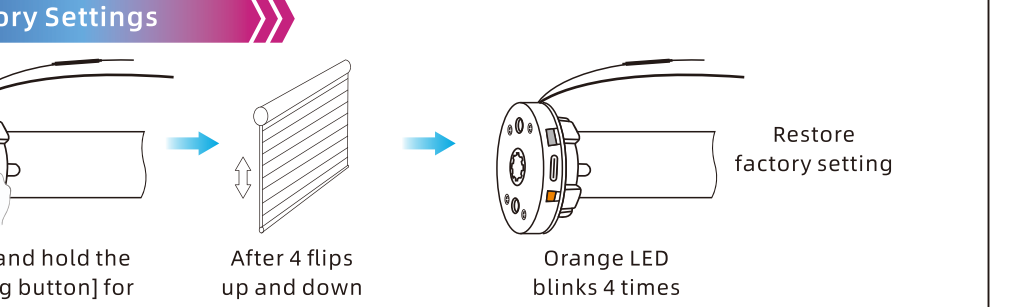  


2. Set by 6-channel remote

 Method 1: When the motor hasn't set up the limits

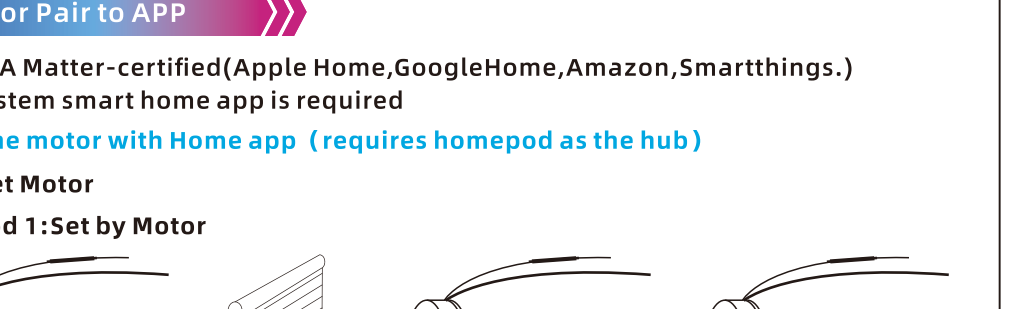


Method 2: When the motor has set up the limits

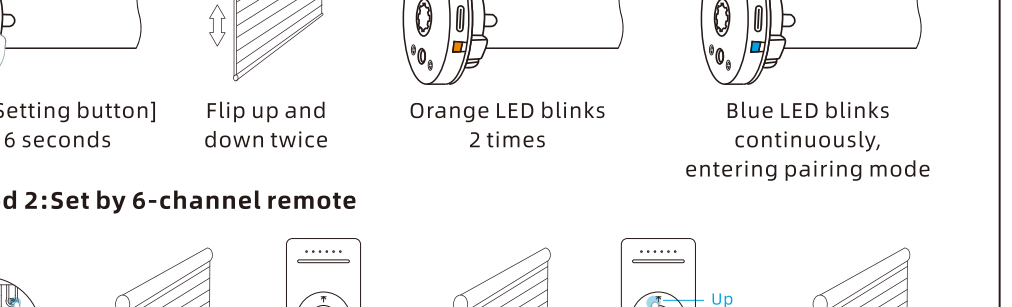 


2. Set by 6-channel remote

 Method 1: When the motor hasn't set up the limits

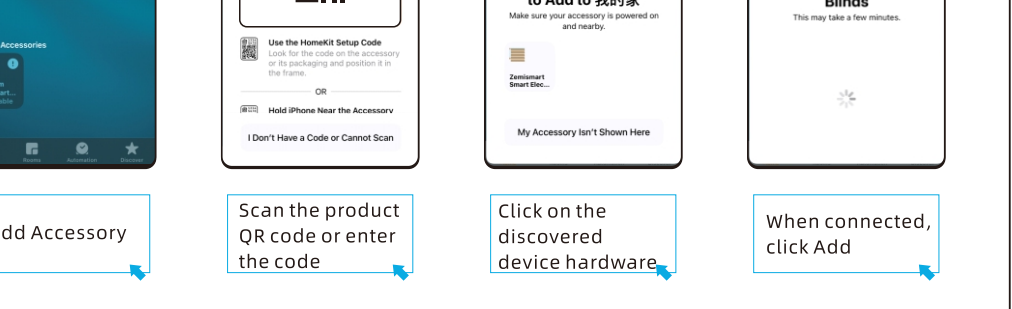

Method 2: When the motor has set up the limits

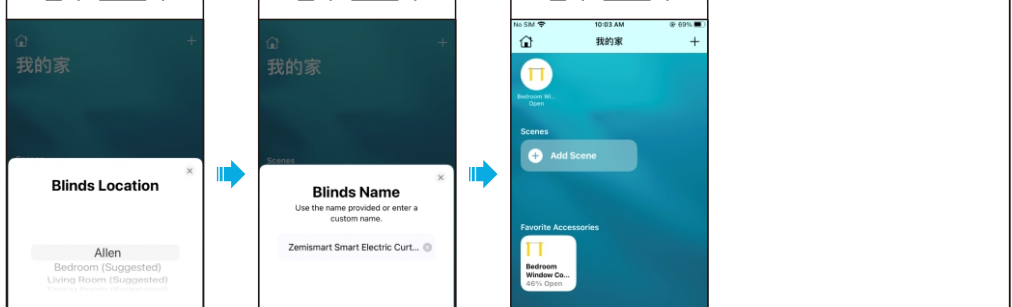 

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Note: Setup processes may vary between ecosystems.

⚠ You must use the remote control to set the motor limit before you can control it in the app.