



MKE 100 User Manual

Manual del Usuario MKE 100

Product Specifications:

Operating Voltage: 3.7V	Product Net Weight: 732±30 grams
Lithium Battery Capacity: 4000mAh	Cable: 3.8*1800mm Black Braided Cable
Power Consumption: 280mA MAX	Number of Keys: 81 Keys
Product Dimensions: 329.54*139.92*48.54±1mm	Compatible Systems: Windows, Mac

Product Special Features:

- Light Effect**
When the white cursor is displayed below the "Light Effect" text, press FN+Enter to access 20 different lighting effects: Press FN+Right Arrow key to move the white cursor to the desired lighting effect.The keyboard backlight will display the corresponding lighting effect.Press FN+Enter key to fix the keyboard backlight to the selected lighting effect.
- Light Brightness**
When the white cursor is displayed below the "Light Brightness" text, press FN+Enter key to access the light brightness adjustment icon: Press FN+Right Arrow key to increase backlight brightness.
There are 5 levels to choose from: 0%~20%-40%-60%-80%-100%; Press FN+Left Arrow key to decrease backlight brightness.
There are 5 levels to choose from: 100%-80%-60%-40%-20%-0%. Once the brightness level is selected, press FN+Enter key to fix the backlight brightness to the corresponding level.
- Light Rate**
When the white cursor is displayed below the "Light Rate" text, press FN+Enter key to access the light rate adjustment icon: Press FN+Right Arrow key to increase the backlight change speed.
There are 5 levels to choose from: 0%-20%-40%-60%-80%-100%; Press FN+Left Arrow key to decrease the backlight change speed.
There are 5 levels to choose from: 0%-20%-40%-60%-80%-100%; Once the speed level is selected, press FN+Enter key to fix the backlight change speed to the corresponding level.
- Volume Adjustment**
When the white cursor is displayed below the "Volume Adjustment" text, press FN+Enter key to access the volume adjustment icon: Press FN+Right Arrow key to increase the volume; Press FN+Left Arrow key to decrease the volume; Once the volume is selected, press FN+Enter key to fix the volume to the corresponding level.
- Language**
When the white cursor is displayed below the "Language Selection" text, press FN+Enter key to access the language selection icon: Press FN+Right Arrow key to choose between Chinese or English.
1)When the white cursor is displayed below the "中文" (Chinese) text, the display language is set to Chinese. Press FN+Enter key to fix the display language to Chinese.
2)When the white cursor is displayed below the "English" text, the display language is set to English. Press FN+Enter key to fix the display language to English.
- Connection Method:**
 - Cable Connection**
 - 2.4G Receiver**
2.4G re-pairing
When the switch is set to the 2.4G mode, the Q key's light flashes slowly in white. Press FN+Q combination key for 3 seconds to enter pairing mode, the Q key's light flashes quickly in white. Insert the receiver, and after successful pairing, exit the pairing mode. The Q key's light returns to the backlight mode. If no paired device is found, exit the pairing mode after 20 seconds, and the Q key's light flashes slowly, indicating waiting for pairing. If there is no pairing action, the keyboard will enter sleep mode after 7 seconds.
 - Bluetooth**
When the switch is set to the Bluetooth mode, long press FN+W/E/R combination keys for 3 seconds, the keyboard enters pairing mode, and the corresponding keys' white lights flash quickly. Start connecting to the Bluetooth device. After connecting to the device, the corresponding keys' lights return to the backlight mode. If the device is not connected, the backlight will turn off after 7 seconds, and the keyboard will enter sleep mode.
- FCC STATEMENT:**
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.

Warning:
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.**RF warning statement:**
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Warranty Terms:

- This warranty is applicable to the original purchaser and is non-transferable.
- A proof of purchase (receipt or invoice) must be provided to make a warranty claim.
- This warranty covers manufacturing defects and failures occurring under normal and expected use of the mouse. It does not cover damage resulting from accidents, misuse, improper use, neglect, unauthorized modifications, or unauthorized repairs.

Contact Information:

For warranty claims and inquiries, please contact:

Company Name: MKETech Inc.
Address: 2000 South Grove Avenue, Suite 109, Ontario, CA, USA 91761
Phone: (909)-850-4601
Email: info@MKETEchelectronics.com

Diagram illustrating the back of the HP EliteBook 840 G1, showing the location of various ports and components:

- MAC**: Points to the MAC address label.
- BT**: Points to the Bluetooth module.
- USB**: Points to the USB port.
- Receptor 2.4G**: Points to the 2.4 GHz antenna.
- Windows**: Points to the Windows logo.
- 2.4G**: Points to the 2.4 GHz antenna.

Voltaje de Operación: 3.7V
Capacidad de la Batería de Litio: 4000mAh
Consumo de Energía: 280mA MAX
Dimensiones del Producto: 329.54*139.92*48.54±1mm
Peso Neto del Producto: 732±30 gramos
Cable: Cable Trenzado Negro de 3.8*1800mm
Número de Teclas: 81 Teclas
Sistemas Compatibles: Windows, Mac

1. Efecto de Luz

Quando el cursor blanco se muestra debajo del texto "Color de Luz", presiona FN+Enter para acceder a 9 colores de iluminación diferentes: Presiona la tecla FN+Derecha para mover el cursor blanco al color de iluminación deseado. El teclado retroiluminado mostrará el color de iluminación correspondiente. Presiona la tecla FN+Enter para fijar la retroiluminación del teclado al color de iluminación seleccionado.

Cuando el cursor blanco se muestra debajo del texto "Brillo de Luz", presiona FN+Enter para acceder al icono de ajuste de brillo de luz: Presiona la tecla FN+Derecha para aumentar el brillo de la retroiluminación.

Hay 5 niveles para elegir: 0%-20%-40%-60%-80%-100%;

Presiona la tecla FN+Izquierda para disminuir el brillo de la retroiluminación.

Hay 5 niveles para elegir: 100%-80%-60%-40%-20%-0%.

Una vez seleccionado el nivel de brillo, presiona la tecla FN+Enter para fijar el brillo de la retroiluminación al nivel correspondiente.

Cuando el cursor blanco se muestra debajo del texto "Velocidad de Luz", presiona **FN+Enter** para acceder al icono de ajuste de velocidad de cambio de luz: Presiona la tecla **FN+Derecha** para aumentar la velocidad de cambio de la retroiluminación. Hay 5 niveles para elegir: 0%-20%-40%-60%-80%-100%; Presiona la tecla **FN+Izquierda** para disminuir la velocidad de cambio de la retroiluminación. Hay 5 niveles para elegir: 0%-20%-40%-60%-80%-100%. Una vez seleccionado el nivel de velocidad, presiona la tecla **FN+Enter** para fijar la velocidad de cambio de la retroiluminación al nivel correspondiente.

Quando el cursor blanco se muestra debajo del texto "Ajuste de Volumen", presiona FN+Enter para acceder al icono de ajuste de volumen: Presiona la tecla FN+Derecha para aumentar el volumen; Presiona la tecla FN+Izquierda para disminuir el volumen; Una vez seleccionado el volumen, presiona la tecla FN+Enter para fijar el volumen al nivel correspondiente.

When the white cursor is displayed below the "Light Color" text, press FN+Enter key to access 9 different lighting colors: Press FN+Right Arrow key to move the white cursor to the desired lighting color. The keyboard backlight will display the corresponding lighting color. Press FN+Enter key to fix the keyboard backlight to the selected lighting color.

When the white cursor is displayed below the "Light Brightness" text, press FN+Enter key to access the light brightness adjustment icon: Press FN+Right Arrow key to increase backlight brightness.

There are 5 levels to choose from: 0%–20%–40%–60%–80%–100%; Press FN+Left Arrow key to decrease backlight brightness.

There are 5 levels to choose from: 100%–80%–60%–40%–20%–0%.

Once the brightness level is selected, press FN+Enter key to fix the backlight brightness to the corresponding level.

When the white cursor is displayed below the "Light Rate" text, press FN+Enter key to access the light rate adjustment icon: Press FN+Right Arrow key to increase the backlight change speed.

There are 5 levels to choose from: 0%-20%-40%-60%-80%-100%; Press FN+Left Arrow key to decrease the backlight change speed.

There are 5 levels to choose from: 0%-20%-40%-60%-80%-100%; Once the speed level is selected, press FN+Enter key to fix the backlight change speed to the corresponding level.

When the white cursor is displayed below the "Volume Adjustment" text, press FN+Enter key to access the volume adjustment icon: Press FN+Right Arrow key to increase the volume; Press FN+Left Arrow key to decrease the volume; Once the volume is selected, press FN+Enter key to fix the volume to the corresponding level.

Cuando el cursor blanco se muestra debajo del texto "Selección de Idioma", presiona **FN+Enter** para acceder al icono de selección de Idioma: Presiona la tecla **FN+Derecha** para elegir entre chino o inglés.

- 1) Cuando el cursor blanco se muestra debajo del texto "中文" (chino), el idioma de visualización se establece en chino. Presiona la tecla **FN+Enter** para fijar el idioma de visualización en chino.
- 2) Cuando el cursor blanco se muestra debajo del texto "English" (inglés), el idioma de visualización se establece en inglés. Presiona la tecla **FN+Enter** para fijar el idioma de visualización en inglés.

Sistema MAC		Sistema WIN	
Función	Hot Key	Hot Key	Función
Brillo Abajo	FN +	FN +	Brillo Abajo
Brillo Arriba	FN +	FN +	Brillo Arriba
Control de Tareas Abierto	FN +	FN +	Ver Tareas
Abrir Panel de Inicio	FN +	FN +	Abrir "Mi PC"
Búsqueda con Pulsación Corta; Siri con Pulsación Larga	FN +	FN +	Búsqueda
Captura de Pantalla	FN +	FN +	Captura de Pantalla
Canción Anterior	FN +	FN +	Canción Anterior
Reproducir/Pausa	FN +	FN +	Reproducir/Pausa
Siguiente Canción	FN +	FN +	Siguiente Canción
Silenciar	FN +	FN +	Silenciar
Subir Volumen	FN +	FN +	Subir Volumen
Bajar Volumen	FN +	FN +	Bajar Volumen

When the white cursor is displayed below the "Language Selection" text, press FN+Enter key to access the language selection icon: Press FN+Right Arrow key to choose between Chinese or English.

- 1) When the white cursor is displayed below the "中文" (Chinese) text, the display language is set to Chinese. Press FN+Enter key to fix the display language to Chinese.
- 2) When the white cursor is displayed below the "English" text, the display language is set to English. Press FN+Enter key to fix the display language to English.

MAC System		WIN System	
Function	Hot Key	Hot Key	Function
Brightness Down	FN +	FN +	Brightness Down
Brightness Up	FN +	FN +	Brightness Up
Open Task Control	FN +	FN +	Task View
Open Startup Board	FN +	FN +	Open "My PC"
Short Press For Search; Long Press For Siri	FN +	FN +	Search
Screen Shot	FN +	FN +	Screen Shot
Previous Song	FN +	FN +	Previous Song
Play/Pause	FN +	FN +	Play/Pause
New Song	FN +	FN +	New Song
Mute	FN +	FN +	Mute
Volume Up	FN +	FN +	Volume Up
Volume Down	FN +	FN +	Volume Down

1. Cable Connection

2. 2.4G Receiver

1) 2.4G re-pairing

When the switch is set to the 2.4G mode, the Q key's light flashes slowly in white. Press FN+Q combination key for 3 seconds to enter pairing mode, the Q key's light flashes quickly in white. Insert the receiver, and after successful pairing, exit the pairing mode. The Q key's light returns to the backlight mode. If no paired device is found, exit the pairing mode after 20 seconds, and the Q key's light flashes slowly, indicating waiting for pairing. If there is no pairing action, the keyboard will enter sleep mode after 7 seconds.

3. Bluetooth

When the switch is set to the Bluetooth mode, long press FN+W/E/R combination keys for 3 seconds, the keyboard enters pairing mode, and the corresponding keys' white lights flash quickly. Start connecting to the Bluetooth device. After connecting to the device, the corresponding keys' lights return to the backlight mode. If the device is not connected, the backlight will turn off after 7 seconds, and the keyboard will enter sleep mode.

Technical drawings of the HP LaserJet 1020 printer components. The top row shows the front view of the printer body and the top view of the keyboard. The bottom row shows the top view of the printer body and the front view of the keyboard. Dimensions are provided for the printer body: 465.44 mm for the width and 188.26 mm for the depth. The number 5 is centered below the drawings.

Agadecemos su compra y nos enorgullece la calidad de nuestros productos. La garantía de productos de MKETech Electronics no cubre ningún dispositivo o producto que no haya sido fabricado por MKETech Electronics (incluyendo, pero no limitándose a, computadoras portátiles, teléfonos inteligentes, dispositivos o cualquier otro producto que pueda utilizarse junto con el producto de MKETech Electronics).

MKETech Electronics garantiza al comprador original que sus productos estarán libres de defectos en materiales y mano de obra durante el periodo de garantía especificado y se mantendrán en condiciones similares a nuevas mientras el comprador original sea dueño del producto. El periodo de garantía se indica en el empaque del producto de MKETech Electronics o en la documentación proporcionada.

La Garantía de Producto Limitada de MKETech Electronics excluye los daños causados por accidentes, uso indebido, uso inadecuado, negligencia, desgaste normal, transferencia de propiedad o modificaciones no autorizadas.

1. Esta garantía es válida solo para el comprador original y no es transferible.
2. Debe proporcionarse un comprobante de compra (recibo o factura) para presentar un reclamo de garantía.
3. Esta garantía cubre defectos de fabricación y fallas que ocurran durante el uso normal y esperado del ratón. No cubre daños resultantes de accidentes, uso indebido, uso inadecuado, negligencia, modificaciones no autorizadas o reparaciones no autorizadas.

Para reclamos y consultas de garantía, comuníquese con:

Nombre de la empresa: MKETech Inc.
Dirección: 2000 South Grove Avenue, Suite 109, Ontario,
Teléfono: (909)-850-4601
Correo electrónico: info@MKETechelectronics.com

Thank you for your purchase, and we take pride in the quality of our products. MKE TECH Electronics product warranty does not cover any device or product that is not manufactured by MKE TECH Electronics (including, but not limited to laptops, smartphones, devices, or any other product that may be used in conjunction with the MKE TECH Electronics product).

MKE TECH Electronics warrants to the original purchaser that its products are free from defects in materials and workmanship during the specified warranty period and will remain in like-new condition for as long as the original purchaser owns the product. The warranty period is indicated on the MKE TECH Electronics product's packaging or in the provided documentation.

MKE TECH Electronics Limited Product Warranty excludes damage caused by accidents, misuse, improper use, neglect, unauthorized modifications, ownership transfer, or unauthorized repairs.

1. This warranty is applicable to the original purchaser and is non-transferable.
2. A proof of purchase (receipt or invoice) must be provided to make a warranty claim.
3. This warranty covers manufacturing defects and failures occurring under normal and expected use of the mouse. It does not cover damage resulting from accidents, misuse, improper use, neglect, unauthorized modifications, or unauthorized repairs.

For warranty claims and inquiries, please contact:
Company Name: MKETech Inc.
Address: 2000 South Grove Avenue, Suite 109, Or
Phone: (909)-850-4601
Email: info@MKETechelectronics.com

FCC STATEMENT:
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.

void the user's authority to operate the equipment.

pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

The device has been evaluated to meet general use exposure requirements. The device can be used in portable exposure condition without restriction.

10

11

12

13

14