



## User Manna

 
使用说明

## Contents

Charging bin leather case X 1

Earphone (Pair) X 1    Charging Bin X 1

Charging Cable X 1    Earphone Buds (Pair) X 5

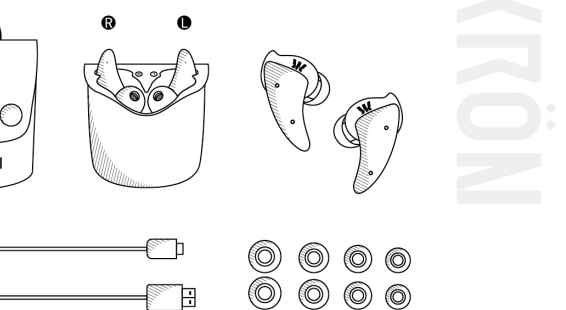

**CAUTION:**  
Risk of explosion if the battery is replaced by an incorrect type; disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion; leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas; a battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

## Start Guide

### Touch Control

 
 
Press here to hear a notification

### Status Indicator

LED is constantly on when charging  
LED is off when fully charged  
Low Battery Notify four times

### Power ON/OFF

Activate: Remove the insulation films and put both earphones back into the charging case  
Charge: Earphones will power off automatically and start charging when put back into the charging case  
Manual Power Off: Hold both touch controls for 3 seconds  
Manual Power On: Hold both touch controls for 3 seconds and then press twice

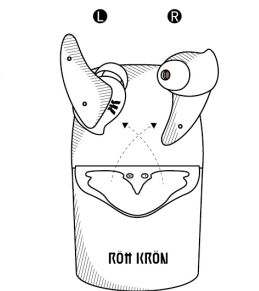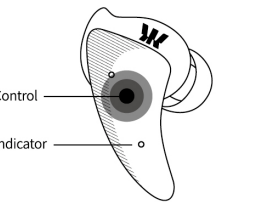

### Bluetooth Pairing

Take both earphones out and search for the Bluetooth device. Start to pair “Rött KRÖN”  
A notification will be heard when the Bluetooth is paired successfully  
A notification will be heard when the Bluetooth is disconnected  
Earphones will power off automatically if the Bluetooth is disconnected for 3 minutes. Please put both earphones back into the charging case to restart.

### Versatile Tool

### Play Music

Double press either side to pause or play music  
Press the left touch control once to volume down  
Press the right touch control once to volume up  
Hold the right touch control for 1.5 seconds to play the next song  
Hold the left touch control for 1.5 seconds to play the previous song



\* Active noise reduction  
\* Ceramic noise reduction  
\* Call noise reduction

### Switch Modes

ANC is off by default at powering on  
Press either touch control thrice to switch between three modes:  
1.ANC ON 2.Transparency Mode 3.ANC OFF

### Handle Calls

Double press the left/right side to answer/end a call  
Hold either touch control for 2 seconds to reject a call  
ENC is automatically turned on during a call

 
### Launch Cellphone Assistant

Press either touch control four times to launch the cellphone assistant

### Warning


### Monaural Mode

If you only use one earphone, please turn off the other manually or put it back into the charging case

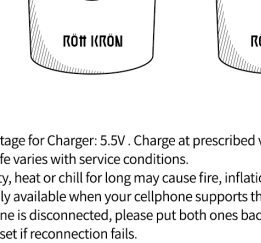


### Factory Reset

 1. Take out both earphones and hold the two touch control simultaneously for 3 seconds till LED flashes  
2. Wait for 3 seconds and then hold the touch control simultaneously for 6 seconds till LED is constantly on  
3. When LED is constantly on, press the touch control simultaneously thrice; when LED flashes, the earphones are reset successfully

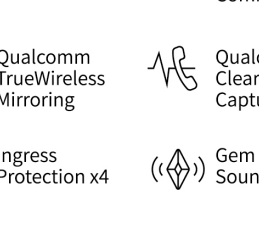

### Series Lagom [PolyCera™]

 10mm Customized graphene HIFI dynamic Driver  
Play duration of earphone with charging case is about 30 hours

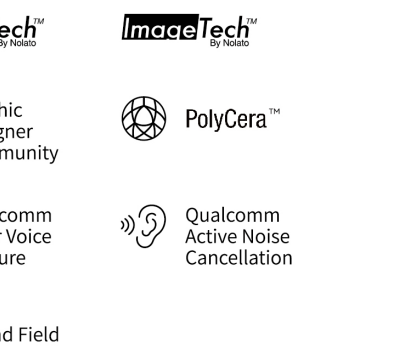

### FCC Regulatory Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.  
changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.  
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.  
If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
-- Reorient or relocate the receiving antenna.  
-- Increase the separation between the equipment and receiver.  
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
-- Consult the dealer or an experienced radio/TV technician for help.

### FCC SAR statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End user must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.  
The portable device is designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (USA). These requirements set a SAR limit of 1.6 W/kg averaged over one gram of tissue. The highest SAR value reported under this standard during product certification for use when properly worn on the head

### FCC ID: 2BDZ6T302

Rött KRÖN app @  
Download on the App Store  
GET IT ON Google Play  
下载「Rött KRÖN」app请至手机应用市场 / 腾讯应用宝 / 百度助手

