

REMOTE USE:

 
Toy must be turned ON for remote to connect-



Press button on remote to power ON. -



Press the button to quickly swap between tapping Speeds.



- Press and HOLD the button swap between thrusting Speeds.

clean and Care:

For longevity, we recommend a water-based lubricant. Wash after each use with warm water and toy cleaner. Dry before storing in a cool, dry location. Keep out of direct sunlight and separated from other toys. Charging:

There is a small pinhole on the side of the base. Push the charging pin into the base, then connect to a USB port or adaptor. Power light will flash while charging and stays lit once fully charged. Remove from charger once fully charged.

specifications:

- Material: silicone + ABS
 - 12 thrusting modes
 - 12 tapping modes
 - IPX7 Waterproof
 - Rechargeable toy & remote control (USB cable included)
 - Battery type: Lithium
 - Battery capacity: 3.7 Wh, 1000 mAh (toy), 0.185 Wh, 50 mAh (remote)
 - Input voltage: 5V DC
 - Input current: max 1A (toy), 0.11A (remote)
 - Output voltage: 3.7V DC
 - Output current: 1A
 - Charging time: max 2h30 (toy), 30min (remote)
 - Running time: 1h (toy), 40min (remote)
 - Radiofrequency used: 433.92 MHz
- Charge your toy for 2h30 and your remote for 30min to reach their maximum charge capacity.



FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.