 


ACTION CAMERA

USER MANUAL

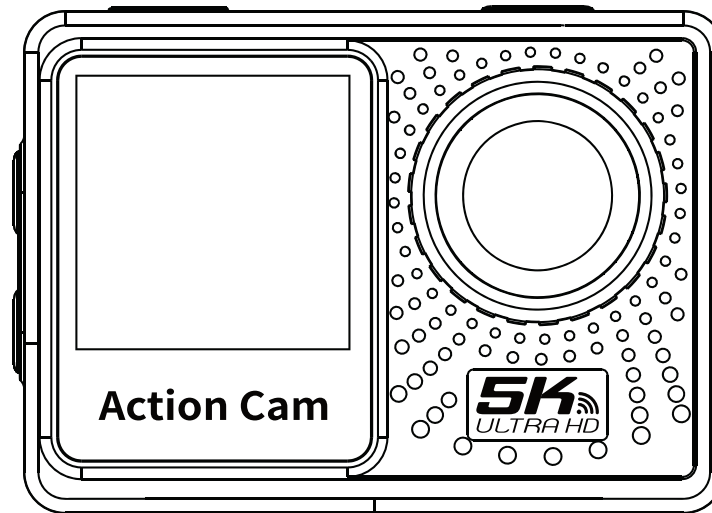

Operation note

1. This product is high precision products, do not fall or impact.
2. Please don't close to the camera with strong magnetic objects, such as magnets and motors, in addition to avoid the product near the issue of strong radio waves of objects, strong magnetic field may can cause product failure, or destroy images and sound.
3. Please don't place the camera at a higher temperature or direct sunlight.
4. Please choose the brand TF card, ordinary card can not guarantee normal use.
5. Please don't store the TF card in or near the strong magnetic place to avoid missing TF card storage data.
6. Charging process, if overheating, smoke, or smell, please pull out the power immediately, stop charging to avoid fire.
7. Please put the product out of reach of children when charging, power line may cause a child's accidental suffocation or shock
8. Please send the product in a cool, dry place and the vast dust.

Foreword

This sport camera is a High-end HD camera product which could meet the customer's needs , with powerful function for take HD videos, photos, Slow motion, voice recording, video display, and changeable battery, it's the best choice for outdoor sports photography, home security monitoring, waterproof photography, you can record your life whenever and wherever you want.

Multipurpose



Car recorder



Outdoor sports



Marine Sports

 


Diving



Product Feature



- > Provide waterproof function waterproof shell, convenient for you to shoot wonderful water sports, waterproof shell can be deep waterproof 30 meters
- > Video resolution Max 5K @30fps
- > Wide-angle 170°
- > 24MP HD Lens
- > Low power consumption, the WiFi opened 90 minutes available
- > Ultra HD 2"+1.3" display screen, display and replay video shot
- > Changeable battery, easy to replace, prolong the service life
- > Charging function while recording
- > Supports up to 512GB memory card
- > Multiple video recording formats 5K, 4K, 2.7K, 1080P, 720P
- > MP4 video format
- > JPG photo format
- > Photo modes: Photo, Auto, Burst, Timer
- > Video modes: Video, Slowly, Loop, Lapse

Function introduction

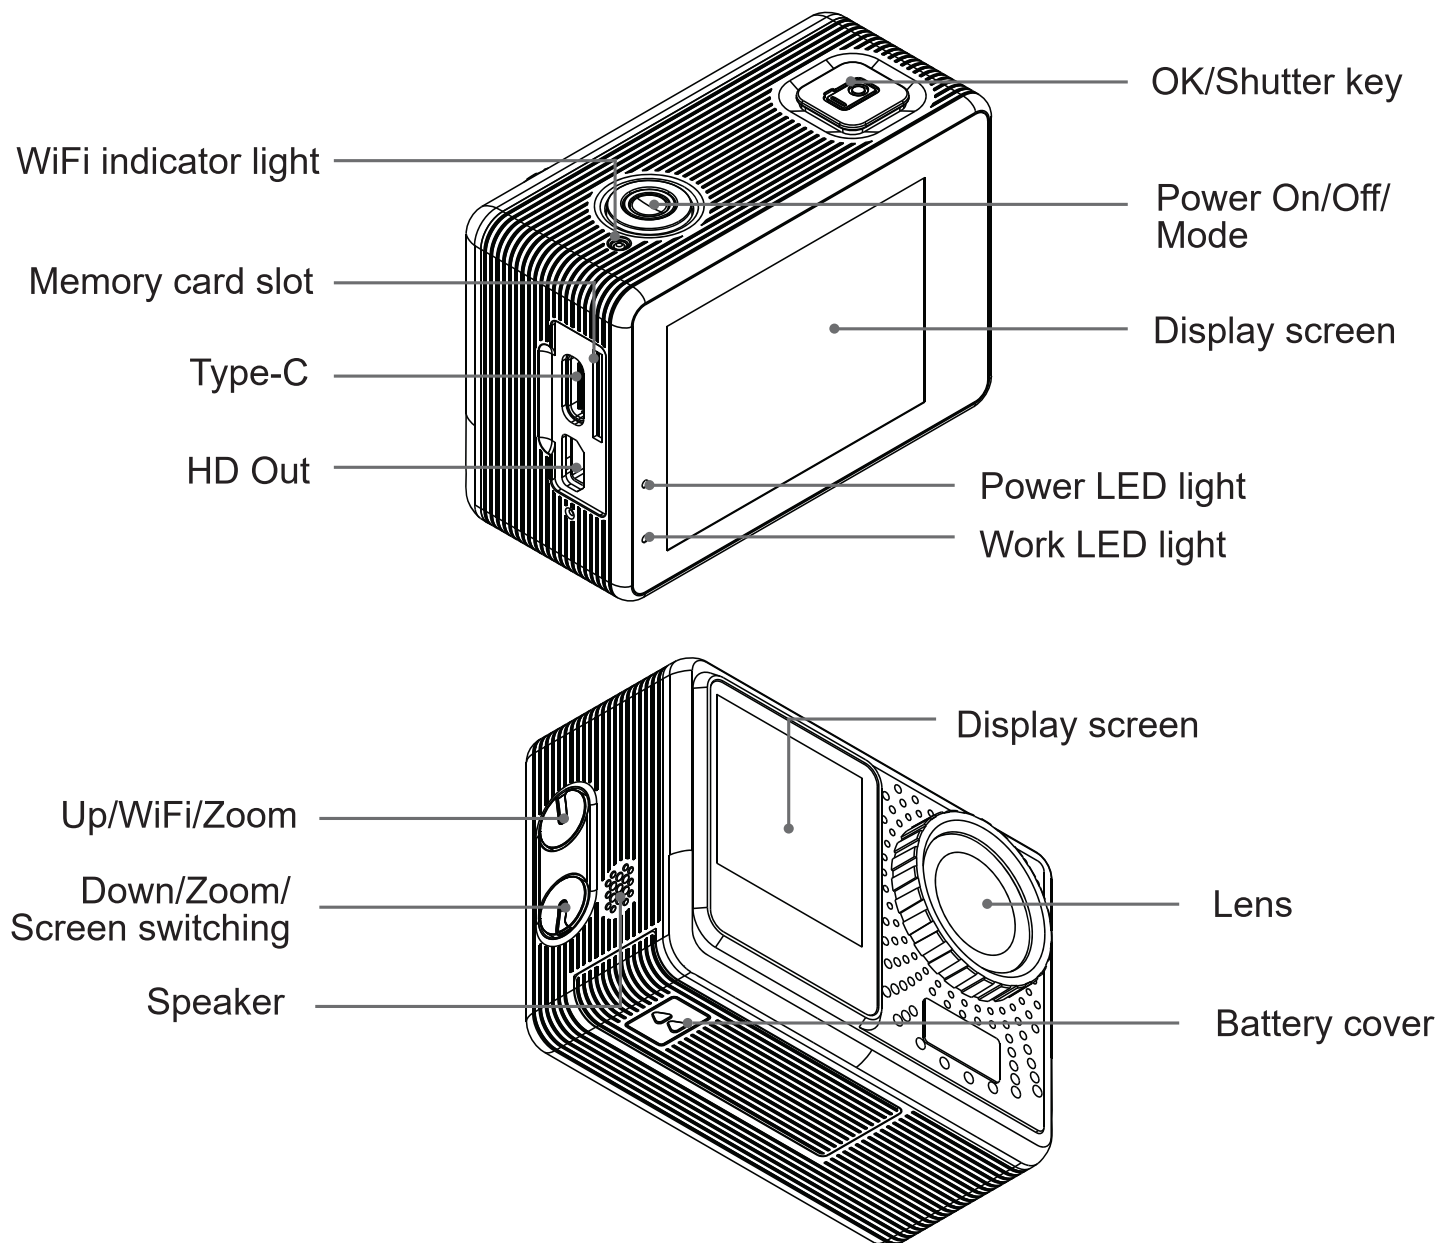

Open guidance

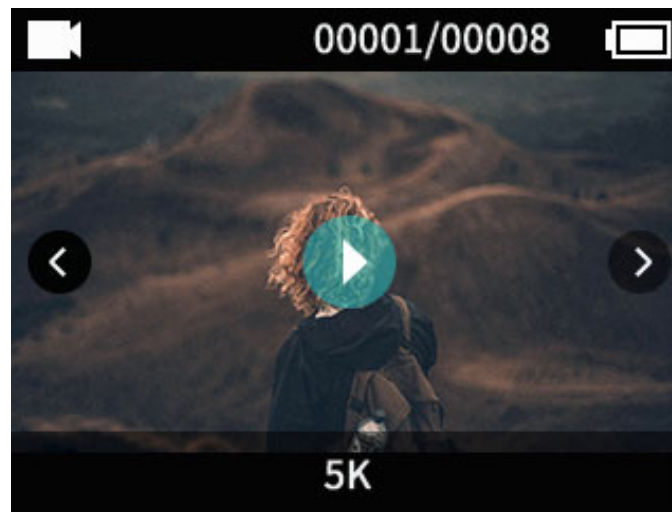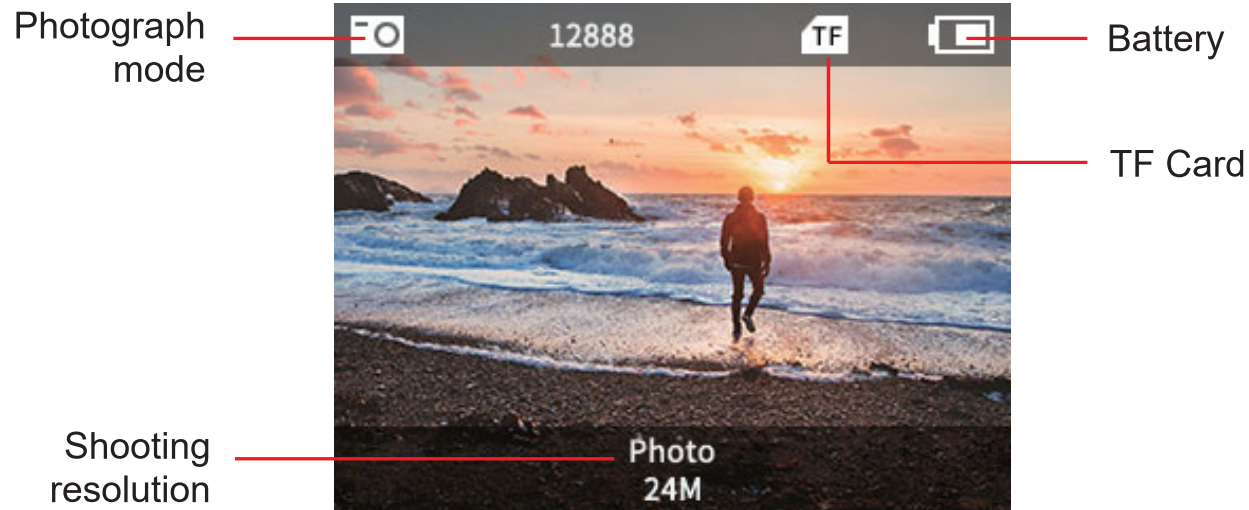  

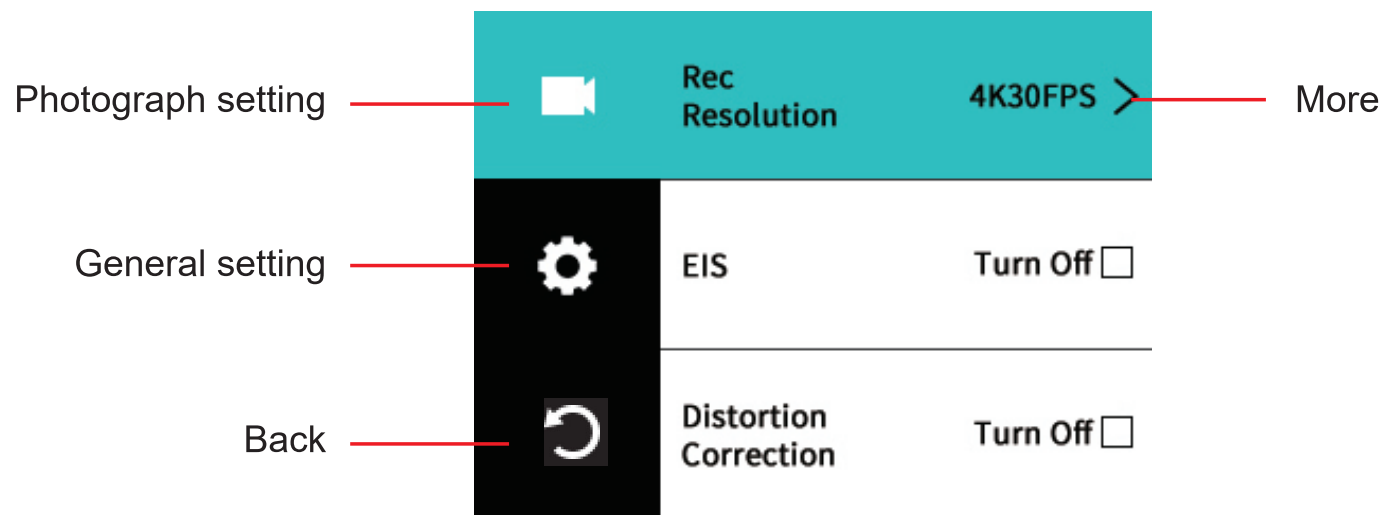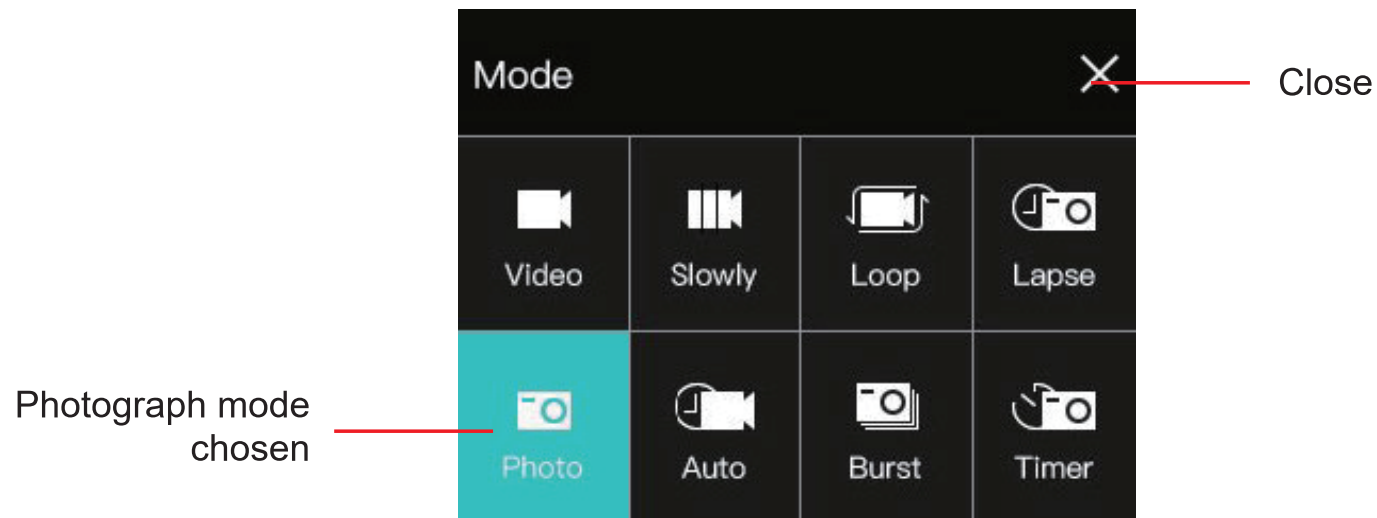  

Accessories



camera



waterproof case



remote control



back clip



switch support



pedestal



bicycle bracket



fixed base



commutator



helmet pedestal



bandage



wire cable + ribbon



3M mat



manual



data cable

Assembly diagram



Use operation instructions

1. Insert TF card

Note: Please select the brand TF card, formatted on the computer and then use, ordinary neutral card can not guarantee the normal use of work.

2. Install and remove the battery

- A. Pull the cover down can open the battery cover.
- B. According the battery marked positive and negative symbols and arrows indicate direction, the correct battery into the camera until the installation is in place.
- C. Battery power indicator: please refer to the icon.
- D. Remove the battery, removed out of the battery after open battery cover.

3. Battery charging

- A. With USB line connection to computer or power adapter, the camera can be charged.
- B. Can charging while recording.
- C. Shutdown state can also charge.

4. Camera on/off

- A. Long press and hold the boot key 3-5 seconds can turned on / off the camera
- B. Open screen that boot, turn off the screen that is off.

5. Turn WiFi on/off

Turn on WIFI: Long press the UP button to open WiFi.

Turn off WIFI: Short press the UP button to turn off WiFi.

6. Mode conversion(mode)

After booting up, short press on/off key. You can switch between recording/photographing.

7. Indicator light

Work indicator light: Blue light, flashing during operation; After the work is completed, the blue light remains on.

Charging indicator light: Red light, always on during charging, fully charged, red light off.

WiFi indicator light: yellow light, flashes when WIFI is turned on; After connecting to the APP, the yellow light stays on for a long time;

Turn off WIFI, the yellow light goes out.

8. How to set photography and photography options

a. Recording: The camera enters recording mode and presses the confirm button to start recording. At the same time as recording, the  symbol above the screen flashes, and then press the confirm button to stop recording, At the same time, the  sign stops flashing.

Recording mode: Video, Slowly(1080P 4X/1080P 2X/720P 8X/720P 4X), Loop(2 Min/3 Min/5 Min), Lapse(0.5 Sec/1 Sec/2 Sec/ 5 Sec/10 Sec/30 Sec/60 Sec).

b. Turn on the power for the camera and camera settings, enter the mode button to select the camera mode, and when there is a camera icon in the upper left corner of the screen, enter the camera mode at this time, and press the confirm button to take a photo.

Photo mode: Photo, Auto(3 Sec/10 Sec/15 Sec/20 Sec/30 Sec), Burst(3P/s, 5P/s, 10P/s), Timer(3 Sec/5 Sec/10 Sec/20 Sec).

C. Store, play, and delete

After the video recording is completed, use the data cable to copy the recorded video to the computer for playback, or take out the memory card and use the card reader to read the image data in the card.

File deletion: In the file playback interface, long press the OK key to delete a single file.

9. Switch between large and small screens

Long press the Down key to switch between front and rear screens (dual screens cannot be displayed at the same time).

10. WiFi install and use

Before use the WiFi function, please download and install the application “XDV PRO” on your smart phone.

Note: Search “XDV PRO” from app store for IOS; Search “iSmart DV2” from Android Play Store for android.

Steps to connect WiFi.

A. After powering on, long press the up button to open WiFi, and the screen will display "WiFi Information"

B. Open the WiFi on your phone, searching the wif SSID" X17-*****" and connect (the original password is 1234567890):

C. Open “XDV PRO” APP program ,with the APP, you can real-time preview is shooting pictures, remote video, photos, fileplayback / download / delete / share.

D. APP install guide, the phone system requires Android 4.1 and above or IOS7 or above, scan the “XDV PRO” APP two-dimensional code, press the prompts to complete the installation.

Search“XDV PRO”from App Store for IOS

Search“XDV PRO”from Android Play Store for android



Android Play Store



Apple Store

Parameter

LED display screen	2.0+1.3 inch TPS
Lens	170°A+ High resolution wide angle lens
Language optional	Simplified Chinese/Traditional Chinese/English/Japanese/Korean/Russian/ German/French/Italian/Spanish/Portuguese/Thai/Polish, etc
Video encoding resolution	5K 30fps; 4K 60fps/30fps; 2.7K 30fps; 1080P 120fps/60fps/30fps; 720P 240fps/120fps/60fps/30fps;
Video format	MP4
Photo resolution	24MP/16MP/13MP/8MP
Photo mode	Photo, Auto, Burst, Timer
Auto take photos	3 Sec/10 Sec/15 Sec/20 Sec/30 Sec
Burst	3P/s, 5P/s, 10P/s
Timer	3 Sec/5 Sec/10 Sec/20 Sec
Video mode	Video, Slowly, Loop, Lapse
Slowly	1080P 4X/1080P 2X/720P 8X/720P 4X
Loop	2 Min/3 Min/5 Min
Lapse	0.5 Sec/1 Sec/2 Sec/5 Sec/10 Sec/30 Sec/60 Sec
Image Stabilization	Support
Zoom	4x
Storage	TF card up to 512G
Power Frequency	50Hz/60Hz/Auto
USB	TYPE-C
Power	5V 1A
Battery	1050mA
Recording time	5K/90 minutes
Charging time	About 2 hours
Outline dimension	60.9 x 30.5 x 43.5 mm
Weight	66g
Working temperature	-10°C~+55°C
Storage temperature	-20°C~+70°C

Notes: Specifications could be subject to modification due to upgrading or updating.

Please regard the actual product as the standard form.

FCC Warning:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC

Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.