



Scan the QR code to download the APP.
You can control the action camera from your phone.

Action Camera



Warning

- 1. It is a high-precision product, do not fall or crash.
- 2. Do not expose the unit to strong magnetic objects, such as magnet and electrical motor. Avoid strong radio waves. Strong magnetic fields may cause the products breakdown or images and sounds damage.
- 3. Never leave the products exposed to high temperatures and direct sunlight.
- 4. Please choose branded Micro SD card. Neutral cards are not guaranteed to work normally.
- 5. Do not place Micro SD card near strong magnetic objects to avoid data loss.
- 6. In case of overheating, smoke, or unpleasant smell in the process of charging, unplug your device immediately to prevent fire hazard.
- 7. While it is charging, keep the product out of children's reach. Power line may cause children accidental suffocation or electric shock.
- 8. Keep the device in cool, dry and dust-proof places.

Preface

This product is a high-definition digital motion video recording device tailored to market demand. It has a variety of industry-leading features including digital video recording, photos shooting, audio recording, video display and detachable battery, which makes it perfect for vehicle data recording, photo-shooting, outdoor sports, home security, deep-water probing, etc., allowing you to film at anytime, anywhere. And it has variety of patents.



Multipurpose





Product Features


- >A "water-resistant" casing that allows you film fascinating water sports; water-resistant up to 30 meters under water.
- >High definition screen that displays and replays fascinating videos record.
- >Detachable battery that is easy to replace and prolongs your camera's service life.
- >Video recording while charging.
- >Video recording with battery.
- >16-megapixel HD wide-angle lens.
- >HDMI HD output
- >Web camera.
- >Support storage cards up to 32GB maximum.
- >Multiple video recording formats: 1080P/HD/1080P/720P/WGA/VGA
- >Recorded in AVI format.
- >Multiple photo shooting modes: single shot, snapshot.
- >Video encryption enabled.
- >Mini appearance, diversified colors available.
- >Open Wi-Fi button within the menu, it will be more convenient to operate the machine by using a mobile phone.

Picture of Product

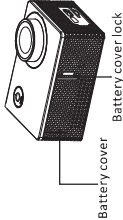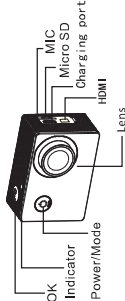  

Picture of Waterproof Case

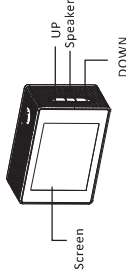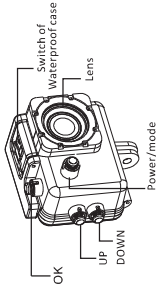  

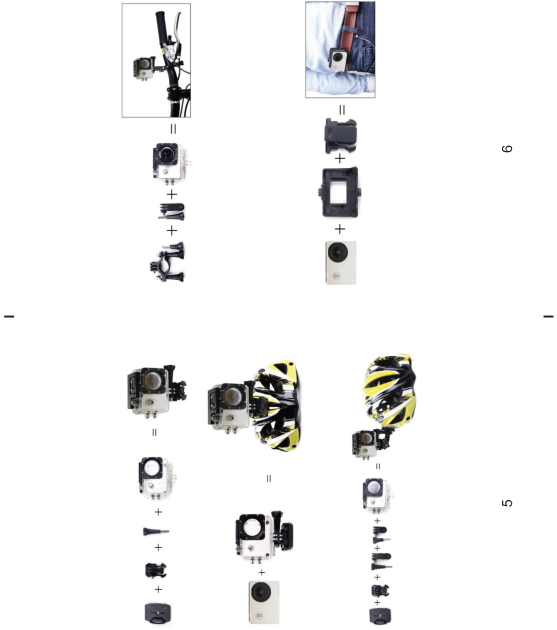 

- 1. Inserting Micro SD cards**
Note: Please choose branded Micro SD card and format it on computer before use. Neutral cards are not guaranteed to work normally.
- 2. Installing and removing batteries**
 - a. Press on battery cap to open it.
 - b. Remove the battery as indicated by +, - symbols and direction of arrow marked on battery until it's in place.
 - c. Battery gauge, please refer to diagram.
 - d. Remove battery, open cap to take battery out.
- 3. Charging**
 - a. Charging can be done by either connecting power adapter to computer or power adapter.
 - b. Charge on vehicle by connecting it to car charger.
 - c. It can record video while charging.
 - d. When it's connected to power and automatically video recording, charging can be a bit slower when you press power switch.
- 4. Switching camera on and off**
Press and hold power switch for 3 to 5 seconds to turn it on/off.
- 5. Mode Switching**
Short press UP button to turn on Wi-Fi.
- 6. How to record videos and configure recording setting**
 - a. Video Recording
Press "Power On/Off" button.
Switch between video recording / photo shooting / playback menu by pressing "Power On/Off" button.
Press "Power On/Off" button to start recording.
Press "OK" to start recording and the REC icon in the upper left corner of screen. Press "OK" to stop recording again if you want to stop.
Resolution of videos recorded: 1080FHD/1080P/720P/WVGA/VGA
Note: The default recording mode is loop. Not enough storage space available for the recording, the later files will overwrite to the earlier ones. Please choose and

- 7. Install and use WIFI**
WiFi connection (for WEI model)
Please download and install "GoPlus Cam" application on your smart phone before starting WiFi function. PS: Android, please download at Google Play (OS, please download at Apple Store the domestic can be downloaded in the mobile phone app store)
Connection steps:
A. When turned UP, press and hold the button appears on the Wi-Fi icon, then the Wi-Fi light shines;
B. Finding out "GoPlus Cam" network on your smart phone, then connecting it by entering the original password 12345678
C. Now you can preview in real time and remote control your camera on your phone, also you can download files from the camera to your phone
Setting Wi-Fi password
You can reset the Wi-Fi password by pressing the Wi-Fi button in the upper left corner of screen. Press and hold the UP button until the "Waiting for Wi-Fi connection..." disappears on the screen
- 8**
- 9**

Lead Crystal Lens	2.1UMS
Lens	24.7mm wide-angle lens
Receiver/Transmitter	1080FHD/1080P/720P/1080P/1440P/1080P
Video Format	M4
Resolution/Frame	1080P/24.7UMS/30FPS/24.7UMS/30FPS/24.7UMS/30FPS
Storage	MicroSD, Class 10, 16GB-32GB
Shooting Mode	Single Shot, Burst Shot, Self-timer, Interval Shot, Time-lapse, etc.
WiFi Support/Power System	WiFi Support/Power System: 3.7V 500mAh Li-ion battery
Frequency of Global Source	2.4GHz
Frequency of Global Source	2.4GHz
Connectivity	WiFi, Bluetooth
Power Source	Battery
Video Quality	1080P/720P/1080P/1440P/1080P
Operating Time	Approx. 1 hour
Operating Time	Approx. 1 hour
Dimensions	58.3 x 24.7 x 41.1 mm
Accessories	Event scope, camera strap, etc. (not included)
Additional Features	Can be used as a camera
Additional Features	Can be used as a data storage device, SD card, etc.
Additional Features	Can be used as a data storage device, SD card, etc.

Note: Specifications could be subject to modification due to upgrading or updating. Please report the actual product as the standard form.

The device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.

The device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. The device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, if you follow the instructions below, your interference should be minimal.

How to reduce interference:
-Reorient or relocate the receiving antenna.
-Increase the separation between the device and receiver.
-Connect the device into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.