

TRUE WIRELESS EARBUDS

SS-TWS880



**PLEASE READ ALL INSTRUCTIONS CAREFULLY
AND RETAIN FOR FUTURE USE**

Package Contents

- True Wireless Earbuds x 1
- USB charging cable x 1
- Instruction Manual x 1

INSTRUCTIONS FOR USE

Charging Instructions

- The charging case comes with a built in rechargeable battery. Before using it for the first time we recommend you charge the battery 10 minutes. Only use the supplied USB Cord to charge the true wireless earbuds.
- Connect the USB charging cable to a computer USB port and the TPYE-C USB plug to the charging port of the device. The display in the charging case shows the charging level while charging. It takes about 2 hours for the unit to fully charge. The display in the charging case shows "100" when it's fully charged.
- When the battery of the earbuds is low, please put the earbuds into the charging case. When the earbuds are charging, the indication light will steady light. When the earbuds is fully charged, the indicator light is off.

POWER ON

Before using the product, you must charge the battery 10 minutes.

1. Connect the power cable to the “DC 5V” socket then to a USB socket or via an adapter.
2. Once the battery is fully charged (the blue light will turn off) unplug the cable.
3. Take out the earbuds and they will turn on automatically.

WIRELESS AUDIO BT FUNCTION:

1. If the earbud is off, put the earbuds into the charging case, it will turn off automatically
2. Activate the wireless audio function on your device (smartphone, tablet, etc.).
3. Select “**LE503**” from the list of found devices.

HANDS-FREE FUNCTION

Answer call	Press the right or left button once during the incoming call
Hang up	Short press the right or left button once during the call
Reject	Long press the right or left button once during the incoming call
Play/pause music	Press the right or left button once to play or pause music
Previous track	Triple press the left button to play previous song
Next track	Triple press the right button to play next song
Siri&Google	Long press the left or right button
Volume Increase	Double press the right button
Volume Decrease	Double press the left button

Please Note

- Not all mobile phones support all the functions listed above. Please refer to your cell phone's user's manual for further information.
- Certain functions and indication tone maybe vary depending on your mobile phone.

LED indicator

Charging case Indication

LED indicator	Status of the charging case
LED display will flash	Charging
LED will display 100	Charging Completed

Earbuds charging Indication

LED indicator	Status of the true wireless earbuds
Keep White light	Charging

White light off	Charging Completed
-----------------	--------------------

LED Indication

LED indicator	Status of the true wireless earbud
LED flashes white	Pairing mode
The flashes white turn off	The earbuds paired successfully .

Specifications

Bluetooth specification	Bluetooth 5.4
Operating distance	10m
Working time	Up to 20 hours
Charging input voltage	DC 5V
Charging time	About 2 hours
Built-In Battery	200mAh

(Note: Battery life & charging time may vary based on usage & types of devices used.)

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

* RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.