 


MVP

 
User Manual

*Sorry to the changes of our products parameters but without notice.


Quick guide

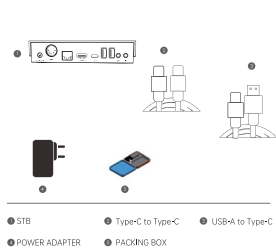

Aevice information

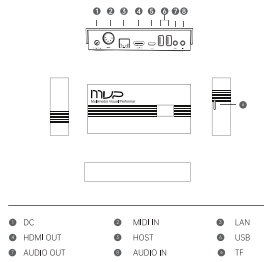

Setup diagram

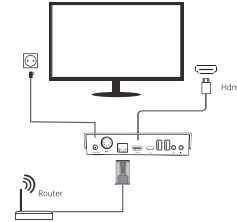 

Switch in the applications

Click "my apps" to view recently used programs, click program icon to switch Application arbitrary.



Wififunction

- 1.Home screen-->settings-->network-->select-wifi to open wifi function
- 2.Choose hotspot-->Input password connect to the network

 


Ethernet function

- 1.Home screen-->settings-->network-->select-ethernet to open ethernet Function
- 2.Insert network cable, network will be connected automatically

Bluetooth function

- 1.Home screen-->settings-->Bluetooth-->select-Bluetooth to open-->Bluetooth function
- 2.Choose hotspot-->Input password connect to the Bluetooth

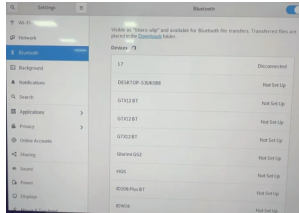

Bluetooth function

- 1.Home screen-->settings-->Bluetooth-->select-Bluetooth to open Bluetooth Function
- 2.Click on the Bluetooth name that needs to be connected, and then click on Connect to connect

File browser

Move to "file browser" press ok to enter into the device list.
When inserting with usb device or sd/sdhcmmc cards, the sign "Device is mounting" will be shown on the screen.
Here you can cut, copy, paste and move the files and folder between The local disk and external storage card.



Read tf card
Insert tf card into the device in the status of power on, when "Device is mounting" appears in the top left corner of the desktop, open "file browser", the identified external Storage card will appear under "local disk", if card's operation is Available now.

Warn

Under no circumstances should you try to repair the tv box by yourself, as this will invalidate the warranty, do not open their boxes there is a risk of electric shock, if a fault Occurs, firstly check with points listed below before taking the tv box for repair. If you are Unable to remedy a problem by following hints, consult your dealer for help.

Problem	Solution
No power	<Check if the power adapter is properly connected to the power and then to box. <Press the power on the remote control to turn on the power.
No picture	<Reconnect with video cable or av cable. <Check if the tv is switched on. <Adjust the volume.
No sound or distorted sound	<Check if the speakers are connected correctly.
No audio or digital output	<Check the digital connections. <Check if your amplifier is set correctly.
The player does not respond to the Remote control	<Aim the remote control directly at the sensor on the front of the TV box. <Increase the distance to the tv box. <Replace the batteries in the remote control. <Operation may not be permitted due to the user manual. <Stability of system halves, reinsert with power adapter to Restart.
Player does not respond to some operating commands During playback	<The audio codes may not be supported by the tv box, you can Change to the supported audio or display items. <Check the volume.
No sound during movies Playback	<The audio codes may not be supported by the tv box, you can Change to the supported audio or display items. <Check the volume.
The contents of the usb flash drive cannot be read	<The usb flash drive format is not compatible with the box. <If one of the usb can not be read, please turn off the tv box for 30 seconds and restart the tv box.
Slow operation of the usb flash drive	<Plug the low or high resolution USB flash drive takes longer time to read and display on the tv screen.
No sound with hdmi connection	<Check the connection between the tv and the hdmi jack of box. <Check your TV system setup. <Check the volume.
The tv screen is blank and The player will is blinking	<Turn off your tv box, wait 30 seconds turn it on again. <If under hdmi status, check if hdmi connection is correct or Change another hdmi cable, set the output resolution of this tv box into 720P.

FCC Warning Statement

FCC Warning Statement
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Statement
To maintain compliance with FCC's RF Exposure guidelines, this equipment should be installed and operated with minimum distance of 20cm the radiator your body. This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

制作要求: 说明书 ROHS 80G书写纸 风琴折页 双面黑白印刷 尺寸:

100MM*140MM (型号MVP(HT-3566)盒子说明书)

制图	审核	制图日期	图纸编号	比例	版本	更改记录
彭晋龙		2024.2.29	?	1:1	1.0	