

X3

USER GUIDE 用户指南

VXE Dragonfly X3 SERIES User Manual

Models:

VXE Dragonfly X3/VXE Dragonfly X3 PRO


制造商: 深圳意义之塔科技有限公司

Manufacturer: Shenzhen Yizhita Technology Co., Ltd

VX

QUICK START

01 按键和配件说明 / Instructions for buttons and accessories / ボタンとアクセサリの説明 / 버튼 및 액세서리 설명

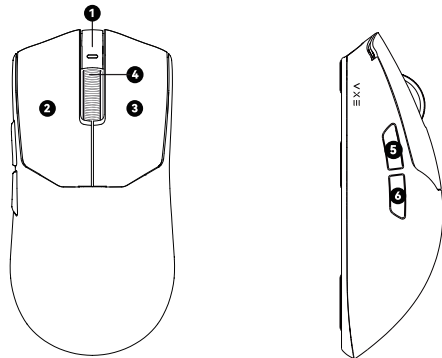

1 LED 指示灯 / LED Indicator / LED インジケータ
LED 표시등

2 鼠标左键 / Left Mouse Button / マウスの左ボタン /
마우스 왼쪽 버튼

3 鼠标右键 / Right Mouse Button / マウスの右ボタン /
마우스 오른쪽 버튼

4 滚轮 / Scroll Wheel / マウスホイール / 마우스 휠

5 前进侧键 / Forward Button / 前進側キー /
전진 측면 키

6 后退侧键 / Back Button / 後退側キー /
뒤로 측면 키

7 DPI 切换键 / DPI Button /
DPIボタン / DPI 버튼

 
8 光学传感器 / Optical Sensor / 光センサ / 광학 센서

9 Type-C 口 / Type-C Port / Type-C インタフェース /
Type-C 인터페이스



10 无线开关 / Power Switch / 電源スイッチ / 전원 스위치

11 脚贴区 / Feet / フィート / 피트


12 1) 电池组 / Battery Pack /
バッテリーパック / 배터리 팩
2) 1K 接收器 / 1K Receiver
1K 受信機 / 1K 수신기



A 数据线 / Cable / データ線 / 데이터 케이블

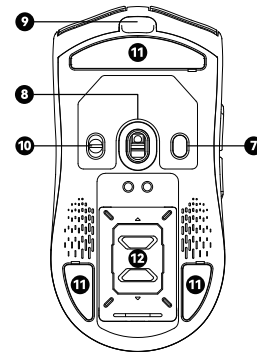 

B 磁吸充电底座 / Magnetic Charging Base /
マグネット充電台 / 마그네틱 충전 거치대



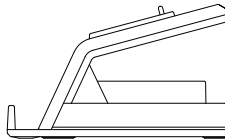


02 快速开始 / Quick Start / じんそくにはじめる / 빠르게 시작하다

2-1 充电/有线使用 | Charge / Wired Mode | 充電/有線モード | 충전 / 유선 모드




2-2 充电/无线使用 | Charge / Wireless Mode | 充電/ワイヤレスモード | 충전 / 무선 모드

 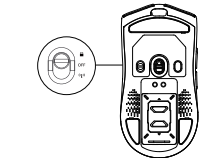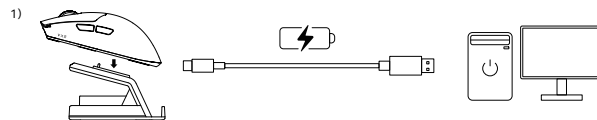

03 DPI 调节 / DPI adjustment / ディーピーアイ ちょうせい / 디피아이 조절

按DPI切换键可以快速切换DPI, 免驱提供以下DPI档位和状态指示 / Pressing the DPI toggle button allows you to quickly switch between DPIs, and the drive-free provides the following DPI levels and status indications / DPI토글· 버튼을 누르면 DPI를 빠르게 전환할 수 있으며, 드라이브 프리는 다음과 같은 DPI 레벨 및 상태 표시기를 제공합니다.

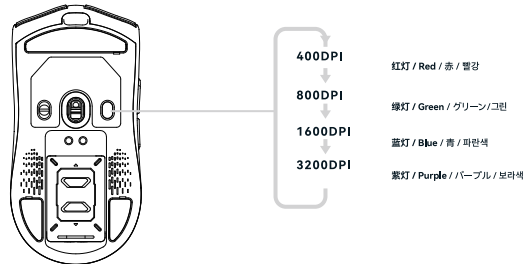


VXE 蜻蜓 X3
更多 DPI 设置需要使用驱动修改, 支持 200~16000DPI 之间的设置 / The DPI can be set between 200 to 16000 DPI by software. / DPI는, 소프트웨어를介して 200 ~ 16000DPI의 間に設定することができる / DPI는 소프트웨어를 통해 200 에서 16000DPI 사이를 설정할 수 있습니다


VXE 蜻蜓 X3 PRO
更多 DPI 设置需要使用驱动修改, 支持 200~18000DPI 之间的设置 / The DPI can be set between 200 to 18000 DPI by software. / DPI는, 소프트웨어를介して 200 ~ 18000DPI의 間に設定することができる / DPI는 소프트웨어를 통해 200 에서 18000DPI 사이를 설정할 수 있습니다

04 回报率设置 / Return rate setting / しゅうえきりつのせってい / 수익률 설정

可通过驱动直接修改回报率 / Set the rate by software / 소프트웨어를使用して速度を設定します / 소프트웨어를 통해 속도를 설정합니다

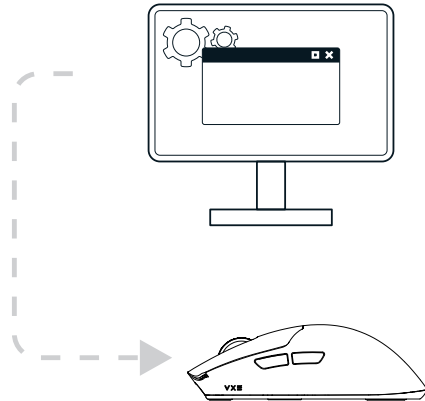


05 电量状态指示 / Battery status indication / でんりょうじょうたいしじ / 전량 상태 표시

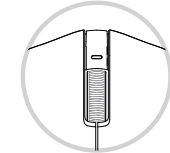

红色 指示灯红灯闪烁: 电量小于20%, 请充电
Blinking In Red: 20%Battery, please charge
赤色点滅: 20%/バッテリー、充電してください
빨간색 깜박임: 20% 배터리 충전

橙色 指示灯橙灯闪烁: 充电中
Blinking In Orange: Charging
オレンジ点滅: 充電
주황색 깜박임: 충전

绿色 指示灯常亮: 充电完成, 恢复至绿色
Staying in Green: Charging completed
녹색 유지: 충전 완료

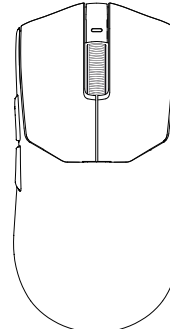

FCC Warning
15.19 Labeling requirements.
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

15.21 Information to user.
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

15.105 Information to the user.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RF Radiation Exposure Statement:
1.This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
2.This equipment complies with RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 5mm from the radiator and your body.

④ 驱动下载
Software Download
소프트웨어의 다운로드
소프트웨어 다운로드
ATKGEAR.COM
本说明书仅供参考, 产品信息可能因更新、技术进步等原因发生变化。用户可通过官网或电子说明书等渠道获取最新信息并按其操作。本说明书旨在为用户提供操作指南, 如有疑问, 请联系客户服务中心。因操作不当或未按要求进行维护导致的产品损坏, 本公司不承担任何责任。最终解释权归公司所有 / This manual is for reference only. Product information may change due to updates or technology improvements. Please refer to the official website or electronic manual for the latest information. For any questions, contact customer service. The company is not responsible for damage caused by improper use or lack of maintenance. The company reserves the right of final interpretation / 本マニュアルは参考用です。製品情報は、更新や技術進歩により変更されることがあります。最新情報は公式ウェブサイトまたは電子マニュアルで確認し、指示に従って操作してください。本マニュアルは使用ガイドとして提供されています。質問があれば、カスタマーサポートにお問い合わせください。誤った操作や必要なメンテナンスを行わないことによる製品の損傷について、当社は責任を負いません。最終的な解釈権は当社に帰属します / 이 매뉴얼은 참고용입니다. 제품 정보는 업데이트나 기술 발전에 따라 변경될 수 있습니다. 최신 정보는 공식 웹사이트나 전자 매뉴얼을 통해 확인하고 제공된 지침에 따라 사용하십시오. 이 매뉴얼은 사용을 안내하는 목적으로 제공됩니다. 질문이 있으면 고객 서비스에 문의하십시오. 부적절한 사용이나 요구된 유지보수를 하지 않아 발생한 제품 손상에 대해서는 회사가 책임지지 않습니다. 최종 해석권은 회사에 있습니다.



材质：80g双胶纸
折叠尺寸：96*96mm
风琴折

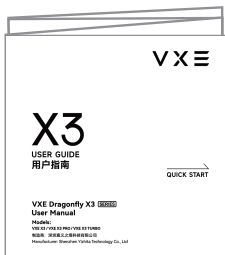

折叠后此面为封面

—— 刀模线
- - - 折痕线