


材质：120G 书写纸
折叠尺寸:96*96mm
风琴折

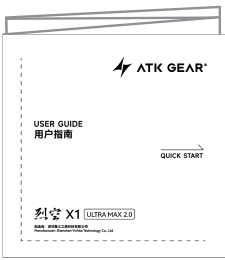

折叠后此面为封面
刀模线
折痕线

USER GUIDE 用户指南

QUICK START

烈空 X1 ULTRA MAX 2.0

制造商：深圳德义之邦科技有限公司
Manufacturer: Shenzhen Yizhida Technology Co., Ltd

01 按键和配件说明 / Introduction / 紹介 / 소개

5 LED 指示灯
LED Indicato
LED インジケータ
LED 표시등

6 前进侧键
Forward Button
前進側キー
전진 측면 키

7 后退侧键
Back Button
後退側キー
뒤로 측면 키

8 脚踏区
Feet
フィート

9 光学传感器
Optical Sensor
光センサー
광학 센서

10 DPI切换键
DPI Button
DPIボタン
DPI 버튼

11 无线开关
Power Switch
電源スイッチ
전원 스위치

12 数据线
Cable
データ線
케이블

13 8K NANO接收器
8K NANO receiver
8K NANOレシーバー
8K NANO 수신기

02 快速开始 / Quick Start / クイックスタート 빠른 시작

1. 充电/有线使用 Charge / Wired Mode 充電/有線モード 충전 / 유선 모드

2. 无线使用 / Wireless Mode / ワイヤレスモード / 무선 모드

03 DPI调节 / DPI Set / DPI設定 / DPI 튜닝

按击底部DPI切换键可以快速切换DPI, 免驱动提供以下DPI档位和状态指示 / Press the DPI button to quickly switch the DPI. The free drive provides the following DPI set and status indications / DPIボタンを押すと、DPIをすばやく切り替えることができます。無償ドライバには、以下のDPI設定とステータスインジケータが用意されています / DPI 버튼을 눌러 DPI를 빠르게 전환합니다. 무료 드라이버는 다음과 같은 DPI 설정 및 상태 지칭을 제공합니다

更多DPI设置需要使用驱动修改, 支持100~30000DPI之间的设置 / The DPI can be set between 100 to 30000 DPI by software. / DPIは、ソフトウェアを介して100~30000DPIの間に設定することができる / DPI는 소프트웨어를 통해 100에서 30000 DPI 사이를 설정할 수 있습니다

04 回报率设置 / Polling Rate Set / ポーリングレート 設定 / 수익률 설정

可通过驱动直接修改回报率 / Set the rate by software / ソフトウェアを使用して速度を設定します / 소프트웨어를 통해 속도를 설정합니다

05 电量状态指示 / Battery Indication / 電力量狀態指示 / 전력 상태 표시

- 1) 指示灯红灯闪烁:电量小于20%, 请充电 / Blinking In Red: 20%Battery, please charge / 赤色点滅:20% / 배터리 충전
- 2) 指示灯黄灯闪烁:充电中 / Blinking In Yellow: Charging / 黄色点滅:充電 / 노란색 깜박임: 충전
- 3) 指示灯常亮:充电完成, 恢复至绿色 / Staying in Green: Charging completed / 绿的まま:充電完了 / 녹색 유지: 충전 완료

06 无线连接 / wireless Connection / ワイヤレス接続 / 무선 연결

蓝牙配对说明:底部拨动开关拨到蓝牙档, 长按左右三个按键3秒以上, 指示灯蓝色灯闪烁;设备找到蓝牙名称为ATK X1 ULTRA MAX 2.0 设备, 鼠标配对成功后, 指示灯停止闪烁, 操作鼠标就可以正常使用。 / Bluetooth Pairing Instructions: Set the bottom switch to the Bluetooth mode, press and hold the left, middle, and right buttons for more than 3 seconds simultaneously till the indicator flashing in blue. Find and connect

the device named as ATK X1 ULTRA MAX 2.0 , the indicator will stops flashing after paired. Operate the mouse and enjoy / Bluetoothペアリング手順:下部のスイッチをBluetoothモードに設定し、左、中央、右 の ボタンを同時に3秒以上押し続け、インジケータが青色で点滅するまで押し続けます。 ATK X1 ULTRA MAX 2.0 という名前のデバイスを見つけ、ペアリングされると、インジケータが点滅を停止します。マウスを操作してお楽しみください! / 블루투스 페어링 지침: 바닥 스위치를 블루투스 모드로 설정하고, 왼쪽, 가운데, 오른쪽 버튼을 동시에 3초 이상 누르고 있으면 표시등이 파란색으로 깜박입니다. ATK X1 ULTRA MAX 2.0 로 이름을 지정된 장치를 찾아 연결하면 페어링된 후 표시등이 깜박임을 멈출 것입니다. 마우스를 조작하여 즐겨보세요!

RemovalInstruction for Battery Recycling

FCC Warning
15.19 Labeling requirements.
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
15.21 Information to user.
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
15.105 Information to the user.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

FCC RF Radiation Exposure Statement:
1.This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
2.This equipment complies with RF radiation exposure limits set forth for an uncontrolled environment.

驱动下载
Software Download
ソフトウェアのダウンロード
소프트웨어 다운로드
ATKGEAR.COM
本说明书仅供参考, 产品信息可能因法规、技术标准更新而发生变化, 用户可通过官网或电子邮箱获取最新信息并反馈意见, 本说明书旨在为用户提供使用指导, 仅供参考, 不构成任何承诺, 因设备设计或制造缺陷导致的任何产品问题, 本公司不承担责任, 最终解释权归本公司所有, This manual is for reference only. Product information may change due to updates or technology improvements. Please refer to the official website or electronic manual for the latest information. For any questions, contact customer service. The company is not responsible for damage caused by improper use or lack of maintenance. The company reserves the right of final interpretation. 本说明书仅供参考, 产品信息可能因法规、技术标准更新而发生变化, 用户可通过官网或电子邮箱获取最新信息并反馈意见, 本说明书旨在为用户提供使用指导, 仅供参考, 不构成任何承诺, 因设备设计或制造缺陷导致的任何产品问题, 本公司不承担责任, 最终解释权归本公司所有, This manual is for reference only. Product information may change due to updates or technology improvements. Please refer to the official website or electronic manual for the latest information. For any questions, contact customer service. The company is not responsible for damage caused by improper use or lack of maintenance. The company reserves the right of final interpretation. 本说明书仅供参考, 产品信息可能因法规、技术标准更新而发生变化, 用户可通过官网或电子邮箱获取最新信息并反馈意见, 本说明书旨在为用户提供使用指导, 仅供参考, 不构成任何承诺, 因设备设计或制造缺陷导致的任何产品问题, 本公司不承担责任, 最终解释权归本公司所有, This manual is for reference only. Product information may change due to updates or technology improvements. Please refer to the official website or electronic manual for the latest information. For any questions, contact customer service. The company is not responsible for damage caused by improper use or lack of maintenance. The company reserves the right of final interpretation.