 


折叠后此面为封面

—— 刀模线
- - - 折痕线



4) 在ATK官网的驱动驱动(固件)下载中,进入设置页面,进行接收器配对 / On the ATK official website's driver/firmware download page, navigate to the settings section to pair the dongle / ATK公式ウェブサイトのドライバー/ファームウェアのダウンロードページで、設定セク

This equipment should be installed and operated with minimum distance 5mm between the radiator and your body.

