

# USER'S MANUAL



1 important safety precautions

To ensure safe use of this device, please read it carefully before use.

Warning!


How to use a projector correctly

- When the projector is working, do not look directly at the lens as strong light can harm the eyes.
- Do not block the air outlet to avoid damaging the cooling function of internal electronic devices.
- Do not use chemicals, cleaning agents, or water to clean the circuit board, and also avoid rainwater, moisture, and colorless liquids from corroding the circuit board.
- Please keep the projector and accessories out of reach of children.
- Please keep the working environment of the projector dry and ventilated.
- Do not place the projector in an environment that is too hot or too cold, as high or low temperatures can shorten the lifespan of the device. The optimal temperature is between 5C and 35 ° C.
- Do not use heating equipment for dehumidification, including but not limited to dryers and microwaves.
- Do not vigorously press or place heavy objects on the projector to prevent damage
- Do not throw, strike, or shake the projector to prevent damage to the internal wiring.
- If you have any questions, please contact after-sales service and do not disassemble them yourself.
- Do not repair the projector on your own. If the projector cannot function properly, please contact after-sales service for repair.

inventory

1. Projector 2. remote control 3. user manual 4. power cord 5. HDMI cable

## Product Appearance and Function Introduction

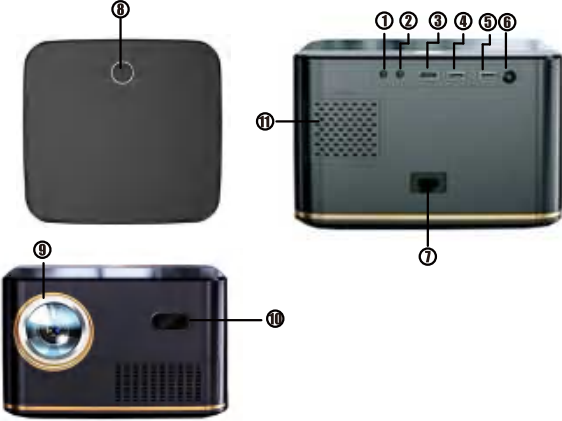

- AV
- External sound
- HD interface
- USB drive input 1
- USB drive input 2
- infrared reception
- power input
- buttons
- lens
- IR window
- dustproof air inlet

## Remote control operation and button function



## Automatic correction

1. the function is automatically turned on by default, and the screen can be kept square after the device is shifted.

2. Press the menu key (Ⓜ) and choose Settings > Shortcut > Settings > Ladder Correction > Automatic ladder , can be set .

 
Menu ▶ Shortcut ▶ Settings ▶ Ladder Correction ▶ Automatic ladder

## Projection specifications

| Display technology | Light source | Throw ratio | Projection distance | Projection size |
|--------------------|--------------|-------------|---------------------|-----------------|
| HD LCD             | Lamp/WLED    | 1.53        | 0.88-3.34           | 30-120 inch     |

| Physical resolution | Support resolution             | Support video format                                                                                      | Support audio format                       | Support image format |
|---------------------|--------------------------------|-----------------------------------------------------------------------------------------------------------|--------------------------------------------|----------------------|
| 1920*1080           | 4K: 3840P、720P、1080P、576P、567P | AVI/MPEG/MPEG-1/MPEG-2/MPEG-4/DivX/WMV/ASF/MP4/MPEG-2/4/VOB/Quick Time/AVI/WMV/ASF/MP4/AVI/VC-1/PS/8/WMV9 | MPEG/MPEG-1/LAC/WMV/AAC/FLAC/MP3/PS/MP3/GP | BMF/PS/PS/GP/NG/GIF  |

## Interface introduction

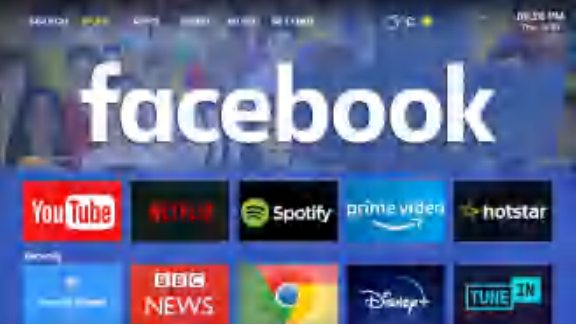


USB: Connect a USB flash drive for local playback.


HDMI: Connect HDMI output device for screen casting.

My applications: system pre-installed applications and customer downloaded applications.

Settings: Move to select "Settings" and press "OK" to enter the settings page.

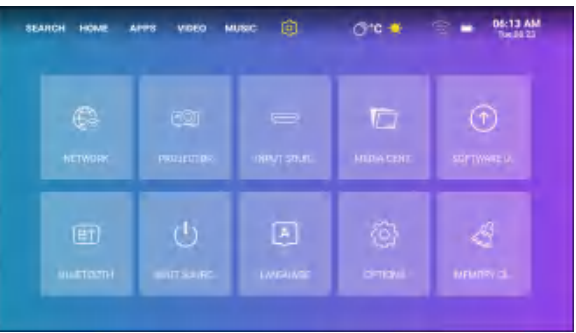

Projection settings: Move to select "Projection settings" and press "OK" to enter the settings page.

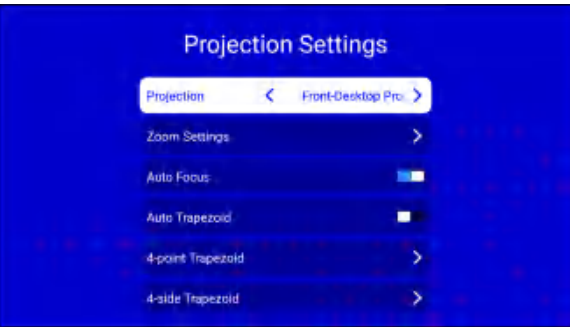


Installation mode: Move to select "Installation Mode" and press the left and right arrow keys on the remote control to select the corresponding installation mode: desktop front projection, desktop rear projection, ceiling front projection, ceiling rear projection.




Network settings:

- Move to select "Network Settings" and press "OK" to enter the setting interface;
- Move to select the "Wi-Fi" switch and press the "OK" key to switch the status;
- After turning on Wi-Fi, select the Wi-Fi network you want to connect to, press the "OK" button to confirm, and enter the Wi-Fi password in the pop-up dialog box to connect. After connecting, press the "Return" button to exit the network setting interface.

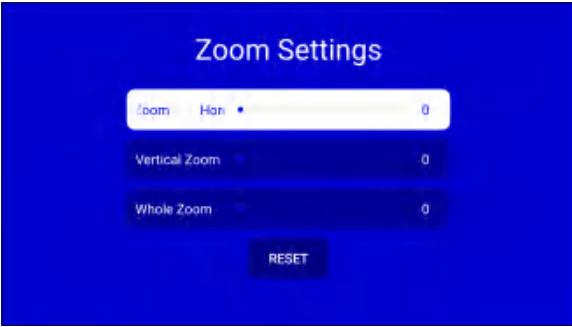


Bluetooth settings:

- Move to select "Bluetooth Settings" and press the "OK" button to enter the setting interface;
- Move to select "Bluetooth Switch" and press "OK" to switch status;
- After turning on Bluetooth, select the device that needs to be paired. After completing the pairing, press the "Return" key to exit.

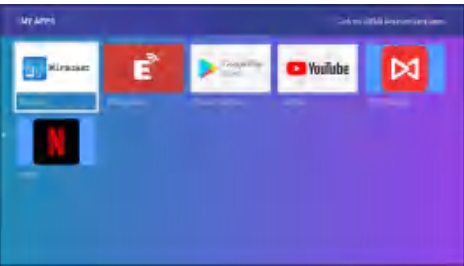


Application management

- Move to select "Application Management" and press "OK" to enter the settings page;
- Use the direction keys on the remote control to move to the APP that needs to be managed and press the "OK" button to enter the settings page. On this page, you can clear cache, uninstall and other operations on the APP.

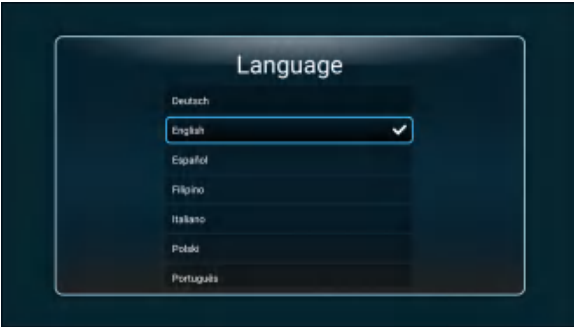

- Move to select "Language and Input Method" and press "OK" to enter the settings page;
- Move to select "Language Settings", press the "OK" key to enter language selection, select the desired language and press the "OK" key to confirm, press the "Return" key to exit the current page;
- Move to select "Input Method", press the "OK" key to enter the input method selection, select the required input method and press the "OK" key to confirm.

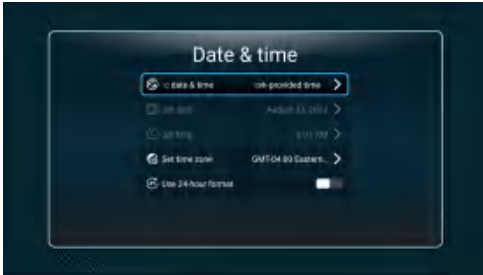

Projection settings: Move to select "Projection Settings" and press the "OK" button to enter the settings page. Move to select "Date and Time" and press the "OK" button to enter the settings page. If you use the network to provide the time, move to select "Automatically obtain" and press the "OK" key to switch the status. If you need to set the time and date manually, switch "Automatic acquisition" to off and then set the time and date manually.



Move to select "Other Settings" and press the "OK" button to enter the settings page. Move to select the relevant options to select the power-on signal source, power-on APP, power-on mode, and button sound effect. You can also restore the projector to factory settings through "Restore Factory Settings".



About this machine

- Move to select "About This Machine" and press the "OK" button to enter the interface, which contains information such as the machine model, system version, Android version, memory capacity, ROM capacity, etc.
- Move to select "Local Upgrade" and press "OK" to upgrade the projector system.

## input connection

When connecting the projector to different devices, you need to select the corresponding signal channel. The signal source button can directly call up the signal channel menu on any interface. Press the up and down keys to switch signal channels

Press OK to confirm the signal channel

Press the return key to cancel the connection or press the select key to enter other interfaces

HDMI connection: One HDMI cable, one end is connected to the signal output device (such as computer, high-definition player, DVD, etc.), the other end is connected to the HDMI interface of the projector, and the HDMI channel is selected through the signal source.


USB connection: Connect the USB flash drive and select the corresponding content in the main interface to open video, audio, pictures, text and other files

## External channel OSD menu setting

After the projector is connected to an external device (such as HDMI), the Changan menu key can bring up the OSD menu interface to adjust the sound and image.

The OSD menu adjustment settings are as follows:

- Changan menu key to enter the OSD menu;
- Press the up and down arrow keys to select the item that needs to be adjusted;
- Press the left and right direction keys to select the parameters that need to be set and set the parameters;
- Press the return key to save the settings.

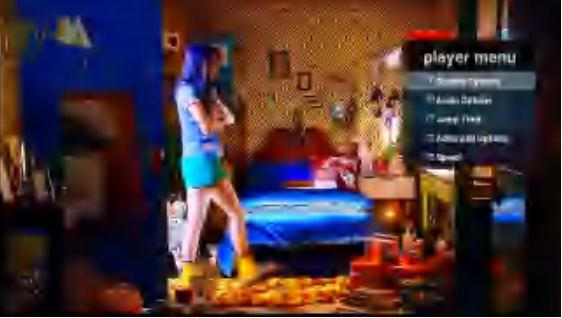

Statement: Our company reserves the right to modify the contents of this manual without any prior notification.

Note: This product will continue to undergo software upgrades and optimizations. The actual operation interface may be different from the pictures in the manual, but it does not affect the normal implementation of the functions described in the manual. We sincerely apologize for any inconvenience caused to you. We will not notify you of any changes in the operation methods caused by the interface and some functions.