

Model: LNDU WL02

材质：128克铜板纸

颜色：单色印刷

成型方式：骑马订

展开尺寸：240x170mm

成型尺寸：120x170mm

LNDU



USER MANUAL

Wi-Fi Smart Lock

Customer Service

Monday to Friday: 9:00 AM - 9:00 PM(PT)
Saturday and Sunday: 9:00 AM - 6:00 PM(PT)

Shenzhen Lingdu Auto Electronics Co., Ltd.
F28/29 Tower A Lechuanghui Building, No.1211Guanguang Road,
Longhua District, Shenzhen, China


Model: WL02

Contents

1. Hardware introduction	01
2. Prepare the door and check dimensions	03
3. Parts list	04
4. Installation overview	05
5. Programming instructions	15
6. Q&A	20


1/ Hardware introduction

Overview

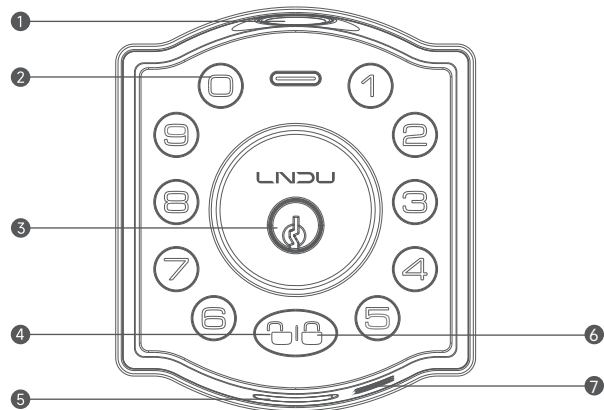

- ① Fingerprint Scanner
- ② Keypad
- ③ Keyhole
- ④ Emergency Power Support Port
- ⑤ Lock & Unlock Button
- ⑥ The loudspeaker


Note: The “Emergency Power Supply Port” is not for battery charging purpose and can only be used for emergency power supply to the lock.

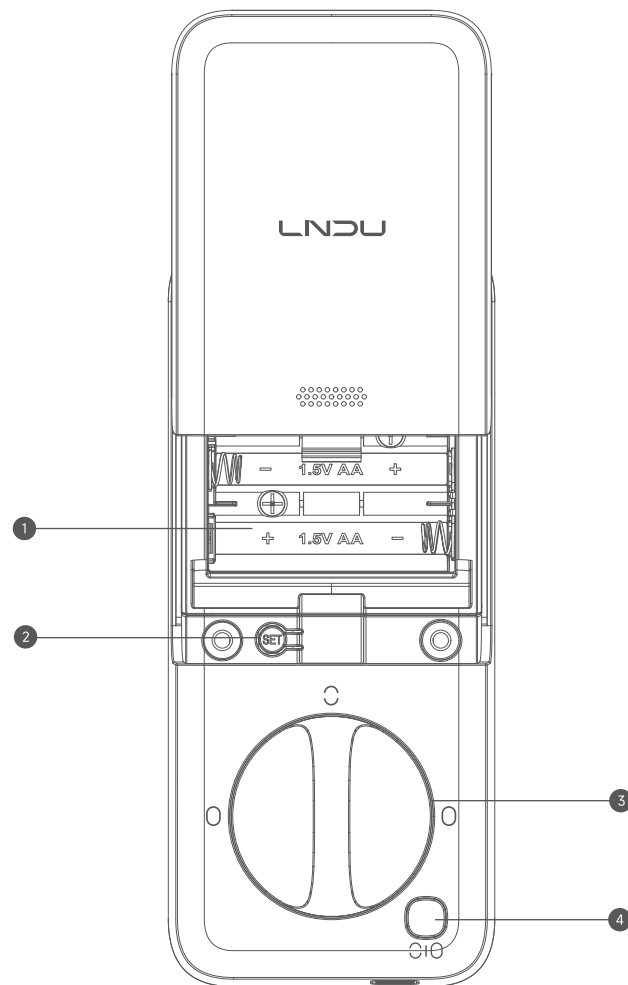

- ① 8 Units of AA Batteries
- ② Reset Button
- ③ Manual Lock/Unlock Knob
- ④ Open & Close Button

2/Prepare the door and check dimensions

Compatible Doors

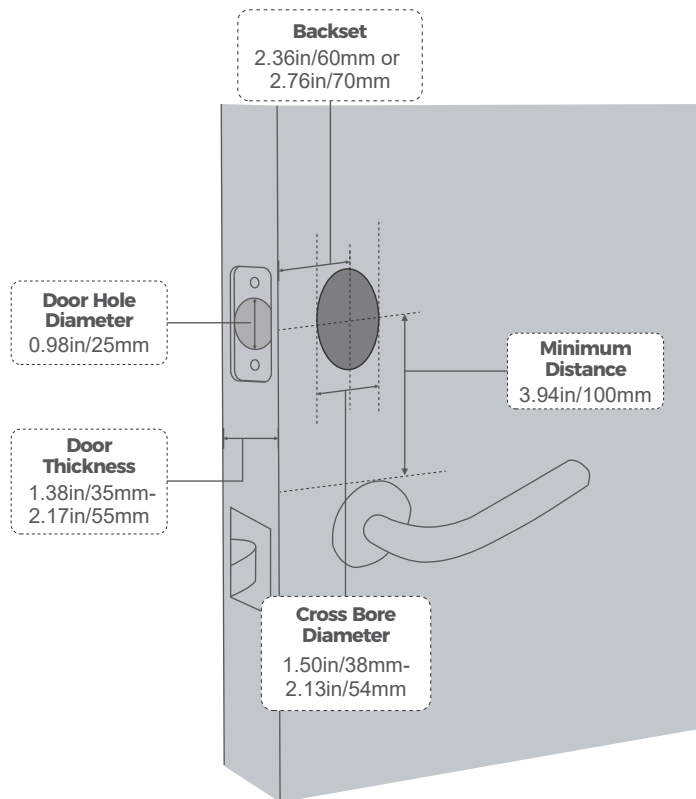


3/Parts List




Exterior Assembly



 Interior Assembly



Latch

 

Strike Box



Strike



Connecting StudL(x2)
1.54in/39mm



Keys (x2)



Strike Screws (x4)
0.98in/25mm



A
Mounting plate
Screws (x2)
1.38in/35mm



B
Interior Assembly
Screws (x2)
0.984in/25mm



C
Mounting plate
Screws (x3)
1.1in/28mm



TOOL REQUIRED


All you need is a manual screwdriver or an electronic screwdriver.



IMPORTANT

Do not load batteries until lock is completely installed.

4/ Installation Overview

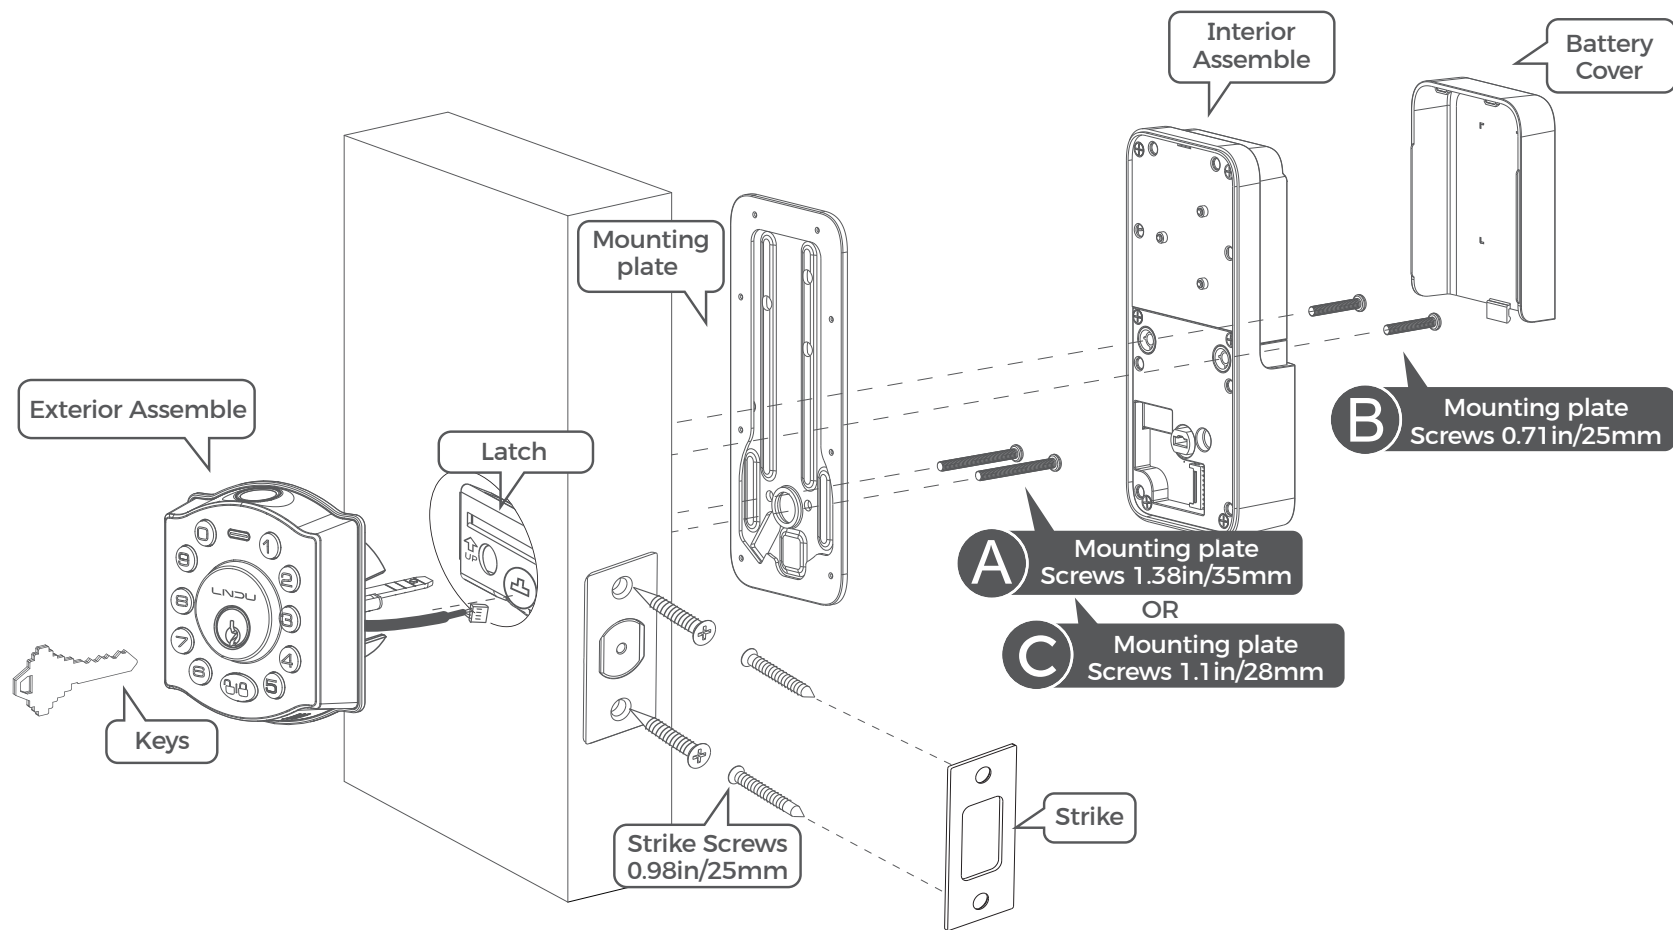




* 1.77-2.13in/45-55mm door thickness use **A**

* 1.34-1.77in/35-45mm door thickness use **C**


Step 1. Install Deadbolt

1. Check your door to see if the deadbolt requires adjustment.


If the backset is 2.76in/70mm, turn the faceplate 180° to extend the length.

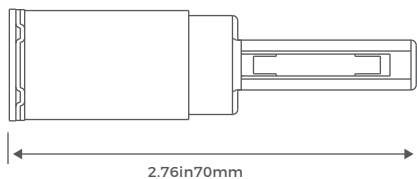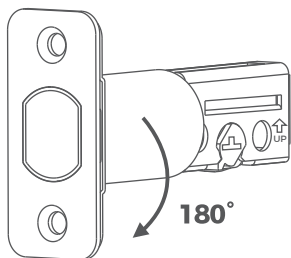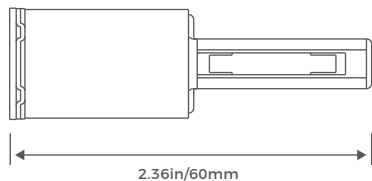


2. Insert and screw the deadbolt into the doorframe.
Make sure the word "UP" on the deadbolt faces up.

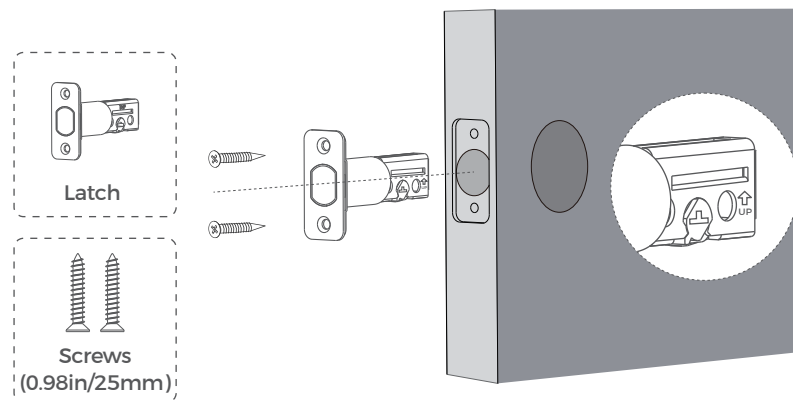

Step 2. Install Strike Plate

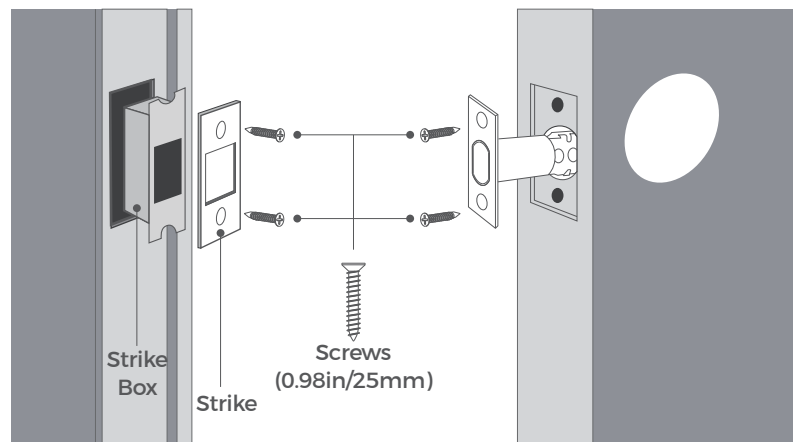


Step 3. Install Exterior Assembly

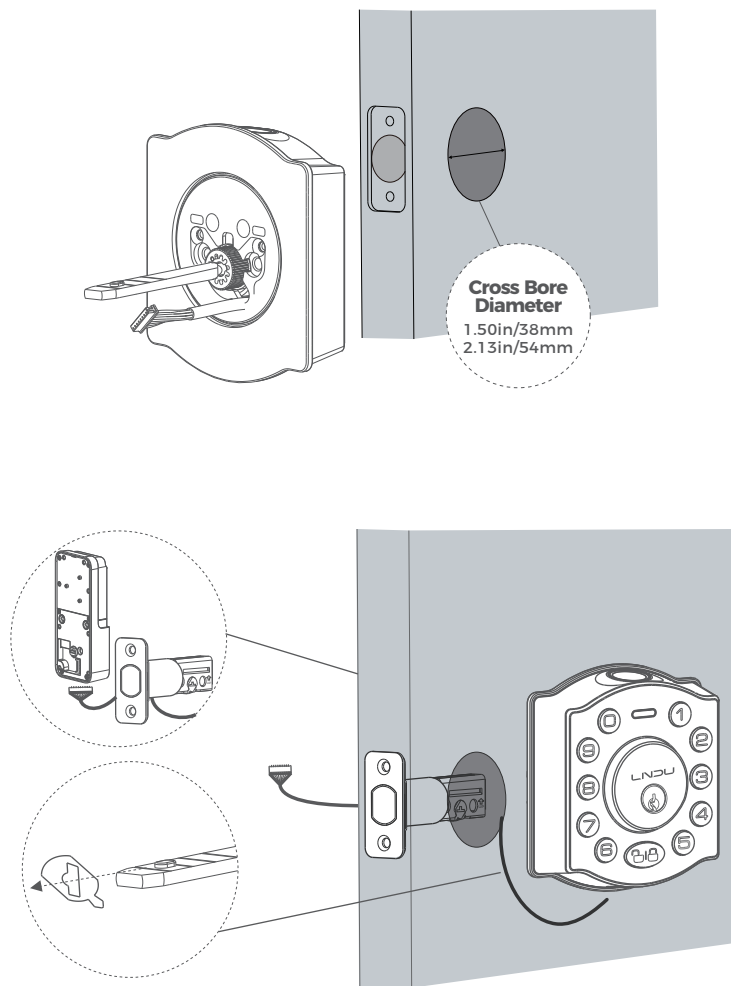


Step 4. Install Interior Assembly


1. Detach the back cover from the interior assembly.

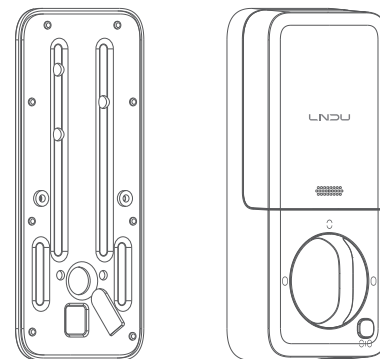


2. Run the wires through the back cover.

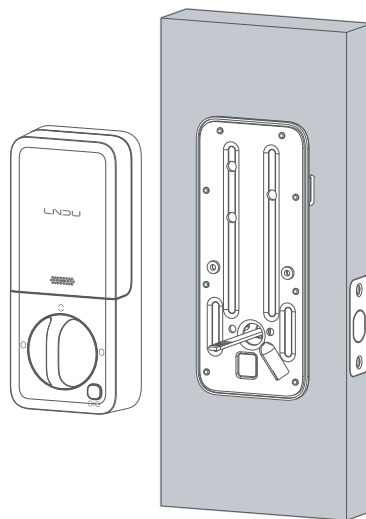

 
3. Secure the back cover with screws.






45-55mm door
thickness use A

 


35-45mm door
thickness use C

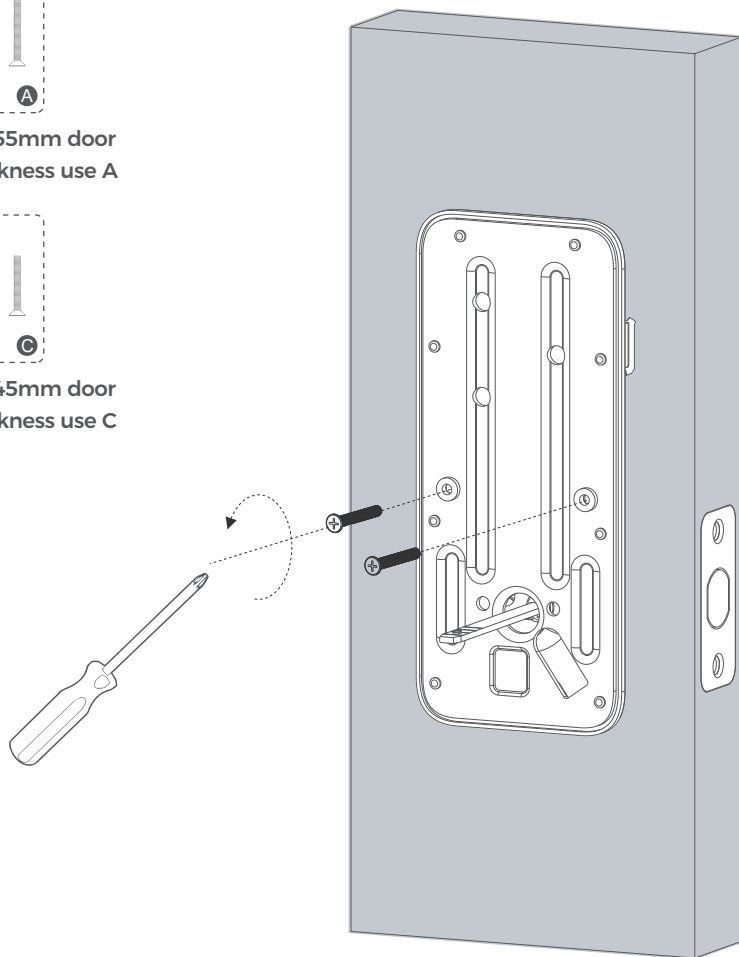




4. Wire to the interior assembly.

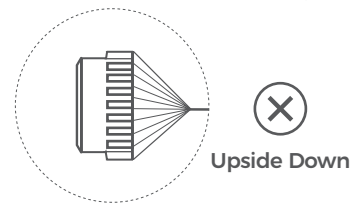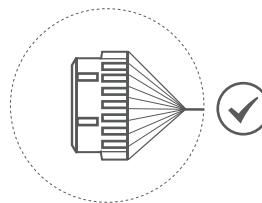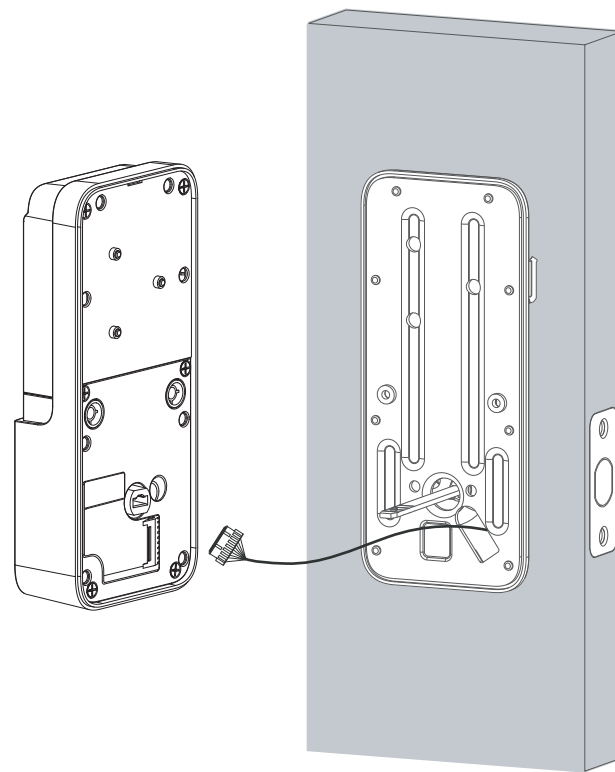

5. Mount the interior assembly. Make sure both wires are tucked into the cabin on the back of the interior assembly.

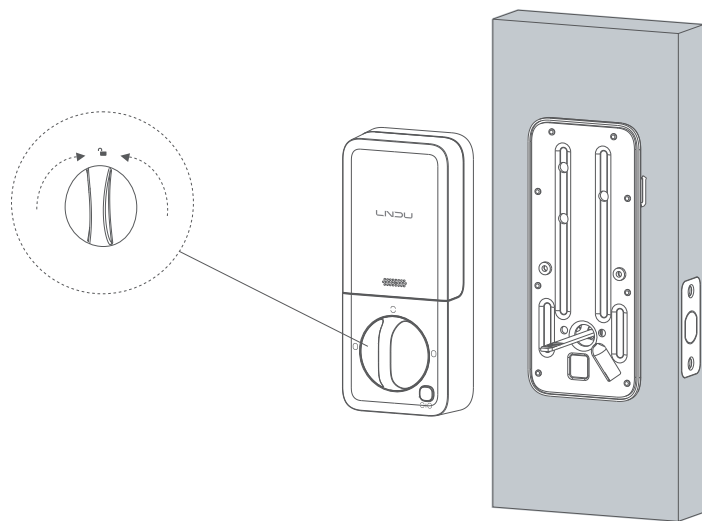


 6. Check if the deadbolt retracts by turning the thumb turn.

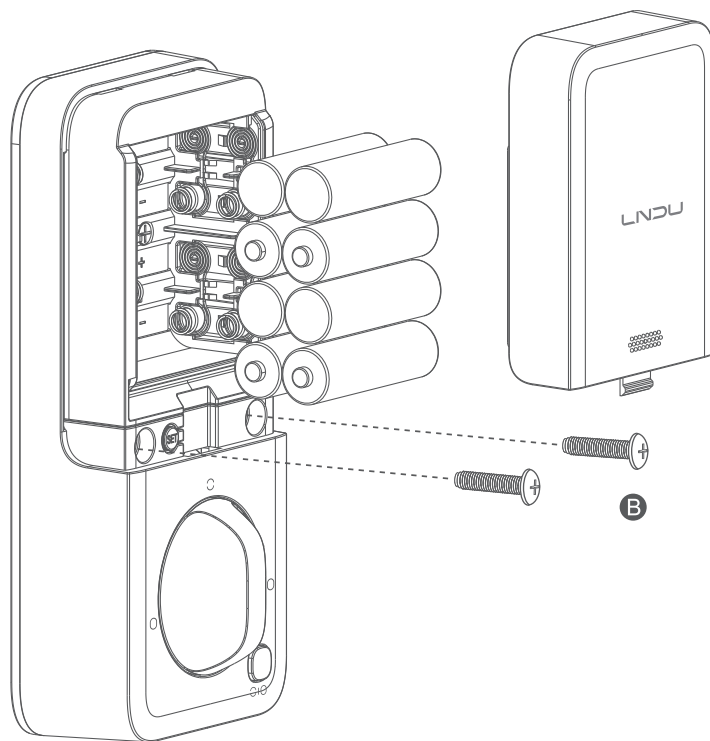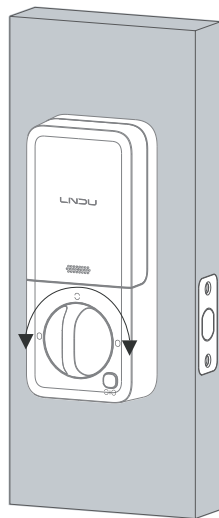


5/ Programming instructions

App Connection Guide

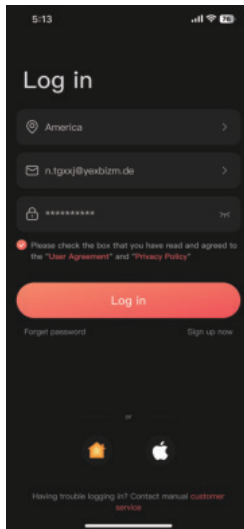


App User Guide

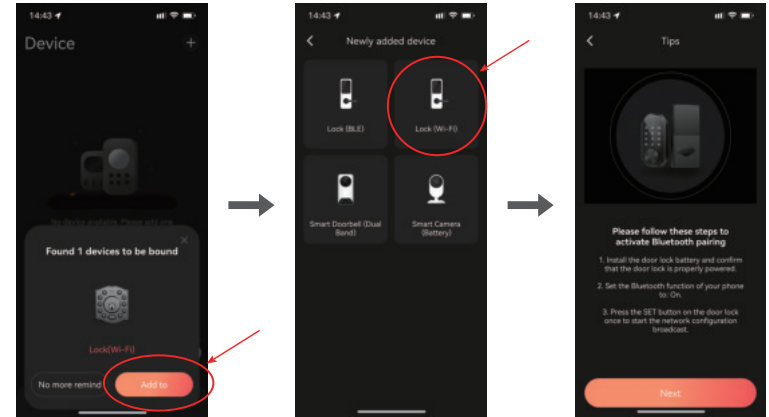

1 Add Device

2 Select Lock(Wi-Fi)

3 Click "Next"

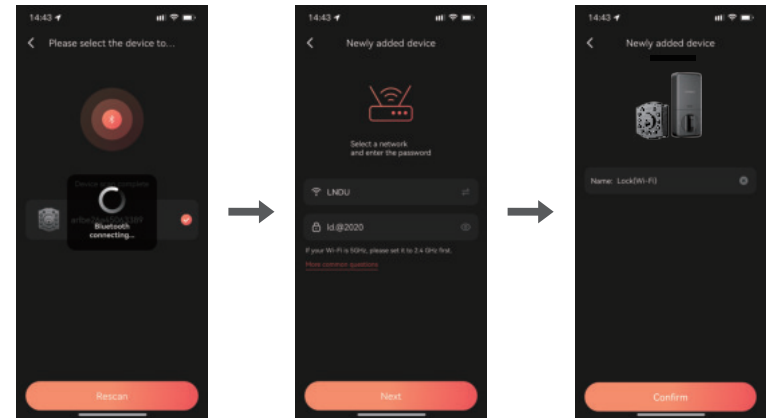


4 Find the device to connect

5 Connecting

6 Rename device then to confirm

Power-saving Mode

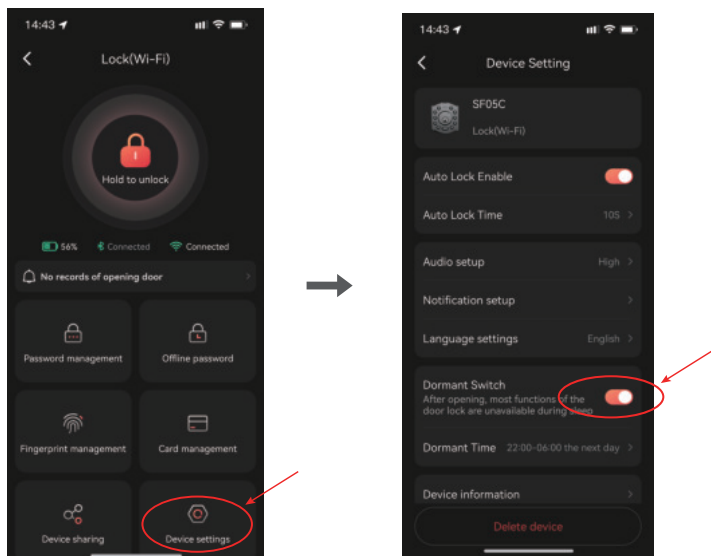


① Select "Device Settings"

② Enable the "Dormant Switch"

Attention:

1. When the dormant switch is turned on to save power, functionalities of the smart lock controlled via the smartphone app will be disabled. This includes unlocking and adding passwords through the app.
2. You can only view unlock records through the app. To unlock, add passwords or register fingerprint recognition, you must use the keypad on the door lock.
3. To disable power-saving mode, you must manually wake up the door lock panel and then turn off the dormant switch in the mobile app.

Add Member Password

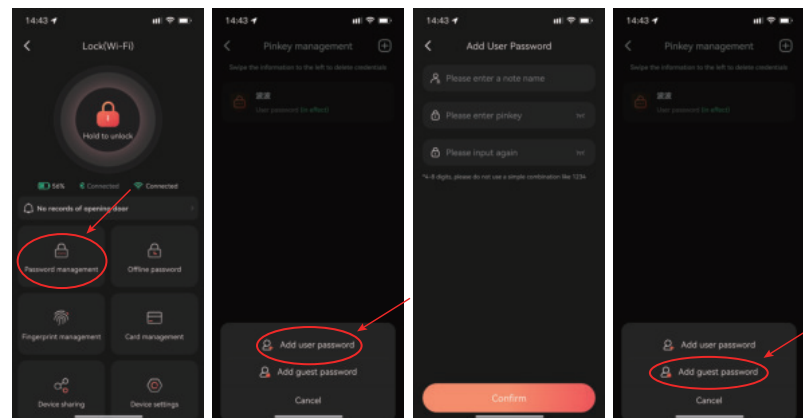


① Password management

② Add user password

③ Enter note name and PIN Key Duress password can be activated here


④ Add guest password

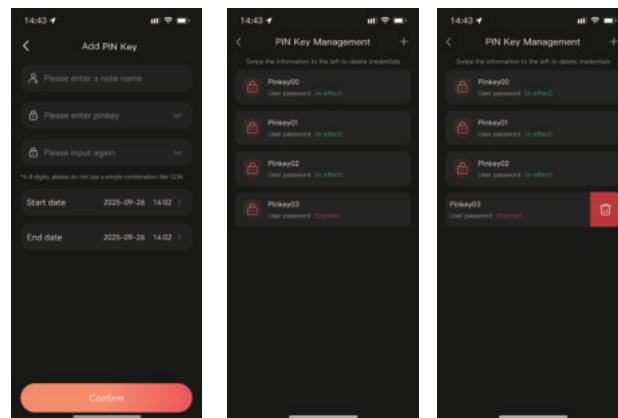


⑤ Enter note name and PIN Key, choose Start & EndTime to confirm

⑥ Add succeeded


⑦ Swipe left on this password to delete

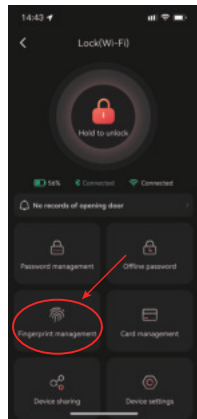


① Fingerprint management

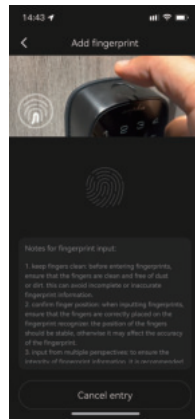

② Add Fingerprint

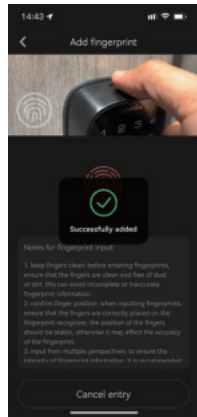

③ User Fingerprint Succeeded

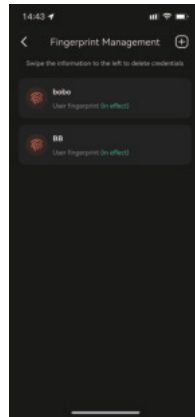

④ Enter note name

6/Q&A

01 Questions: After the door lock is reset, what will happen?

Answer: When the door lock is reset, any password (6-8 digits) can unlock the door. If you want to change this setting, simply register an administrator password.

02 Questions: What is the difference between installing 4 AA battery locks and filling 8 batteries?

Answer: With four batteries, the product can run normally; with eight batteries, enjoy a longer-lasting use of experience.

03 Questions: Why do I have to replace the battery in less than 6 months?

Answer: Please use high-quality batteries such as Duracell, Energizer and so on. 8 AA batteries could support door lock unlocking more than 1800 times. If you unlock the door more than 20 times a day or the weather is cold, the battery life may be less than 3 months.

04 Questions: The door lock cannot be installed, what should I do?

Answer: Please refer to the door thickness and other data in the instruction manual to ensure that our lock is suitable for your door. Also please remove all accessories of the old lock before installation. Our door locks are not compatible with other door lock accessories.

05 Questions: The screws won't install, what happened?

Answer: Each screw installs differently. Please make sure to use the correct screws in each location.

06 Questions: Missing accessories, what should I do?

Answer: You can contact our customer service team to reissue accessories for you.

07 Questions: The door lock still doesn't work after installing batteries, why?

Answer: You could check if the battery is installed correctly. Also please check whether the exterior assembly connection power cord is completely inserted into the mainboard of interior assembly. If the door lock still doesn't work, it may have been damaged during shipping. You can contact Amazon customer service to replace a new lock.

08 Questions: The latch is not working properly, what should I do?

Answer: 1. The latch is adjustable (2.36in/60mm or 2.76/70mm), please adjust to the appropriate length when installing.

2. Our door lock will automatically recognize the direction of opening the door after being powered on. You can restore the factory settings to make the latch work properly.

09 Questions: I could not manually turn the lock from inside the house, what could be wrong?

Answer: First, check the installation for errors based on the installation video.

If there is no error in the installation, the reason is the gears inside the product are not tightly fitted. You need to use Turn the knob to the open or closed position with more force, so that the gears can return to the correct position.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.