


V12 夹耳式无线蓝牙耳机



1. 产品结构

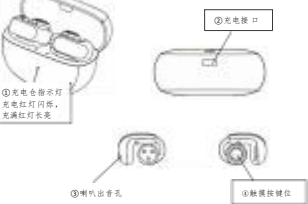

产品参数:	
产品名称	V12
蓝牙版本	5.3
充电仓电池	300mAh
耳机电池	20mAh
传输距离	10米
音乐时间	约4小时
充电接口	USB TYPE-C
充电时间	约1.5小时

2. 蓝牙配对

- 打开充电仓，L/R 耳机自动进入蓝牙配对模式，等待连接。
- 打开手机上的蓝牙，搜索设备 V12，点击进入连接。
- (请提示:L/R 耳机连接提示音)

3. 使用方法

- 用一只手拔取耳机，把耳机挂在耳朵上。
- 旋转调整耳机喇叭位置，上下移动直到耳机完全贴合耳朵的轮廓。
- 注意区分 L/R 的佩戴位置，如果弄反则佩戴不上去。

4. 操作列表

功能名称 The name of the function	操作方式及状态 Operation mode and status	指示灯状态 Indicator status	提示音 Prompt
耳机连接 Connect	耳机进入配对模式后，操作手机设备连接耳机，第二次连接，充电仓会自动连接设备	无	提示已连接
接听电话 Hang up the phone	触摸接听 任意单/L/R 耳机	无	无
拒接来电 Reject Call	长按电话任意 L/R 耳机长按	无	无
来电接听 Answer Call	触摸接听 任意单/L/R 耳机	无	无
加音量	长按右边耳机	无	有最大音量提示“音量已最大”
减音量	长按左边耳机	无	
下一曲 Next Song	双击右边耳机进入下一曲	无	无
上一曲 Previous Song	双击左边耳机进入上一曲	无	无
音乐播放/暂停 Play/Pause	单击任何一侧耳机	无	无
低电量	表明耳机电量已低于 10%	红灯闪烁 1 次	电量不足
电量显示 show	耳机连接移动设备 100 秒后部分安卓手机电量电量	无	无
关机 Power Off	放入充电仓 5 分钟后关机 1. 耳机在待机模式时 5 分钟无设备连接关机。 2. 长按任意耳机 3 秒，耳机进入待机模式，耳机进入待机模式时，5 分钟无设备连接，关机。 3. 耳机电量低时 3.1V，自动关机	无	关机
开机 Power On	打开充电仓盖后自动开机。	无	开机
语音助手 Voice Assistant	双击任意边耳机	无	无

注意事项:

请遵守以下注意事项以避免导致事故或财产损失，长时间使用高音量会刺激耳膜，可能会造成听力减弱等不良影响。为了更好的保护您的听力，请注意防止音量过高的情况，根据耳机或显示设备的信号，请及时可能会合理叫喊。请随时注意保持适当的音量，提高音量时请谨慎进行，突然加高音量可能会导致听力损伤。

如使用本机时出现异常或故障等状况，请不持续使用并寻求帮助，或联系维修服务中心或购买时的销售点进行询问。

1. 请不要将本机放置于太阳热光以内或高温下产生挤压，出现异常或其他故障。
2. 请不要将本机放入液体中或液体飞溅，当液体飞溅到本机时，可能会导致短路，请立即取出本机，并用干布擦拭干净，并立即停止使用及被液体污染。如液体不慎碰到身体或衣服，为避免可能出现烫伤或其他伤害，请马上用清水等进行清洗，如果出现皮肤或其他伤害请及时就医治疗。
3. 请勿拆卸的 USB Type-C 配件进行充电，使用充电器、数据线、充电器等可能会导致火灾或触电事故，请勿拆卸本机，以免造成短路或火灾等事故。
4. 请勿将本机靠近火源或热源，如明火、电炉、微波炉、过热器等可能会导致火灾或其他伤害，造成周围的环境及损害。切勿自行拆解本机，以免引发故障或触电等危险。如需要进行充电或更换，或进行维修、维修等更换，请及时联系售后服务中心或购买时的销售点，请勿将本机靠近火源或热源或火源附近，如火灾附近，直射的阳光下，或处于高温下的汽车内部等高温场所使用，保管及放置。电池(电池或混合电池)不得暴露在高温环境。

警告:

请遵守以下注意事项以避免导致火灾、触电、火灾、起火等引发的死亡或重大伤害。请不要将手指接触带电电池或液体。如液体不慎进入眼睛，为避免可能引起火灾的情况，请立即取出本机，并用干布擦拭干净，并立即停止使用及被液体污染。如液体不慎碰到身体或衣服，为避免可能出现烫伤或其他伤害，请马上用清水等进行清洗，如果出现皮肤或其他伤害请及时就医治疗。
请勿拆卸的 USB Type-C 配件进行充电，使用充电器、数据线、充电器等可能会导致火灾或触电事故，请勿拆卸本机，以免造成短路或火灾等事故。
请勿将本机靠近火源或热源，如明火、电炉、微波炉、过热器等可能会导致火灾或其他伤害，造成周围的环境及损害。切勿自行拆解本机，以免引发故障或触电等危险。如需要进行充电或更换，或进行维修、维修等更换，请及时联系售后服务中心或购买时的销售点，请勿将本机靠近火源或热源或火源附近，如火灾附近，直射的阳光下，或处于高温下的汽车内部等高温场所使用，保管及放置。电池(电池或混合电池)不得暴露在高温环境。

免费维修政策:

- 如果产品在保修期内正常使用出现故障，我们将按照本手册进行免费维修。此外，我们可能要求客户提供保修卡，如出现以下情况，即使在保修期内发生故障，以下情况也会收取费用。
(1) 如果设备没有显示保修卡 (2) 如果无法确认购买日期 (3) 如果产品在保修期时，或保修期已过保修期
(4) 使用(或按照使用说明中的注意事项等正常使用) (5) 其他原因造成设备故障或损坏，或由于维修或更换不当造成的故障或损坏 (6) 因火灾、地震、火灾、水灾、雷击或其他自然灾害、污染、战争、事故、意外等造成的故障或损坏 (7) 其他原因造成故障或损坏，或损坏零件。
3. 可使用两种维修零件或零件进行维修。此外，维修更换的零件和我们完全更换因故障无法使用本产品所造成的损失，我们不予赔偿。

产品保修:

保修卡是：
本产品自购买之日起，享有一年的保修期。
保修的产品必须按照本产品使用说明书正确使用。
1. 您的设备必须按照本产品使用说明书正确使用。
2. 本保修卡不适用于人为、意外(火灾、外力挤压、坠落等)或者自然灾害(地震、台风、雷电)引起的故障或损坏。
3. 本保修卡遗失后不再补发，请和销售商签订一份保修卡。


产品名称:	
型号:	
购买时间:	
购买地点:	
联系电话:	
购买地点:	
经销商名称及地址:	

请将此页妥善保存，如果您的设备需要保修服务，请联系您所购入设备的经销商。

V12 clip-on wireless Bluetooth headset



1. Product structure

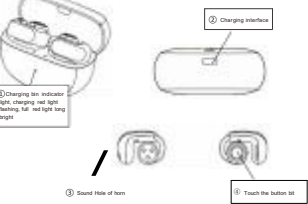

Product parameters:	
Product model	V12
Bluetooth version	5.3
Charging compartment battery	300mAh
Earphone battery	30mAh
Transmission radius	10m
Music time	About 4 hours
Charging interface	USB TYPE-C
Charging time	About 1.5 hours

2. Bluetooth pairing

- Open the charging bin. The L/R headset automatically enters Bluetooth pairing mode and waits for connection.
- Open Bluetooth on your phone, search for device name V12, click to enter connection. (Voice prompt: L/R headset connection prompt sound)

3. Usage

- Hold down the ear with one hand and hang the earphones on the ear.
- Rotate and adjust the position of the earphone speaker, moving it up and down until the earphones fully fit the contour of the ear.
- Play attention to distinguishing the wearing position of L/R, if it is taken upside down, it cannot be worn.

4. Operation list

Function Name	Operation mode and status	Indicator status	Prompt
Connect	After the earphones enter pairing mode, connect them to devices such as mobile phones (On the second connection, the headphones will automatically connect to the device)	nothing	Bluetooth connected
Hang up the	Call status, click on L/R earphones at will	nothing	nothing
Reject Call	Call status, Any L/R, Long press the earphones for 2 seconds	nothing	nothing
Answer Call	Call status, click on L/R earphones at will	nothing	nothing
Turn it up	Long press the right headset	nothing	There's a maximum volume cap. The volume is at maximum
Reduce the volume	Long Press left headset	nothing	nothing
Next Song	Double-click on the right headset to go to the next track	nothing	nothing
Previous Song	Double-click the left headset to enter the previous track	nothing	nothing
Play/Pause	Click on either side of the headset	nothing	nothing
Low power	The voltage of the earphone battery is lower than 3.4 V	The red light flashes once every five seconds	lowbattery power
Electricity display	When you are successfully connecting the earphones to a device, USB Type-C and Android phone battery level display	nothing	nothing
Power off	When the earphones are charging to 100%, the headset will be switched off after 5 minutes is received power mode without external connection. The earphones and the connection mode will keep the headset in standby mode for 5 minutes after the headset is disconnected from the device. The headphones battery display drops to 1 V. Please check the battery level.	nothing	Turn it off
Power on	Open charging bin, Masako automatically boot	nothing	Power on
Voice Assistant	Press the click on any side of the headset	nothing	nothing

Notes:

Please follow the following precautions to avoid injury and property damage. Long term use of high volume can irritate the ears and may lead to permanent effects such as reduced hearing. To better protect your hearing, please pay attention to preventing excessive volume.

Depending on the Bluetooth device connected to the device, there may be a whistling phenomenon during calls. Please always pay attention to maintaining an appropriate volume, and gradually increase the volume. Suddenly increasing the volume may damage hearing.

If you experience skin allergies or other symptoms while using this device, please stop using it as soon as possible and consult a doctor, or contact a repair center or the seller at the time of purchase for further information.

1. Please do not place the earphone body in the back pocket to avoid compression, deformation, or other malfunctions when sitting down.

2. Please do not use this aircraft in the cockpit, as radio waves and other factors may cause accidental operation and accidents.

3. Please do not use this device near medical devices, as radio waves and other influences may cause malfunctions in pacemakers or other medical electronic devices.

4. Please do not use this machine in crowded carriages, noisy places, or in other medical facilities.

Please do not use near automatic control devices such as automatic doors and fire

Warning:

Please follow the following precautions to avoid death or serious injury caused by fire, electric shock, heat, fire, etc. Please do not touch the leaking liquid of the charging battery directly with your hands. If the liquid accidentally enters the eyes, to avoid the possibility of blindness, please do not rub the eyes and immediately rinse thoroughly with water before seeking medical treatment. If the leaked liquid accidentally touches the body or clothes, to avoid possible burns or other injuries, please wash with water immediately. If skin inflammation or other injuries occur, please seek medical treatment in a timely manner.

Please use the included USB Type-C accessory for charging. Damage, battery leakage, overheating, and other situations may cause fire or other injuries, causing pollution and damage to the surroundings. Do not disassemble this machine on your own to avoid malfunctions or electric shock. If you need to replace the rechargeable battery, contact internal accessories, repair, etc., please consult the after-sales service center or the specialized store at the time of purchase in a timely manner. Please do not expose this device to high temperatures or around heating equipment, such as near fires, direct sunlight, or in high-temperature areas such as the interior of cars. Keep and place batteries (battery packs or combination batteries) must not be exposed to overheating environments.

Free maintenance policy:

During normal use during the warranty period, we will provide free repair according to this manual.

Product warranty:

Warranty terms
This product has a one-year warranty period from the date of purchase
The products under warranty can be repaired with this warranty certificate and a valid sales certificate when they meet the following terms
1. Your device must be used correctly according to the product manual;
2. This warranty card is not applicable to faults or damages caused by human factors, accidents (fire, external pressure, falling, etc.) or natural disasters (earthquakes, typhoons, lightning, etc.);
3. This warranty card will not be renewed after it is lost. Please keep it properly together with the sales voucher

Product Name:	
Model:	
Purchase time:	
Name:	
Contact phone number:	
Purchase location:	
Dealer Name and Address:	

Please keep this certificate properly. If your equipment needs warranty service, please contact the distributor of Your Sales Society.

This device complies with part 18 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 18 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the

			Instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: — Reorient or relocate the receiving antenna. — Increase the separation between the equipment and receiver. — Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. — Consult the dealer or an experienced radio/TV technician for help. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction
--	--	--	---