

Camera TV Synchronization User Manual

1, Please open the package and check if all the accessories are complete.


A: Accessory parameters:

Host x1, LED light strip x1, USB cable x1, tape measure x1, installation manual x1, double-sided adhesive tape x1, lint-free cloth x1, alcohol pad x1, remote control x1
Host x1, LED light strip x1, USB cable x1, tape measure x1, installation manual x1, double-sided adhesive tape x1, lint-free cloth x1, alcohol pad x1, remote control x



2. Input voltage for the product: 5V 2A

2. Function diagram of remote control buttons:A,

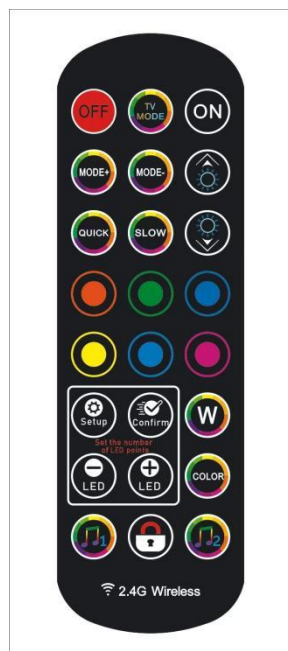

Camera TV Synchronization User Manual

3 , Please use the data cable provided by the manufacturer strictly in accordance with the requirements. Please use the data cable provided by the manufacturer strictly in accordance with the requirements.

4 , Please use this device in accordance with the installation manual. Otherwise, there will be errors in the experience.

Note: This device has passed the test and complies with the limit requirements for Class B digital devices as stipulated in Part 15 of the FCC regulations. These limits are designed to provide reasonable anti-interference protection for residential installations. This device generates, uses, and may radiate radio frequency energy. If not installed and used correctly, it may cause harmful interference to radio communications. However, there is no guarantee that no interference will occur in a specific installation. If this device does cause harmful interference to radio or television reception (which can be determined by turning the device on and off), it is recommended that users try one or more of the following methods to solve the interference problem:

A: Adjust or move the position of the receiving antenna.

B: Increase the distance between the equipment and the receiver.

C: Connect the device to a socket in a circuit that is different from the one connected to the receiver.

D: Please consult the dealer or experienced radio/TV technicians for assistance.

5 Important Notice or Warning:

A: It is strictly prohibited to connect a power supply with a voltage higher than 5V; otherwise, the device will be damaged. This device requires an input voltage of 5V. It is strictly prohibited to connect a power supply with a voltage higher than 5V; otherwise, the device will be damaged.

B: This device is not waterproof or fireproof. Please keep it away from water sources and fire sources.

C: Without the explicit approval of the manufacturer responsible for product compliance, disassembling or repairing the device privately may deprive the user of the right to operate the device.

Installation Guide:

1, Remove the dust-free cloth and wipe the TV screen clean. Take out the dust-free cloth and wipe the TV clean.

Camera TV Synchronization User Manual



2,Take out the measuring tape and measure the size of the TV set.Take out the measuring tape and measure the size of the TV set.



3,Remove the small adhesive tape and stick it in the middle of the TV's width as the positioning point (assuming the width is 100 cm, then stick it at the 50 cm position)


Camera TV Synchronization User Manual



4, Remove the LED light strip and start attaching it from right to left along the center positioning point. Follow the illustration to attach it from right to left (note: please first peel off the back adhesive of the LED light strip before attaching, be careful at the turning and cornering points, and do not damage the LED light-emitting diodes, otherwise it will cause the light-emitting diodes to stop working. If you need to cut off the excess LED light strip, be sure to cut off the power supply first!).



Camera TV Synchronization User Manual

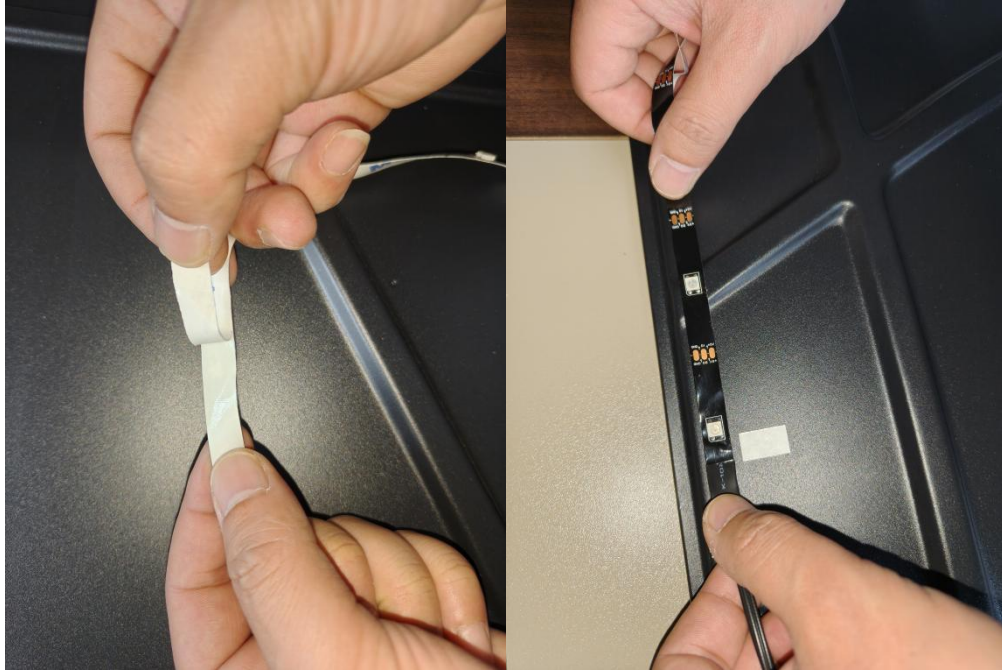


Starting from the middle and moving to the right, five arrow directions need to be made.



Camera TV Synchronization User Manual

When pasting at the corner, please be careful not to damage the LED light beads.


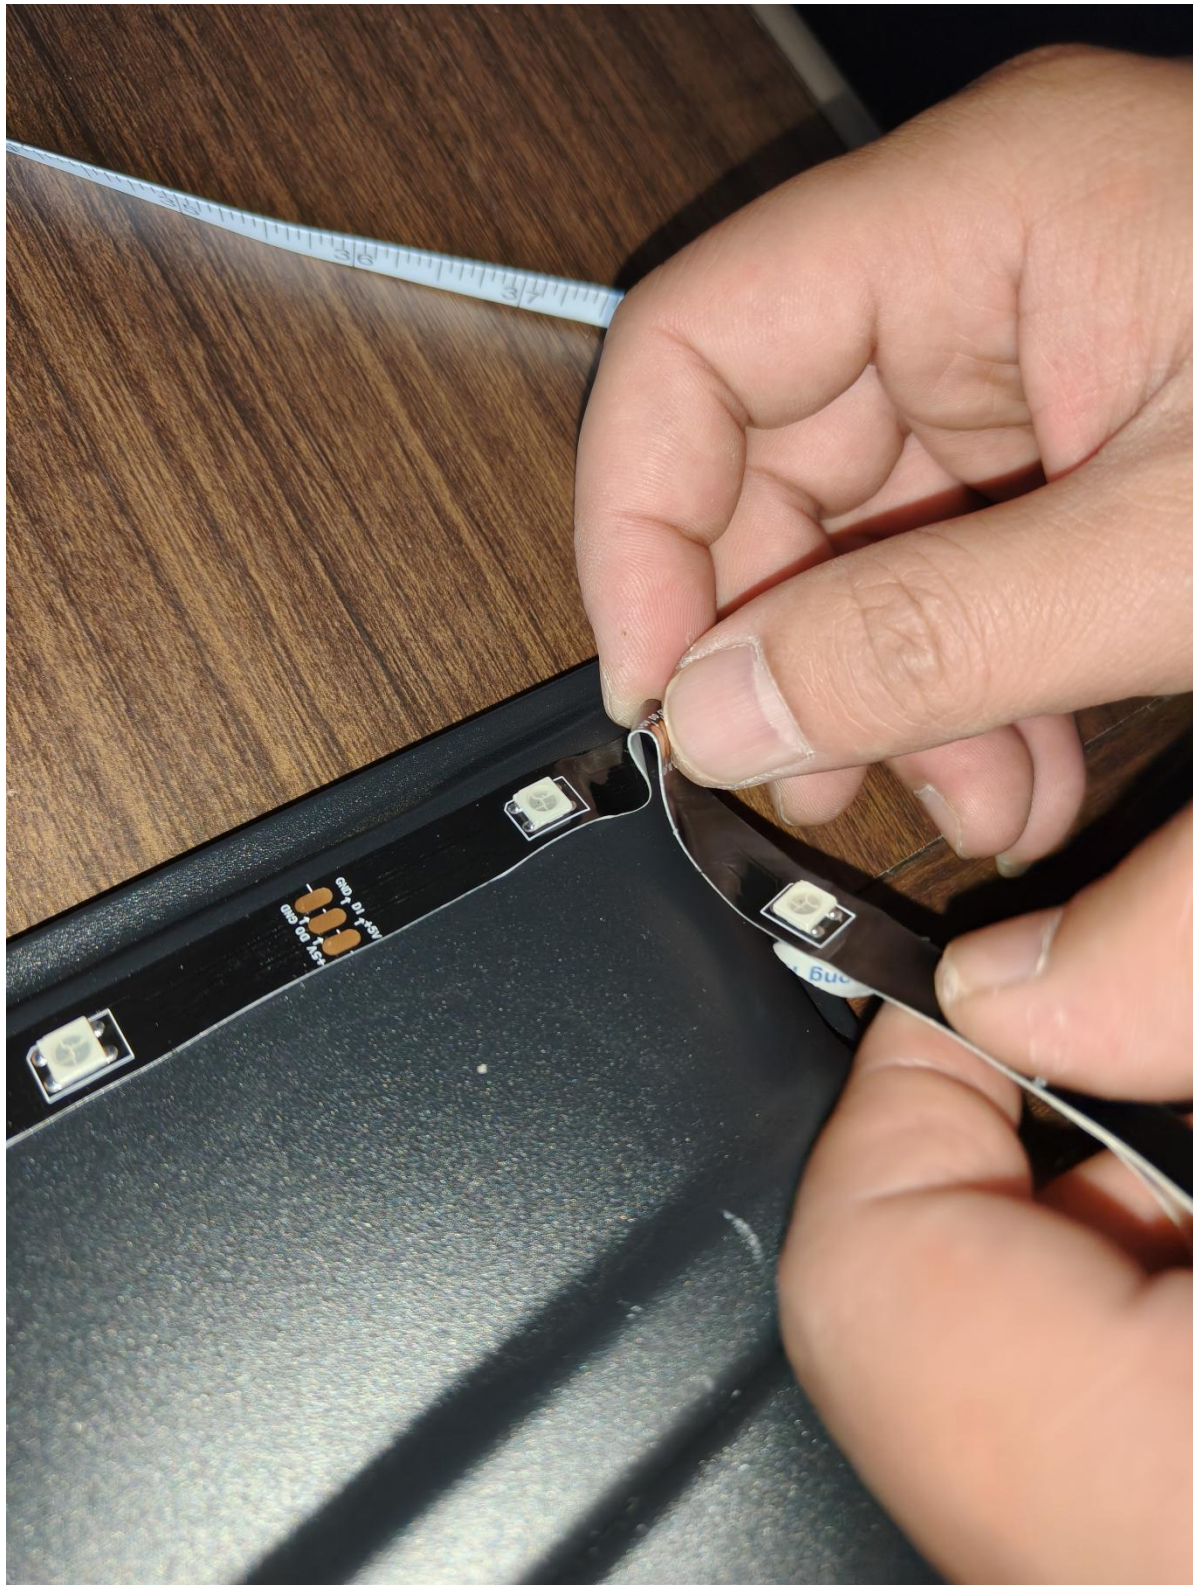


Camera TV Synchronization User Manual



Camera TV Synchronization User Manual

Complete the installation of the LED light strips for each side. If there are any excess LED light strips that need to be cut, please cut the remaining strips from the cutting position. Note: Before cutting, please turn off the power supply first. Do not cut while the power is on!

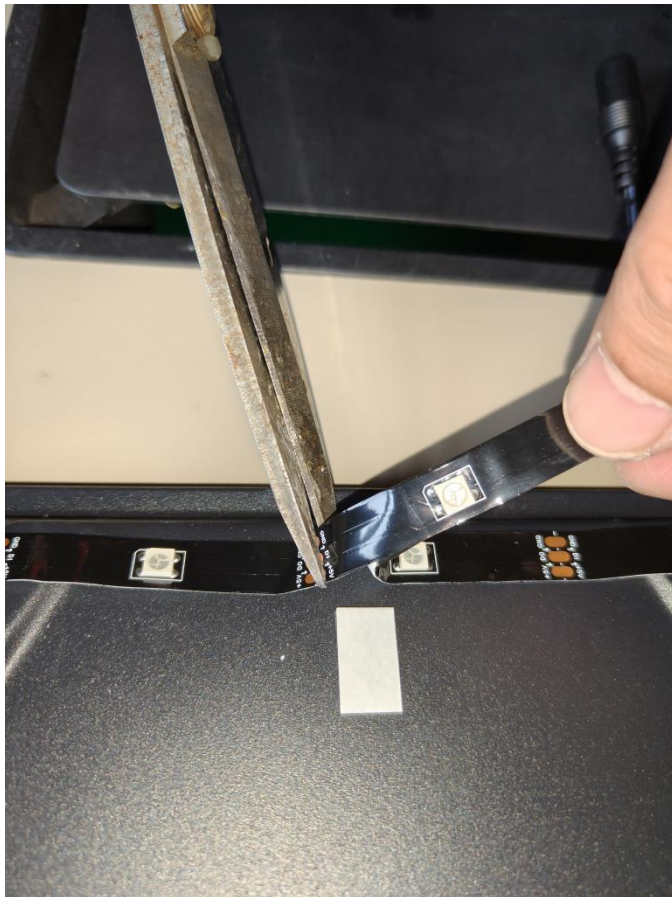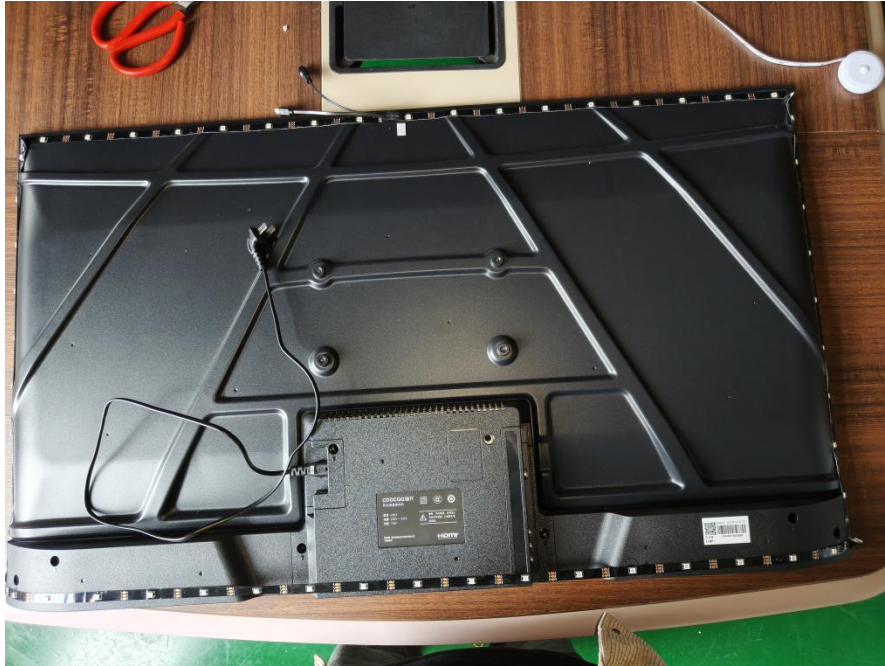

5, Remove the main unit and place it in the exact center of the entire screen size that was previously measured. Then insert the Type-C cable as shown in the picture:


Camera TV Synchronization User Manual



6, Please make sure to place the equipment flat and at a 90° angle on the top surface of the TV. If the angle is incorrect, it will affect the experience. Create two comparison pictures - one showing it placed properly and the other showing it not placed properly. Mark a check mark for the correct one and an X for the incorrect one. Add a paragraph of text on the picture: There must be no gaps here. It must be perfectly flat and closely attached to the TV, forming a 90° parallel angle.



Camera TV Synchronization User Manual

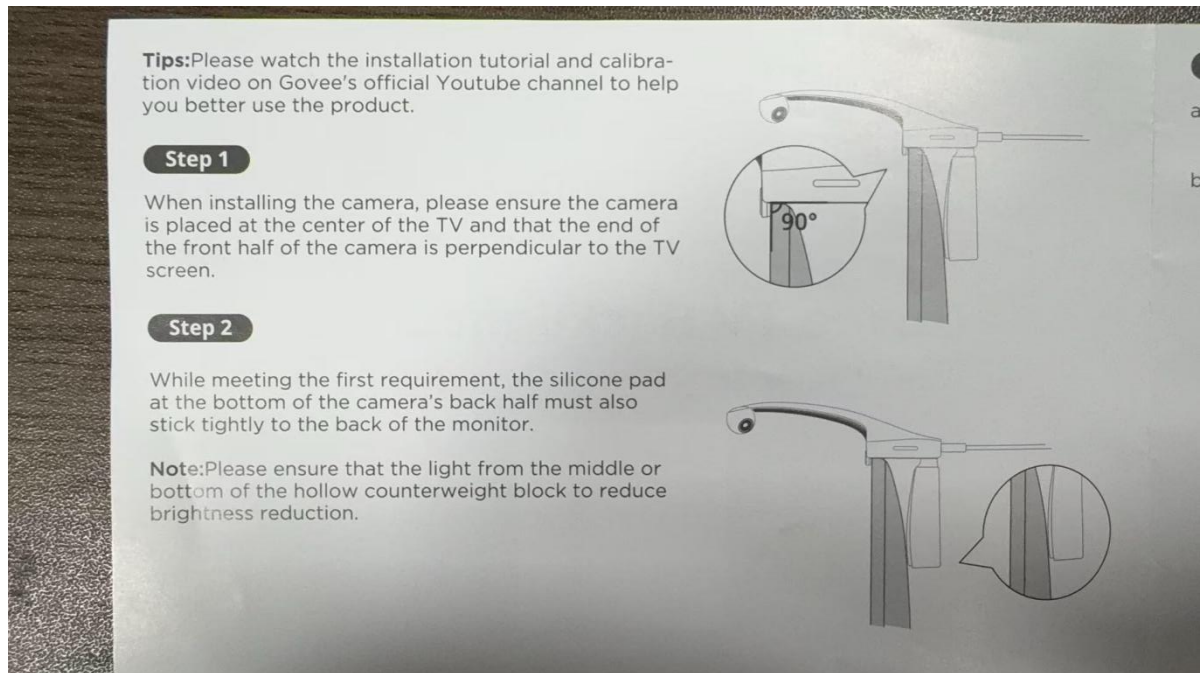


Incorrect placement diagram of equipment



7,After completing the above steps, remove the USB cable and connect it as shown in the picture to the USB power supply:

Camera TV Synchronization User Manual

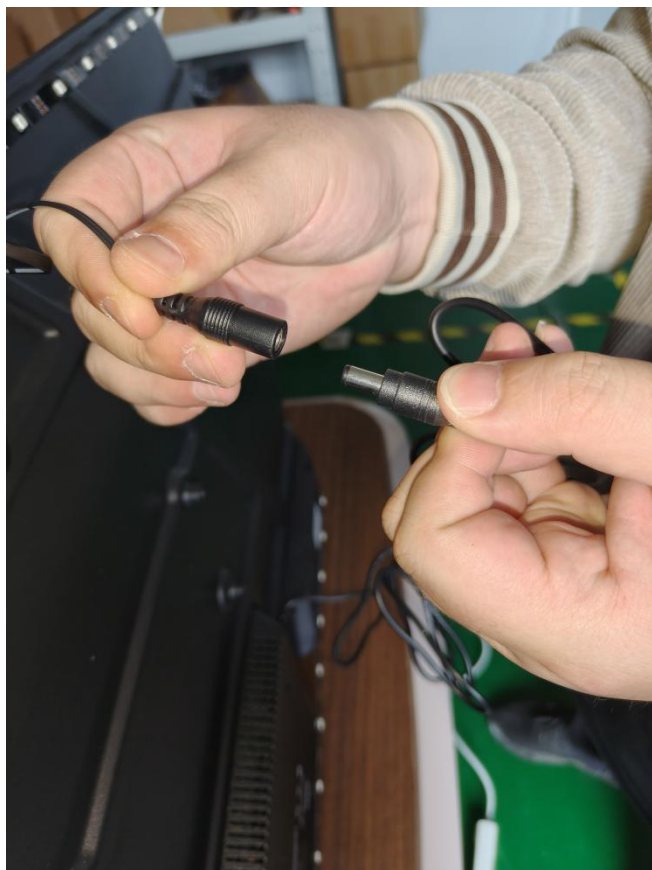

Suitable for various USB interfaces

Power by USB

can be used any devices with 5v adapter



USB connector



Power bank



Computer



Computer host




TV

7, Remove the product remote control and follow the instructions below to set the appropriate number of LED light diodes for your TV. A total of five positions need to be set for your TV, each with a different color, to help you distinguish them: Position 1 is blue, Position 2 is purple,

Camera TV Synchronization User Manual

Position 3 is yellow, Position 4 is cyan, and Position 5 is red.

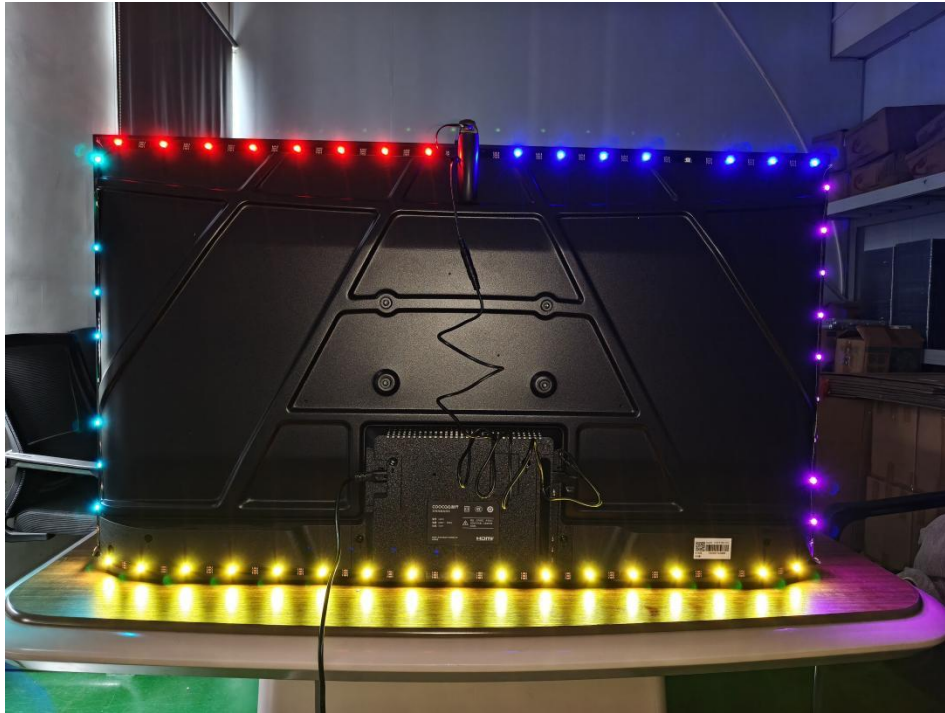

Operation method: Press the "Settings" button on the remote control (picture of the settings button), then press the "LED+" button (picture of the remote control LED+ button) each time. Each press will increase the number of light-emitting diodes by three. If the current number exceeds the limit, press the "LED-" button to reduce the number (picture of the remote control LED- button). Keep the number of light-emitting diodes at exactly the right amount for the current position. To set the number of light-emitting diodes for one position, press the "Confirm" button (picture of the confirm button) to proceed to the next position setting. (Note: After setting one position, press "Confirm" to proceed to the next position adjustment. Repeat this process until the five positions show different colors to complete the setting.)



Camera TV Synchronization User Manual

Detailed steps for setting the number of LED light-emitting diodes:

Press the setting key on the remote control to start the setting process



Then increase the points by pressing the LED + button.




Camera TV Synchronization User Manual

Due to the different sizes of TV screens, if there are multiple different color LED dots, please press the "LED-" button to reduce the number of LED dots. Make sure that only one color is displayed on one side.




Press the "Confirm" key again to proceed to the next position setting.

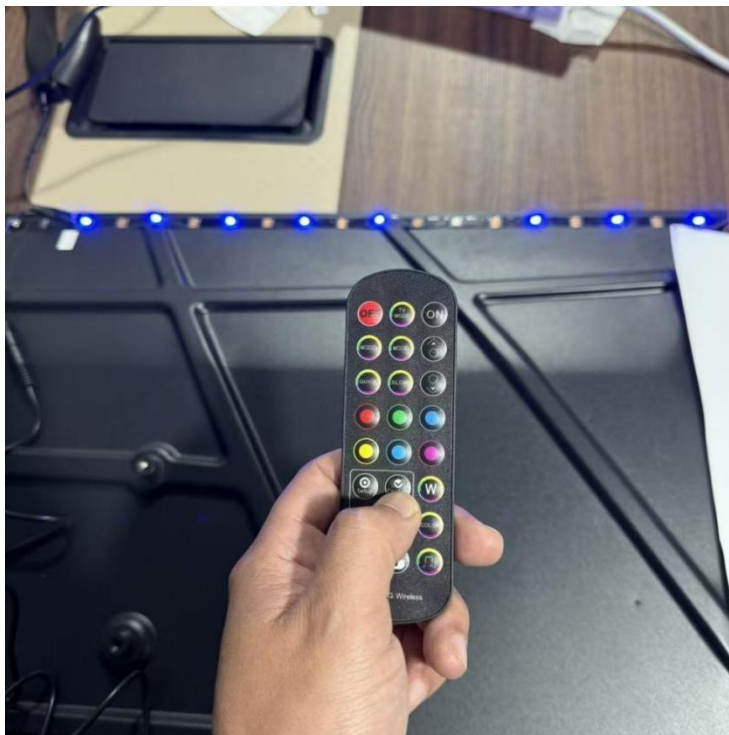

Camera TV Synchronization User Manual

And so on, in this way, until all five positions are set up.

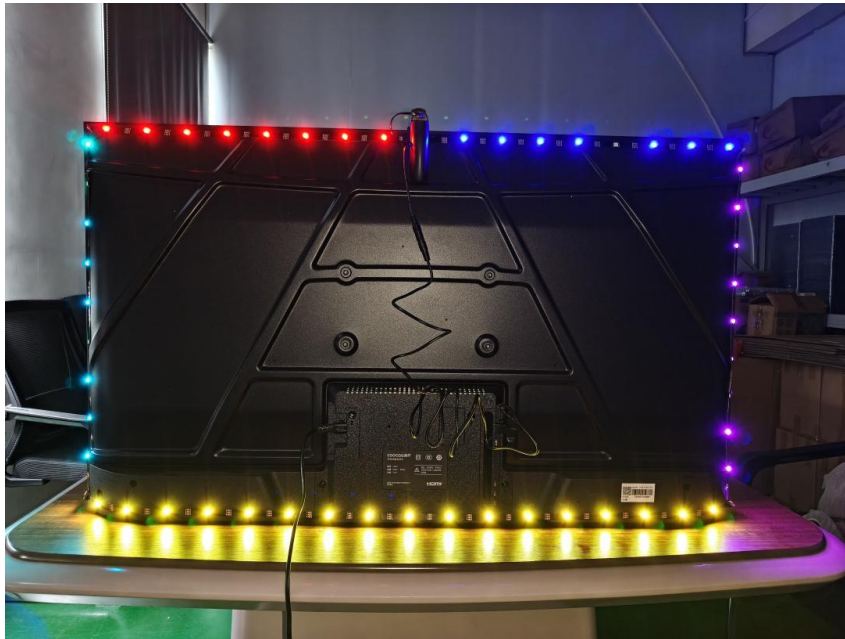

Press the TV mode button to activate the TV color synchronization acquisition mode.



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

The devices has been evaluated to meet general RF exposure requirement, the device can be used in portable exposure condition without restriction