 


说明书尺寸: 400x120mm (5折页)  
双面印刷  
材质: 80g 双胶

Jishane


User Manual

All-in-1 Selfie Stick Tripod



ASS-1


Overview

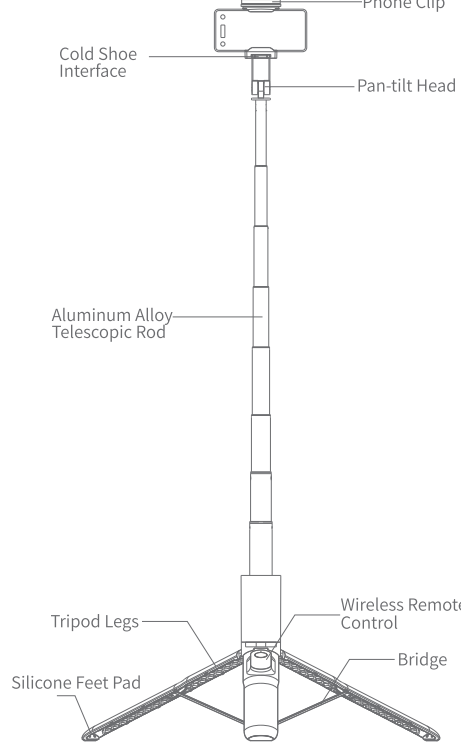


Product Parameters

|                    |                               |
|--------------------|-------------------------------|
| Model              | ASS-1                         |
| Carry Size         | 11.97 in /30.5cm              |
| Max Height         | 61 in /155cm                  |
| Min Height         | 12.6 in /32cm                 |
| Leg Length         | 8.27in/21cm                   |
| Footprint          | 0.126㎡                        |
| Pole Sections      | 6-section                     |
| Weight             | 388.5g                        |
| Remote Battery     | CR1632                        |
| Remote Distance    | ≤33 ft                        |
| Phone Holder Width | 4.5cm-10cm/1.75in-4in         |
| Material           | Aluminum + Modify Nylon PA6/6 |
| Compatible Phones  | iOS5.0/Android 4.3 and above  |


Product Size

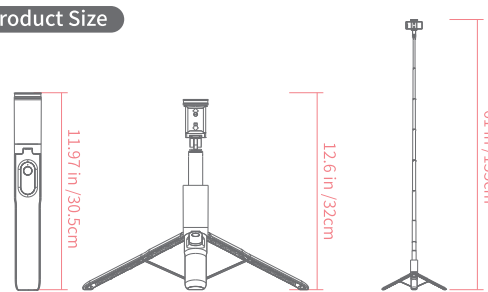


About Phone Holder

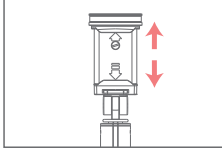


Sliding Elevation Design

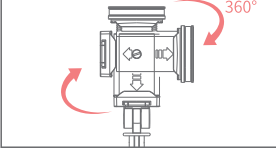

360° Rotation Angle, adjust the horizontal or vertical screen shooting.

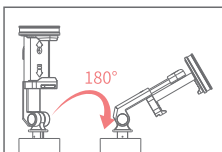


180°Adjustable Pan Head

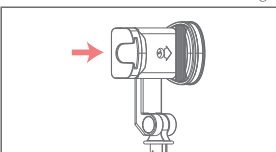

Cold Shoe Mount

How to open it as a tripod

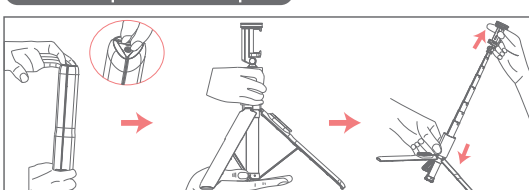


1. Please hold the top of the tripod with one hand and use two fingers of the other hand to push outwards from the triangular groove at the bottom of the tripod.

2. One hand holds the bottom and press down from the top with the other hand, then the three legs of the tripod will automatically unfold at the same time.

3. After the three legs are fully extended, pull up the telescopic rod to adjust to a suitable height.

Remove and Install the Remote Control

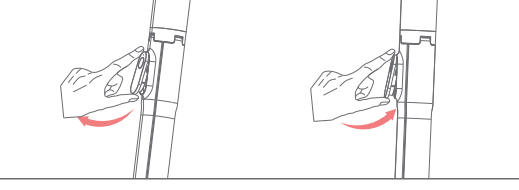

1. Slide down from the top with your thumb.

2. Remove the remote control from below.

3. Align the upper part of the remote control with the upper part of the mounting groove, secure it, and then push it upwards.

Wireless Remote Pairing Steps




1. Remove the plastic film that protects the battery from discharge.

2. Press the power button of the remote for 2s to turn on the remote control, then the blue light will flash.

3. Turn on your phone Bluetooth, and search for "ASS-1" device to connect it.(The blue light will turn off after being paired successfully.)

封面

How to Replace the Battery of the Remote

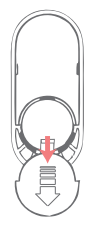

Please install or replace the battery with the positive electrode facing up.

Important

Contact us if you have any problem with the connection: [jeffery@jishane.net](mailto:jeffery@jishane.net)

Q&A

Q:The remote does not work.

A: 1.It may be that the cattery is out of power, please replace the battery.

2.The insulating plastic film of the battery has not been removed, please take it off.

If the above two methods still do not work, please contact our after-sales email: [jeffery@jishane.net](mailto:jeffery@jishane.net)

We will reply you within 24 hours.

Q:Can not connect the Bluetooth.

A: 1.Please turn off the remote and turn it on again.

2.Please unpair the bluetooth of this remote on your phone and pair it again.

3.If you can't find the remote control's Bluetooth on your phone, please restart your phone and try again.

Warranty

We strive to build our products with the highest attention to detail and craftsmanship.

We are happy to offer a 12-month hassle-free warranty on all our products as we continue to support our customers and make amazing products.

Please contact us if you have any questions about our devices.

Warnings

1. Be careful your hands when opening or closing the tripod.

2. Keep away the tripod from the heat sources or fire sources, such as electric heaters, microwave ovens, ovens, water heaters, stoves, candles or other places that may generate high temperatures.

3. This tripod and its accessories may contain some small parts, please keep the product and its accessories out of the reach of children. Children can inadvertently damage its accessories, or swallow small parts that could cause choking or other hazards.

4. The tripod should not be used near water, such as a bathtub, swimming want fauret or basin, which may cause risks.

5. Avoid placing the tripod in water, and do not use it close to chemicals or corrosive liquids and gases.

6. The Bluetooth remote control may be interfered by external sources such as transformers, motors or other electronic devices. Keep these disturbed places as far away as possible during use.

7. Use this machine only for its intended use as described in this manual.

Battery Statement

1. The use of unapproved or incompatible batteries may cause fire, explosion or other hazards.

2. Do not expose the battery to high temperature or around heating devices, such as sunlight, heaters, microwave ovens, ovens or water heaters.

Overheating of the battery may cause an explosion

3. Do not throw the battery into the fire, otherwise it will cause the battery to catch fire and explode.

4. Please dispose of batteries according to local regulations, and do not dispose of batteries as household waste.

5. Do not allow children or pets to swallow the battery to avoid injury.

FCC Warning:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

--Reorient or relocate the receiving antenna.

--Increase the separation between the equipment and receiver.

--Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

--Consult the dealer or an experienced radio/TV technician for help.

RF exposure:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Disclaimer

Please using the item under the guide of the caution/note.

Do not use the item in situations or with equipment that requires extremely high reliability or safety such as the following:

- Medical equipment that directly affects human life.

- Equipment that may result in personal injury (such as equipment directly related to the operation and control of aircraft, ships, railroads, elevators, etc., or equipment that may be subject to constant vibration, such as automotive and marine equipment).

The product is not for use in high-risk activities. The product is not designed or intended for use in hazardous environments requiring fail-safe performance, or for use in any circumstance in which the failure of the product could lead directly to death, personal injury, severe physical or property damage, or that would affect the operation or safety of any medical or life support device (collectively, "High-Risk Activities").

We expressly disclaims any express or implied warranty of fitness for High-Risk Activities. We does not authorize use of any product in any High-Risk Activities. Any such use is improper and is a misuse of the product.

CE

RoHS

Recycle

FC

Made in China