

CONTACT US

Email

North America/United Kingdom: support@aurzen.com
Europe: support.eu@aurzen.com

Phone

+1(667) 218-4830

EAZEN

D001

USER MANUAL

North America/United Kingdom: support@aurzen.com | Europe: support.eu@aurzen.com

+1(667) 218-4830

V1.02

SCAN QR CODE FOR MORE LANGUAGES

Deutsch

Français

Italiano

Español

CONTENTS	
1. TROUBLESHOOTING GUIDE	01
2. IN THE BOX	02
3. NOTICE	03
4. PRODUCT OVERVIEW	04
5. QUICK START	05
6. PROJECTOR CONNECTION AND INPUT SOURCE	09
7. WIFI CONNECTION	11
8. SCREEN MIRRORING	12
9. BT CONNECTION	13
10. HOME SHARE	14
11. SETTINGS	15
12. PROJECTION DISTANCE AND SIZE	16
13. EXPLANATION OF APPS	18
14. SPECIFICATION	21

1. QUICK START

1. Projector Installation

Note:

Whichever installation option you select, please make sure:
* To go to Homepage > Settings > Projection to select the corresponding projection mode, so the images can be projected correctly.
* Mounting Screw 1/4" (not included)

2. Power On/Off

3. Setup Wizard

Follow the setup wizard to choose your preferred language, select the correct region, establish a WiFi connection, and access the homepage.

Tip:

To ensure successful WiFi search, please select the correct region.

Image Scaling

Go to Homepage > Settings > Zoom to reduce or enlarge the image size between 50% and 100%.

5. Play Content from Officially Licensed Apps like Netflix, Prime Video and YouTube

Go to the Homepage and select your preferred platform via the shortcuts on the remote, then log in to your account to play the corresponding contents.

Note:

It is not necessary to have a successful WiFi connection, but it is important to ensure that the WiFi is turned on in your Android device.

Step 2: Go to Homepage > My Apps > ScreenCast to enter the interface below.

Step 3: Activate the Multi-ScreenSmartView/Wireless Display function on your Android device and search for the projector.

Step 4: Choose EAZZE_P0 from the list, and once the connection is successful, the content on your Android device will be mirrored onto the projector screen or wall.

For iOS System

Step 1: Connect the projector and your mobile device to the same router's WiFi or directly connect your projector to the mobile device's hotspot.

Note:

* When you are using the mobile device's hotspot, the content will be mirrored using cellular data.
* Copyrighted content from Hulu, Disney, or other similar streaming services CANNOT be wirelessly mirrored or cast due to copyright restrictions.

Step 2: Go to Homepage > My Apps > APP assistant. Then, select ScreenShare and press OK on the remote to download and install the ScreenShare app.

Tip:

* You will need to download the ScreenShare app for the initial setup. Afterward, you can skip this step.
* After downloading the ScreenShare app, please reboot the projector to ensure the proper functioning of the app.

Step 3: Go back to the My Apps page, and then launch the ScreenShare app to enter the following page.

2. Connect to an External BT Speaker

In addition to using the wired 3.5mm audio output port, you can also connect BT speakers or BT Headphones to this projector via a BT connection.

Step 1: Turn on your BT device and make it ready for a BT connection.

Step 2: Go to Homepage > Settings > BT to scan available BT devices, then select your BT device and pair it with the projector.

IMPORTANT:

Compared with the wired connection to a speaker, BT wireless connection spends more time in particular processing digital audio data, converting said data to an audio signal, and streaming the signal. There may be a delay or slight lag on audio due to signal interference.
As a result, the sound on the speaker may not be in sync with the image on the projector, especially when you are using wireless screen mirroring with WiFi and BT wireless connection at the same time.
If you are experiencing this situation, please check the following options to improve audio quality:
* Instead of using wireless screen mirroring with WiFi and BT wireless connection at the same time, we recommend using wired screen mirroring and BT connection or using HDMI connection via the provided HDMI cable and BT connection simultaneously. If you still want to use wireless screen mirroring, it is recommended to output the audio via a wired speaker.
* Move your BT device closer to the projector.
* Keep the projector and your BT device away from other BT devices to avoid interference.
* You may be able to adjust the latency (lag) on your device which is playing the video. The way to adjust the latency varies with different devices; please consult it from the device manufacturer.
Due to the compatibility issue between BT speakers/headphones and the projector, few BT devices may not be paired with the projector via BT wireless connection. Please contact us via email for further assistance.

PROJECTION DISTANCE AND SIZE

* The recommended projection distance varies with different projection contents. Please adjust the distance between the wall/screen and the projector as needed.
* Ambient darkness will improve the clarity of the projected images.
* For optimal image quality, we recommend a projection size of 50 to 80 inches.

EXPLANATION OF APPS

1. You can download the apps on the APP STORE platform, but you can log into your account to watch the content directly.

RECYCLING

This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment. User has the choice to give his product to a competent recycling organization or to the retailer when he buys a new electrical or electronic equipment.

The symbol indicates class I equipment

The symbol indicates AC voltage

The symbol indicates DC voltage

For indoor use only

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

The mains plug is used as the disconnect device. The socket outlet shall be installed near the equipment and shall be easily accessible.

Euro Compliance Statement: Shenzhen Neuzoo Optoelectronics Co., Ltd. hereby declares that this device is in compliance with the essential requirements and other relevant provisions of the Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:
https://cdn.shopify.com/files/1/07205/199/892/Neuzoo_2017_Statement_Declaration_of_Conformity.pdf 1714014385

24

EN

8. How to solve the black spot in the picture?

* It can be easily removed. Please scan the QR code on the back of the remote to get the video or contact us for a video to solve it.

9. Auto Focus/Auto Keystone is not working

* Please ensure the projector is in factory settings and try again. If the issue still persists, please send a video to our service team by email for assistance.

10. The picture is not bright enough.

* To enjoy the best viewing experience, we suggest using it in a dark environment. The darker the room, the better the image.

IN THE BOX

Projector

Remote (Batteries Not Included)

Power Adapter

User Manual

NOTICE

Recommended

NOT Recommended

PRODUCT OVERVIEW

4. Image Adjustment

Focus

1. Auto Focus

When the projector detects shaking/rapid movement, it will automatically adjust the image quality.

Tip:

You can go to Homepage > Settings > Focus to enable Auto Focus After Boot, allowing the projector to automatically adjust the focus after it is powered on.

2. Electric/Manual Focus

You can also press the Focus button on the remote or go to Homepage > Settings > Focus > Manual Focus to sharpen the image focus until the blurry image becomes clear.

Keystone Correction

Note:

Upon powering on the projector, it will automatically correct any keystone distortion within a range of vertical/horizontal ±45°. A slight projection at 20 degrees has virtually no impact on the resolution, while between 20 and 45 degrees, there may be a slight impact.

1. Auto Keystone Correction

When the projector detects shaking/rapid movement, it will automatically correct the keystone distortion.

Tip:

You can enable more automatic features by going to Homepage > Settings > Keystone
* Auto Correction After Boot: Automatically corrects vertical distortion after the projector is powered on.
* Auto Screen: Automatically adjusts the projected image to match your screen.
* Auto Avoid: Automatically detects and avoids obstacles in specific areas.
In case the Auto Avoid/Auto Screen is not performing optimally, you can achieve the desired effect by adjusting the keystone/focus.

2. Manual Keystone Correction

Go to Homepage > Settings > Keystone > Four Points Correction to manually correct the image shape by four points.

Note:

For gaming, a wired HD connection is recommended due to faster processing and reduced audio-visual delays compared to wireless screen mirroring.

3. AV Connection

To connect a device with an AV output port to the projector, use the AV cable (not included) to connect it to the projector's AV input port. Then go to Homepage > Inputs > AV and select AV.

4. Wired Speaker and Headphones Connection

This option is not required to select any input source.

Step 3: Launch a video player App on your mobile device and select a video to play.

Step 4: Tap to search for the projector and select EAZZE_P0 to connect. The contents on your device will be cast to the wall/screen.

Tip:

When you cast a video from your mobile device, the video will only be displayed on the projected screen and you can still use your mobile device without interrupting the video or showing any of your other content.

BT CONNECTION

1. Use as A BT Speaker

It is possible to use this projector as a BT speaker by connecting your mobile device to it through a BT connection.

Tip:

Ensure the projector's BT is enabled by going to Homepage > Settings > BT.

Step 1: Go to Homepage > My Apps > BT Speaker to make the projector ready for a BT connection.

SETTINGS

Network

Connect the projector to a working WiFi network.

Projection > Select the appropriate projection mode to ensure accurate image projection.

Keystone > 1. Enable the projector to automatically correct the keystone after it is powered on.
2. Enable the projector to automatically correct the keystone after it is moved.
3. Enable the projected image to automatically match the screen.
4. Enable the projector to automatically avoid obstacles.
5. Correct the keystone manually.

Zoom > Modify the image size between 50% and 100%.

Focus > 1. Enable the projector to automatically adjust the focus after it is powered on.
2. Enable the projector to automatically adjust the focus after it is moved.
3. Adjust the focus manually.

About > 1. Check version info, license info, and device temperature.
2. Rename the projector.

Unit Dimension

9.1x6.9x3.2 inches (231.5x175x82mm)

Power Supply

DC 21V±2.5VA

Photo Format Supported

JPG/PNG/BMP/GIF/JPEG

Audio Format Supported

OGG/AAC/MP3/FLAC/WAV

Video Format Supported

MKV/MPEG4/FLV/MOV/MP4/3GP/MP3/TS

Ports

HD In x 1 / USB x 2 / Audio Out x 1 / AV In x 1

Mounting Screws

1/4"

Screw Number

1 (not included)

FCC Statement

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.

RECYCLING

This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment. User has the choice to give his product to a competent recycling organization or to the retailer when he buys a new electrical or electronic equipment.

The symbol indicates class I equipment

The symbol indicates AC voltage

The symbol indicates DC voltage

For indoor use only

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

The mains plug is used as the disconnect device. The socket outlet shall be installed near the equipment and shall be easily accessible.

Euro Compliance Statement: Shenzhen Neuzoo Optoelectronics Co., Ltd. hereby declares that this device is in compliance with the essential requirements and other relevant provisions of the Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:
https://cdn.shopify.com/files/1/07205/199/892/Neuzoo_2017_Statement_Declaration_of_Conformity.pdf 1714014385

24

EN