 


TCL

 
A65K

3.1.2 Channel Dolby Atmos Sound Bar with Wireless Subwoofer

Quick Start Guide

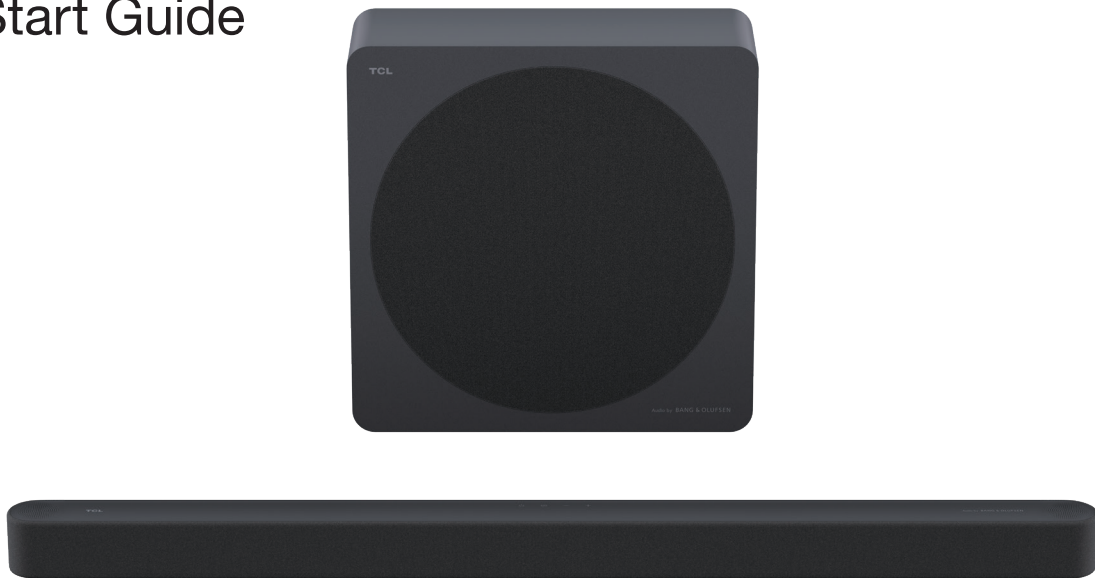

Register your TCL Sound Bar to receive the latest news on product releases, promotional offers, and more!*

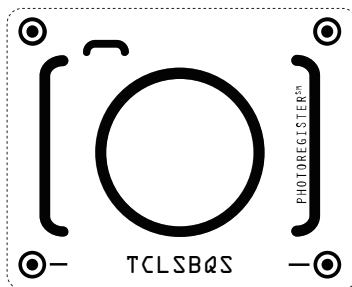

TEXT TO REGISTER

Text a photo of the camera icon to 71403

Or register online at register.tcl.com

Need help? Visit photoregister.com/help or text HELP to 71403

Enjoy exclusive benefits with registration:



Expedited support and service



Insider tips on your Sound Bar



Exclusive offers and promotions



Verification of ownership

*Only Available to North America Customers

2

What's in the box

Make sure you read all the safety information before you use this product.

User Manual can be found at www.tcl.com on the specific product page in the "Download" section.

 


Warning:


To avoid the danger of suffocation, keep plastic packaging away from pets, babies, and children. Do not use packaging bags in cribs, beds, carriages, or playpens.

Note:

Figures and illustrations in this QSG are provided for reference only and may differ from actual product appearance. Product design and specifications may be changed without notice.



Sound Bar

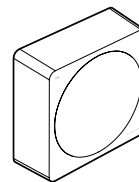 

Subwoofer



Power Cord x 2



 
Power Adapter



HDMI Cable




Remote Control




**Wall Mount Kit
(for Sound Bar)**



 Quick Start Guide




Warranty Card

 

Wall Mount Template

Sound Bar

 - ① **Power button:**
Short press: power on/power off
Long press: power off
- ② **Source button:**
Short Press: Switch input sources
(HDMI eARC/USB/Bluetooth)
- ③ **Volume buttons:**
Press to increase or decrease the volume level
- ④ **LED display:**
Display the status of the sound bar
Receive signal from the remote control
- ⑤ **Wall-mounted bracket slot**
- ⑥ **HDMI eARC connector**
- ⑦ **Power Adapter Input Interface**
- ⑧ **USB Type A connector**

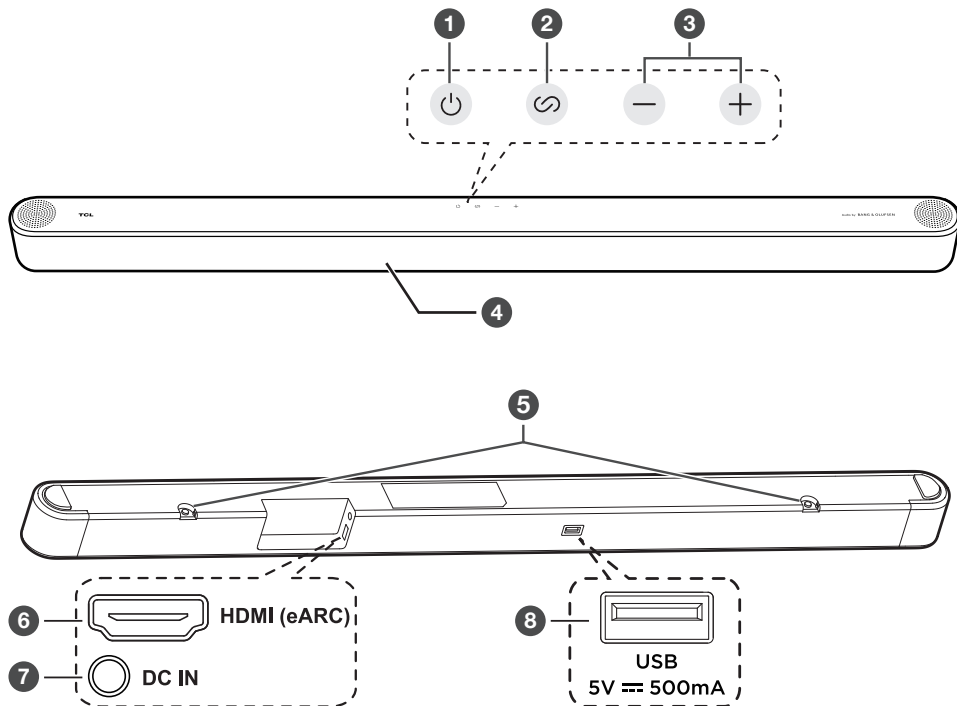**Note:**

- **Factory reset:** Press and hold , , and on the sound bar panel simultaneously for 10 seconds until the LED display shows "FACTORY RESET", then the device will automatically restart.
- **View version:** While the device is powered on or in standby mode, press and hold and on the sound bar panel for 10 seconds, or press , , and on the remote control (please follow the sequence and keep the interval within 2 seconds).
- **Automatic standby switch:** In the powered-on state, press and hold the and on the remote control simultaneously for 10 seconds. If this function is enabled, the sound bar will enter an automatic standby state after 20 minutes without signal input.

 
Wireless Subwoofer

Short press **PAIR** to enter standby mode or turn on the device.

THE SUBWOOFER HAS BEEN PAIRED WITH THE SOUND BAR UPON FIRST USE.

In case of a problem, take the following steps to manually pair:


1. Press and hold **PAIR** on the subwoofer for 3 seconds until the indicator light above it flashes rapidly to enter pairing mode.
2. Long press **⌂** and **+** on the sound bar panel together for 10 seconds until the LED display shows "SUB PAIRING" on the sound bar.
3. When pairing is successful, the indicator light on the subwoofer turns solid, and the sound bar LED display will show 'SUB CONNECTED'.

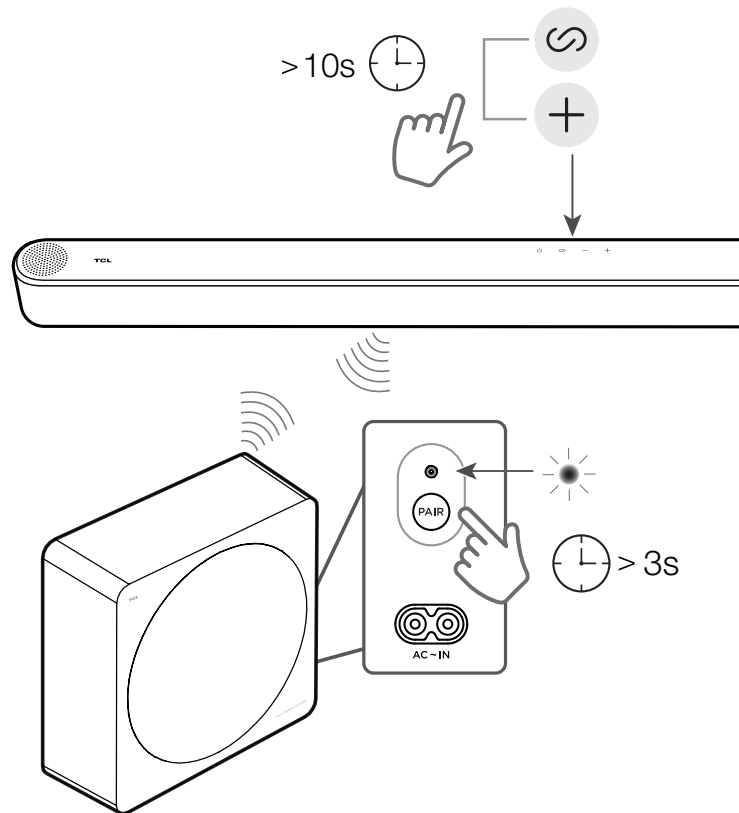

4

Sound Bar LED Display

 The Sound Bar LED display indicates various Sound Bar functions.

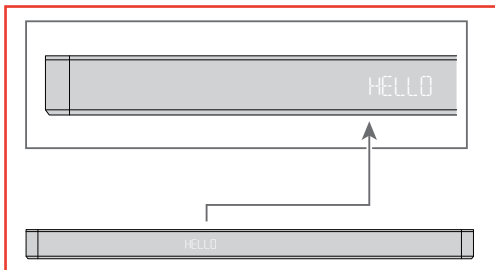

	Sound Bar Status	LED Display Status
Power	Power on	HELLO
	Power off	STDBY / SLEEP
Source	HDMI eARC	HDMI eARC / HDMI ARC
	USB	USB
	Bluetooth	BT
Bluetooth	Bluetooth mode	BT
	Pairing mode	PAIRING
Volume control	Volume level	V30
	Mute	MUTE
Audio setting	Bass (+/-)	BAS-6-16
	Treble (+/-)	TRE-6-16
	AI SONIC	POSITION 1 / POSITION 2 / POSITION 3 / OFF
	Surround Enhance (When the sound mode is set to custom)	SURR OFF / SURR LOW / SURR MEDIUM / SURR HIGH
	Voice Enhance (When the sound mode is set to custom)	VOICE OFF / VOICE LOW / VOICE MEDIUM / VOICE HIGH
Sound modes	Standard/Movie/Music/ Voice/Game/Night/Sports/Custom	STANDARD / MOVIE / MUSIC / VOICE / GAME / NIGHT / SPORTS / CUSTOM

5a

Speaker Placement

 
The ideal location for the Sound Bar is centered beneath the TV.

The ideal location for the Subwoofer is on the floor, adjacent to the TV.



Note: Do not place your Sound Bar in a location exposed to direct sunlight, heat, fire, or moisture.


Top View

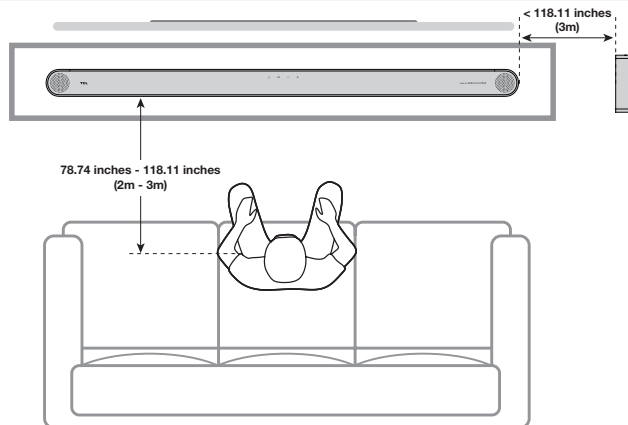

5b

Wall Mount Installation (Method A)

 Required tools:






Note:

- Do not place the soundbar in direct sunlight, high temperatures, open flames, or humid environments. Suitable mounting height: < 78.74 inches/2 meters.
- USB extension cable is not included.


Method A: Flush Wall Mounting

For flush wall mounting, it is recommended to use a suitable USB extension cable for USB playback (the exposed length of the plug after insertion must be ≤ 0.236 inches/6mm).

   1. Place the supplied wall mount template on the wall. Make sure the wall mount template is at least 2 inches/5cm below the center of the TV.
2. Use a level to check if the wall mount template is positioned correctly.
3. Securely tape the wall mount template to the wall.
4. Mark the installation holes on the wall through the template.
5. Remove the wall mount template.
6. Drill a screw hole at each marking on the wall with a depth of 1.22-1.3 inches/31-33mm.
7. Insert the wall anchors into the holes on the wall.
8. Insert the supplied screws into the drilled holes.
9. Tighten the screws, leaving a gap of about 0.12 inches/3mm between the screw head and the wall.
10. Attach the wall mount brackets to the back of the sound bar. Then insert the supplied screws into the brackets and tighten them.
11. Lift the sound bar and hang it onto the screws on the wall, similar to hanging a picture. Ensure all parts are securely seated.

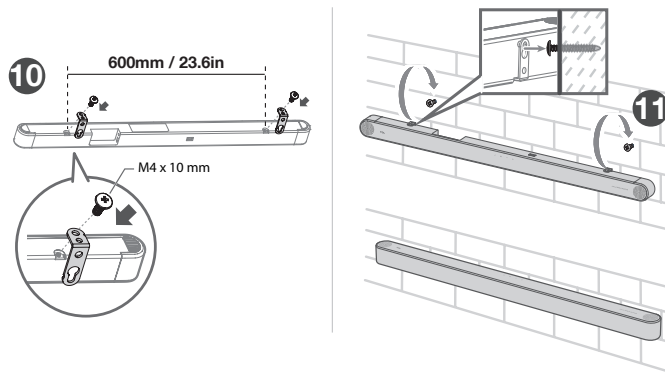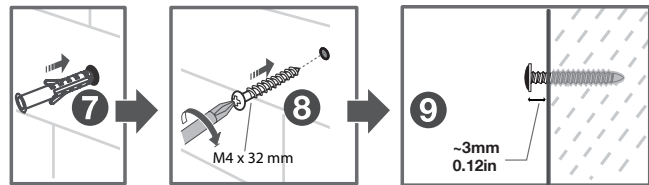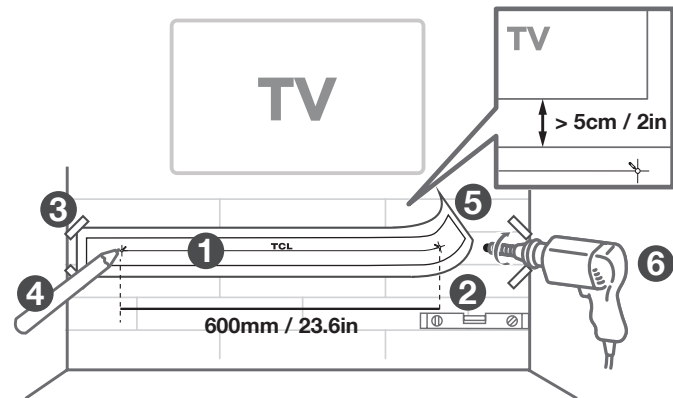

Required tools:

 


Note:

- Do not place the soundbar in direct sunlight, high temperatures, open flames, or humid environments. Suitable mounting height: < 78.74 inches/2 meters.

Method B: USB Connection (The inserted USB drive must not protrude more than 1.06 inches/27mm from the back of the sound bar to prevent it from pressing against the wall).

 - Place the supplied wall mount template on the wall. Make sure the wall mount template is at least 2 inches/5cm below the center of the TV.
- Use a level to check if the wall mount template is positioned correctly.
- Securely tape the wall mount template to the wall.
- Mark the installation holes on the wall through the template.
- Remove the wall mount template.
- Drill a screw hole at each marking on the wall with a depth of 1.22-1.3 inches/31-33mm.
- Insert the wall anchors into the holes on the wall.
- Insert the supplied screws through the wall mount brackets into the drilled holes, then tighten the screws to secure them.
- Lift the sound bar and hang it onto the wall mount brackets.
- Insert the supplied screws into the wall mount brackets and tighten them.

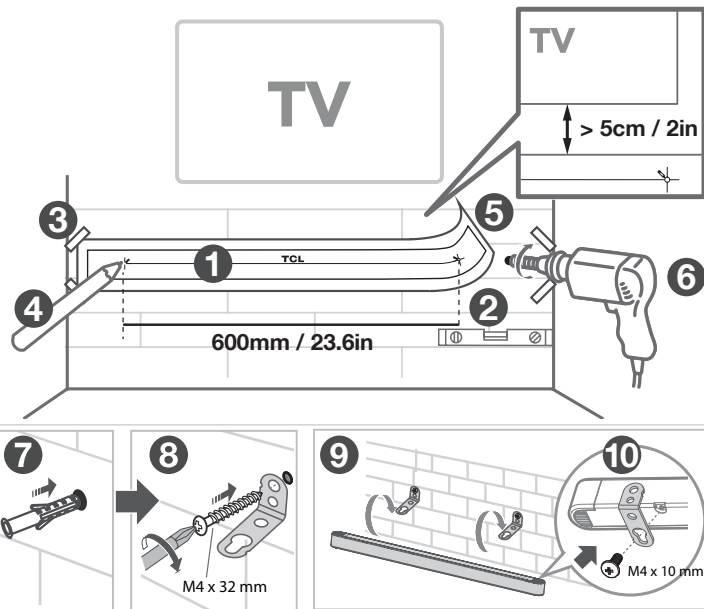


6a

Install or replace the remote batteries

Battery type: 1.5V AAA battery x 2

Battery CAUTION & Disposal Information:

 1. For best results, use alkaline-type batteries.
2. Do not mix Alkaline, Standard (Carbon-Zinc), or Rechargeable (Nickel Cadmium or Nickel Metal Hydride) batteries.
3. Always replace depleted batteries with two same brand-new batteries from the same manufacturer. Never use damaged batteries.
4. Do not use Rechargeable (Nickel Cadmium or Nickel Metal Hydride) batteries.
5. Install only new batteries of the same type in your product. There is a risk of fire or explosion if the battery is replaced by an incorrect type.
6. Do not mix old and new batteries.
7. Batteries should not be exposed to excessive heat, such as prolonged direct sunlight, open flame, or fire of any kind as it may result in an explosion, or leakage of flammable liquid, or gas.
8. Batteries should not be exposed to extremely low air pressure as it may result in an explosion or the leakage of flammable liquid or gas.
9. Failure to insert batteries in the correct polarity, as indicated in the battery compartment, may shorten the life of the batteries or cause batteries to leak.
10. Batteries should be recycled or disposed of as per state and local guidelines. Do not dispose of batteries in a fire, hot oven, or mechanically crushing or cutting a battery, which may result in an explosion.

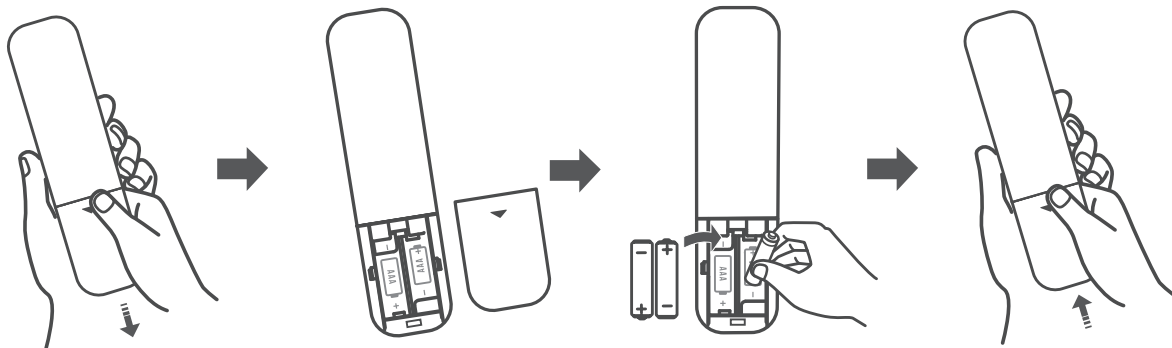

6b

Use the Remote

Note:

- ① Source: HDMI eARC/USB/Bluetooth
- ② Audio Format: PCM AUDIO/DOLBY SURROUND/DOLBY ATMOS/DTS/DTS HD/DTS:X, etc.

Short press: power on/power off
Long press: power off

Short press: mute/unmute the sound

Short press: select bluetooth mode
Long press: bluetooth pairing

Short press: switch sound mode
Standard/Movie/Music/Voice/Game/Night/Sports/Custom
(Custom mode includes adjustments for Voice Enhancement and Surround Enhancement)

 
Short press to wake up the LED display, then use the Up/Down buttons to adjust the Audio Delay within a range of 0 to 300ms.

The Up/Down buttons can adjust: Sound Mode (and Custom), AV Sync, Channel Level, Treble, Bass, and AI SONIC.

Press **SOUND MODE** to switch to Custom. Press **SURR** to select, then use the Up/Down buttons to adjust the effect (High, Mid, Low, or Off).

If the sound mode is not set to Custom, pressing **SURR** will display 'ONLY FOR CUSTOM SOUND MODE' on the LED Display.

Short press to enter AI Sonic-Adaptation. Then short press the Up/Down buttons to switch between user-defined AI Sonic-Adaptation: Position 1/Position 2/Position 3/Off (Must be configured in the APP to take effect).

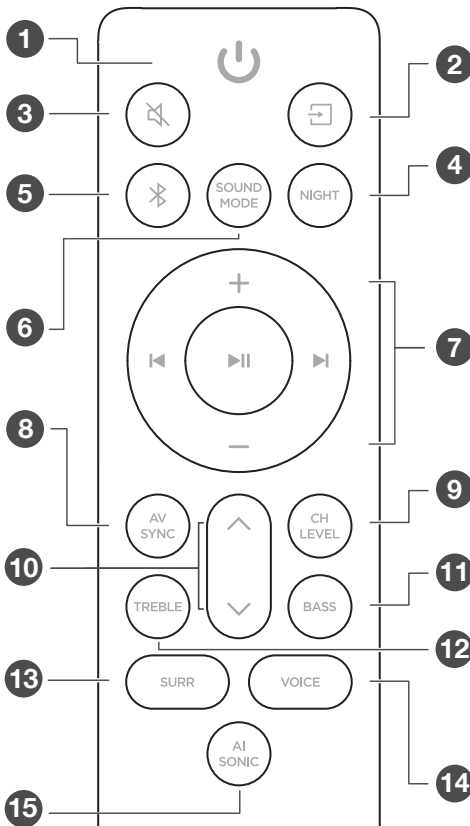

Short press: switch input sources
(HDMI eARC/USB/Bluetooth)

Short press to switch the sound mode to Night Mode. Long press for more than 3 seconds to cycle through the LED display brightness: Level 1 (100%) / Level 2 (70%) / Level 3 (40%). Default: Level 1.

+ Increase volume

- Decrease volume

◀ Play previous music

▶ Play next music

⏸ Short press: play/pause music.

Long press ▶ to wake up the LED display and scroll to display "Source®+Audio Format®" info twice.

Press and hold this button when paused or stopped, and "Source®" will be displayed for two cycles only.

Short press to switch between Center Level, Front Top Level, and Subwoofer Level. Then short press the Up/Down buttons to adjust the volume.

Short press to enter Bass adjustment mode, then short press the Up/Down buttons to increase or decrease the bass.

Short press to enter Treble adjustment mode, then short press the Up/Down buttons to increase or decrease the treble.

Press **SOUND MODE** to switch to Custom. Press **VOICE** to select, then use the Up/Down buttons to adjust the effect (High, Mid, Low, or Off).

If the sound mode is not set to Custom, pressing **VOICE** will display 'ONLY FOR CUSTOM SOUND MODE' on the LED Display.

7

 
TV Connection

If you have a TCL TV, simply plug in the HDMI cable to the eARC/ARC ports and follow the TCL TV on-screen instructions.



TCL TV Ready

This function is available in some TCL TVs and some TCL models.

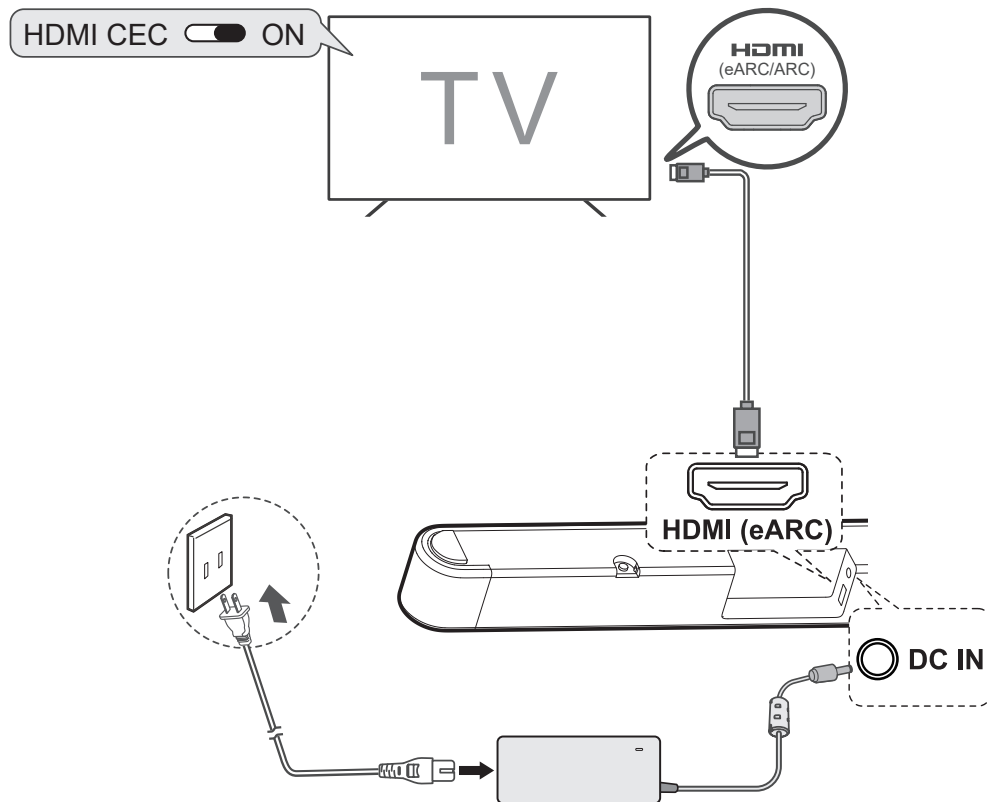

7a

 
HDMI (eARC)

Connect the Sound Bar to your TV with the included HDMI cable.

Connect the Sound Bar to the power outlet with the included power cord.


Enable CEC function on TCL TV.

- 1 Connect HDMI cable from the HDMI (eARC) interface on the Sound Bar to the HDMI (eARC/ARC) interface on the TV.
- 2 Enable the CEC function in the settings of the TCL TV.
(See TV User Manual for instructions)

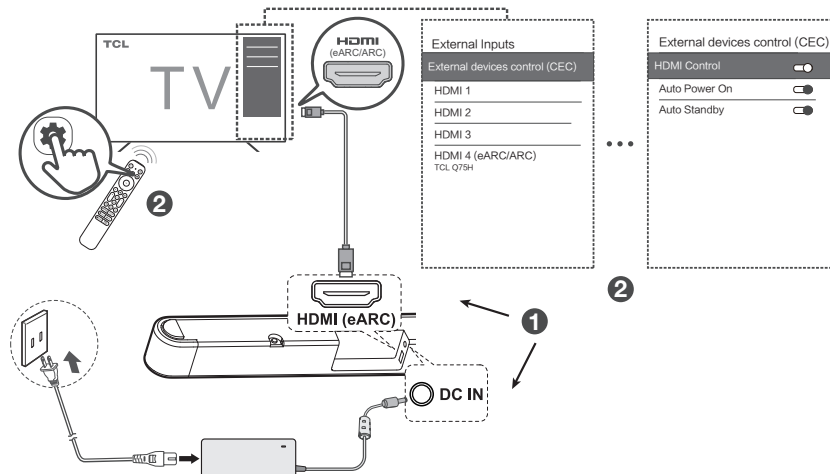

Enable CEC function on other brand TV.

 - 1 Connect HDMI cable from the HDMI (eARC) interface on the Sound Bar to the HDMI (eARC/ARC) interface on the TV.
- 2 Enable the CEC function in the settings of the TV.

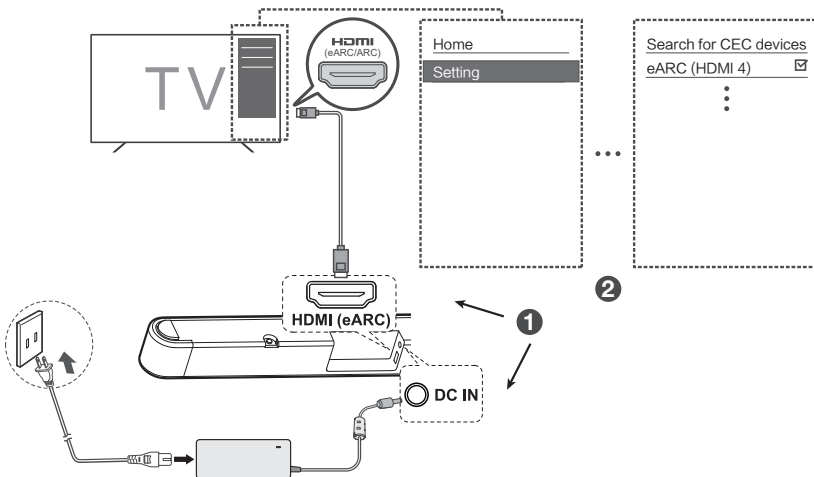

Note:
CEC (Consumer Electronic Control) function naming may differ by TV manufacturer. This feature may be called CEC, Anynet+, SimpLink, BRAVIA Link, EasyLink or VIERA Link. Please see your TV's user manual for more information.

8

Bluetooth Pairing

1 Press the .

 
2 **Method A:** Long press  on the remote control.

Method B: Short press the  button on the sound bar to switch to the Bluetooth source, then long press  for 3 seconds to enter Bluetooth pairing mode. The LED display will show "PAIRING". The sound bar is ready to pair.


3 Turn on your Bluetooth device and ensure it is in pairing mode.

4 Select "TCL A65K". The LED display will show "BT CONNECTED". Pairing is successful.

5 Repeat step 3 to pair other Bluetooth devices.

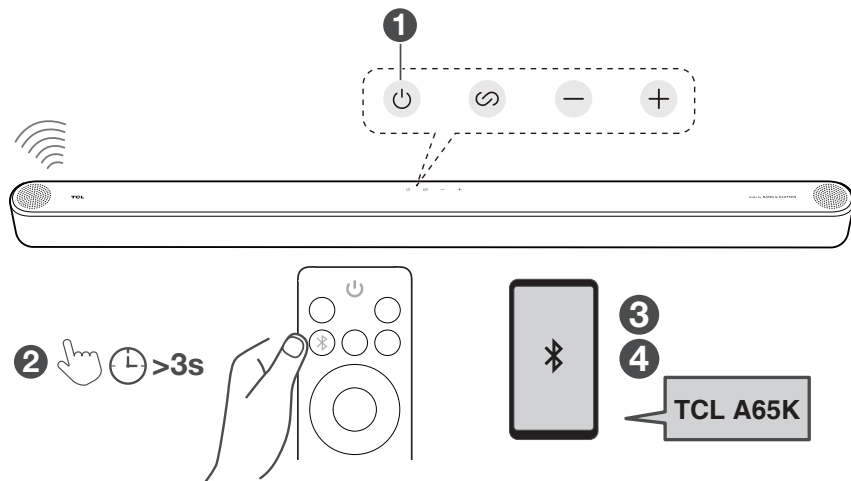

Method A

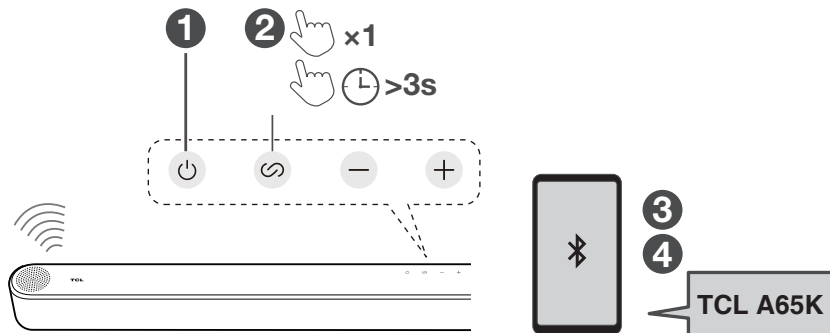 


Method B

9

Other connections
- USB

 Supported audio files: MP3, WAV, FLAC.
USB format: FAT/FAT 32.

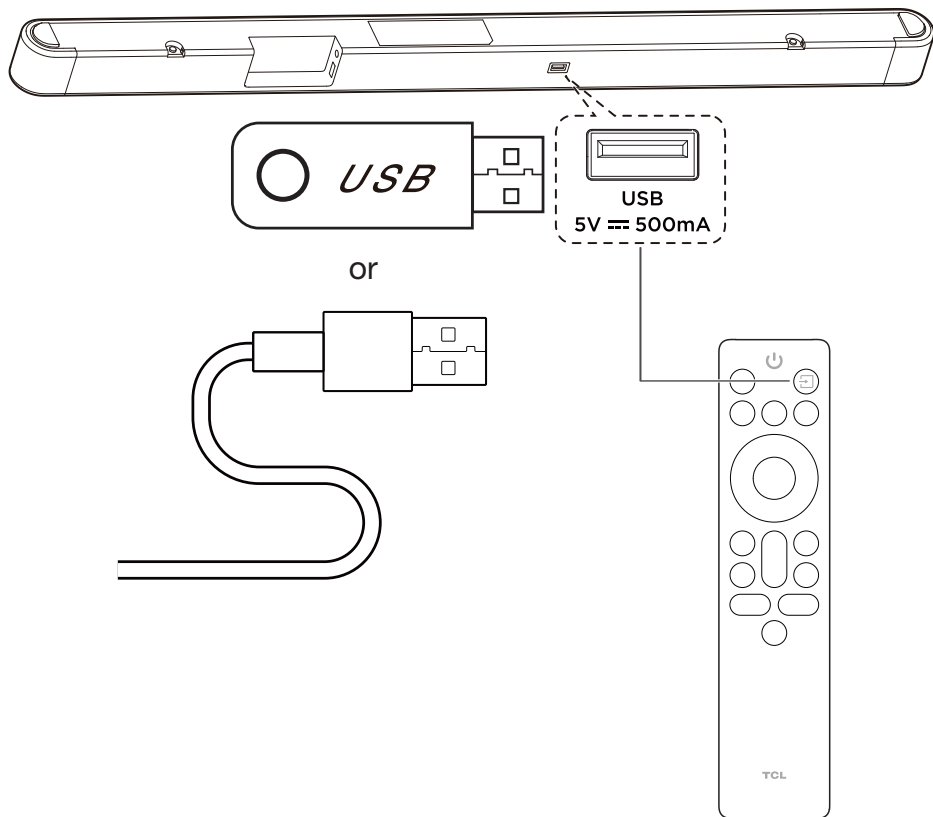

10

AI Sonic-Adaptation

11

Download TCL-HOME App

Control this sound bar using the TCL Home App. Functions include power control, volume adjustment, source switching, sound modes, AI Sonic-Adaptation, Beosonic, etc. Explore more smart features within the TCL Home App.

Please download the latest version from the app stores.



TCL Home App
Your TCL Smart Hub.
Download Now!

What is AI Sonic-Adaptation? (Auto Room Calibration)

AI Sonic-Adaptation is a Room Calibration Technology developed by TCL Audio Lab. To use this function, you need to download TCL Home App and follow the instructions.

 
Before AI Sonic-Adaptation

Speaker distance, sound pressure level, and frequency response may be uneven based on your seating position and environment.

After AI Sonic-Adaptation

Speaker distance, sound pressure level, and frequency response are all optimized based on your seating position and environment.


How It Works?

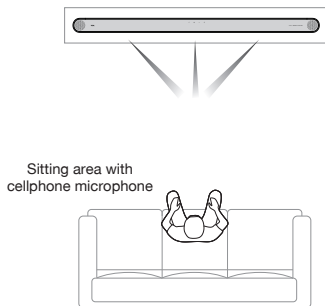

The cellphone's microphone will measure the test signals

Calibration

 
Follow the on-screen instructions in the TCL Home App.

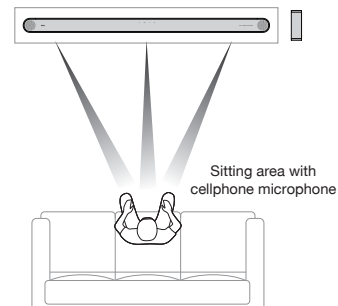

Follow the instructions on the right side to update the firmware on TCL HOME App.



 Note:
The message displayed may differ.
Do not exit the TCL HOME App during the update process.

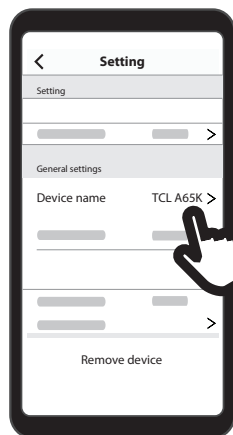


1




2



 
3

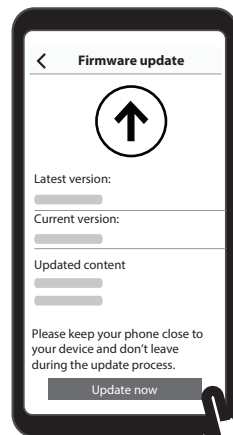

4

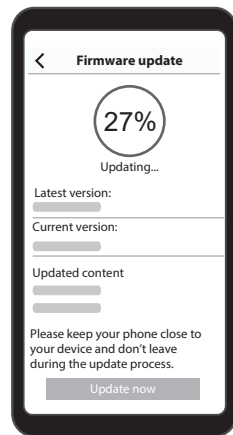 

5

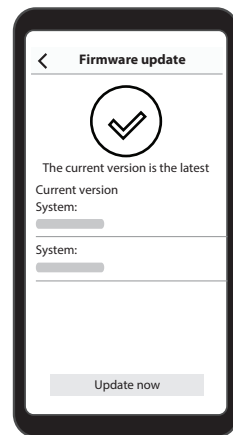 


12b

USB Drive Update

Please visit the official TCL support website, go to the corresponding product page, follow the online instructions to download the latest software, and use a USB drive to upgrade the sound bar.



 1

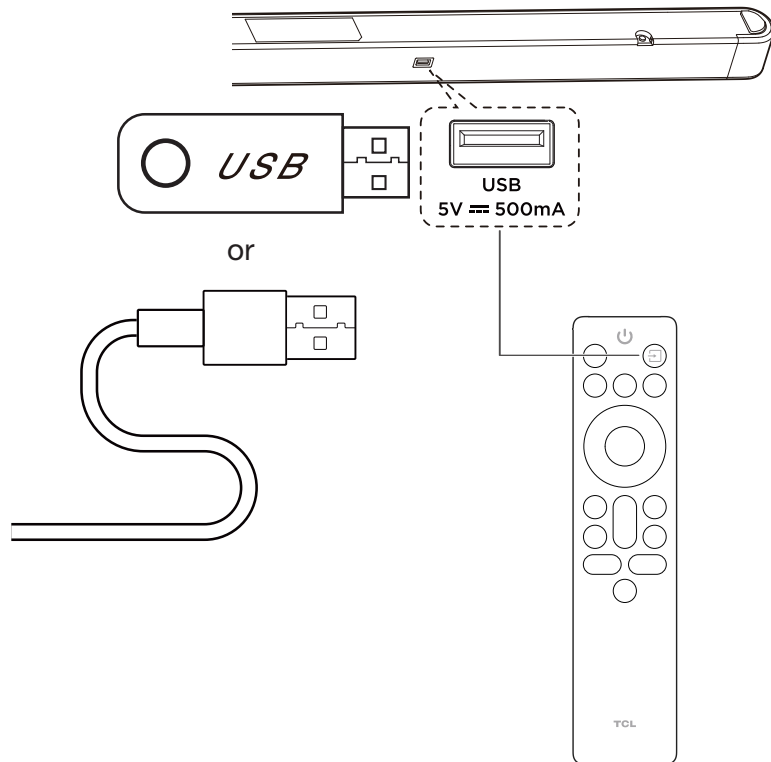

2

Trademarks



Dolby, Dolby Atmos, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 2012-2024 Dolby Laboratories. All rights reserved.



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by TTE Corporation is under license. Other trademarks and trade names are those of their respective owners.



Manufactured under license from DTS, Inc. and/or its affiliates. For patents, see <https://xperi.com/dts-patents/>. DTS, the DTS logo, DTS:X, the DTS:X logo, Virtual:X, and the DTS Virtual:X logo are trademarks or registered trademarks of DTS, Inc. and/or its affiliates in the U.S. and/or other countries. © DTS, Inc. and/or its affiliates. All rights reserved.



 
The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

Important safety instructions

Take sure you read all the safety information before you use this product.

TCL North America bears no responsibility for accidents or damages caused by unauthorized changes, modifications or improper use of the product.

User Manual can be found at www.tcl.com on the specific product page in the "Download" section.



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.



This symbol indicates that this product incorporates double insulation between hazardous main voltage and user accessible parts. When servicing, use only identical replacement parts.

Warnings

- To reduce the risk of fire or electric shock, do not expose this product to rain or moisture. This product should not be exposed to dripping or splashing. No objects filled with liquids, such as vases, should be placed on or near the product.
- The product is unstable if it is not properly placed or mounted to the wall. Be sure to follow the wall mounting instructions provided in the user manual to ensure your safety.
- Do not expose batteries to excessive heat such as sunshine, fire, and so forth.
- To avoid danger of suffocation, keep this plastic bag away from babies and children.
- Do not use this bag in cribs, beds, carriages or playpens. This bag is not a toy.
- Shielded cables must be used with this unit to ensure compliance with the Class B FCC limits.

Safety

- **Read these instructions** - Read all the safety and operating instructions before operating the product.
- **Retain these instructions** - Retain the safety and operating instructions for future reference.
- **Heed all warnings** - Adhere to all warnings on the product and in the operating instructions.
- **Follow all instructions** - Follow all operating and use instructions.
- **Do not use this apparatus near water** - The appliance should not be used near water or moisture - for example, in a wet basement or near a swimming pool and the like.
- **Clean only with a dry cloth.**
- **Do not block any ventilation openings.** Install in accordance with the manufacturer's instructions.
- **Do not install near any heat sources** such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- **Do not defeat the safety purpose** of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- **Protect the power cord** from being walked on or pinched particularly at plugs, convenience receptacles, and the point where it exits from the product. If the cord set is damaged, it must be replaced by a special cord set available from the manufacturer or its service agent.
- **Use only attachments/accessories** specified by the manufacturer.
- **Use only with the cart**, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- **Unplug this apparatus** during lightning storms or when unused for long periods of time.
- **Refer all servicing** to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- **The user must maintain** a minimum distance of 20CM from the device at all time.
- **This appliance is not intended** for use by young children or infirm persons without supervision. Young children should be supervised to ensure that they do not play with the appliance.

Cautions

- To prevent electric shock, match wide blade of plug to wide slot, fully insert.
- Do not place any sources of danger on the product (for example: liquid filled objects, lighted candles).
- Disconnect the power cord to shut off when find trouble or not in use. The power cord shall be readily operable.
- Use of controls or adjustments or performance of procedures other than those described herein, may result in hazardous radiation exposure or other unsafe operation.
- The power cord/appliance coupler is used as the disconnect device, the disconnect device must remain readily operable.
- The rating label is located at the bottom or back of the product.
- The use of apparatus in tropical and moderate climates. Operating temperature: 0-40°C
- Only suitable for use at altitudes below 2000 m.

Battery CAUTION & Disposal Information

- For best results, use alkaline-type batteries.
- Do not mix Alkaline, Standard (Carbon-Zinc), or Rechargeable (Nickel Cadmium or Nickel Metal Hydride) batteries.
- Always replace depleted batteries with two same brand-new batteries from the same manufacturer. Never use damaged batteries.
- Do not use Rechargeable (Nickel Cadmium or Nickel Metal Hydride) batteries.
- Install only new batteries of the same type in your product. There is a risk of fire or explosion if the battery is replaced by an incorrect type.
- Do not mix old and new batteries.
- Batteries should not be exposed to excessive heat, such as prolonged direct sunlight, open flame, or fire of any kind as it may result in an explosion, or leakage of flammable liquid, or gas.
- Batteries should not be exposed to extremely low air pressure as it may result in an explosion or the leakage of flammable liquid or gas.
- Failure to insert batteries in the correct polarity, as indicated in the battery compartment, may shorten the life of the batteries or cause batteries to leak.
- Batteries should be recycled or disposed of as per state and local guidelines. Do not dispose of batteries in a fire, hot oven, or mechanically crushing or cutting a battery, which may result in an explosion.

Disposal of Your Old Product

Recycle Your Device Properly. In accordance with state and local laws, this product may be classified as a covered electronic device and must not be disposed of with household trash. TCL encourages consumers to always look for a recycling or reuse alternative to discarding electronic products through drop-off and mail-back options. Visit tcl.com/us/en/sustainability/electronics-recycling for instructions and authorized collection sites. Click on our convenient interactive map to quickly locate a solution in your community. For the US ONLY, for mail-back option, visit www.mmmrecycling.com/recycle-now.php and follow the instructions.

Compliance notice

Notice for US

FCC Information

Warning

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Notice

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body. This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

Notice for Canada

Class B Clause

This Class B digital apparatus complies with Canadian ICES-003

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

Radiation Exposure Statement

 
This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Warning: The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Consignes de sécurité importantes

Assurez-vous de lire toutes les informations de sécurité avant d'utiliser ce produit.

TCL Entertainment Solutions Limited ne prendra aucune responsabilité pour tous accidents ou endommagements causés par des changements non autorisés, des modifications ou des utilisations inappropriées du produit.



Le symbole de l'éclair en forme de flèche, situé dans un triangle équilatéral, a pour but d'alerter l'utilisateur de la présence d'une tension dangereuse non isolée à l'intérieur du boîtier du produit pouvant être suffisamment importante pour constituer un risque d'électrocution.



Le point d'exclamation dans un triangle équilatéral est destiné à alerter l'utilisateur de la présence de consignes importantes d'utilisation et de maintenance (entretien) dans la documentation accompagnant le produit.



Ce symbole indique que ce produit comporte une double isolation entre la tension principale dangereuse et les pièces accessibles à l'utilisateur. Lors de l'entretien, utilisez uniquement des pièces de rechange identiques.

Avertissements

- Pour réduire les risques d'incendie ou d'électrocution, n'exposez pas ce produit à la pluie ou à l'humidité. Ce produit ne doit pas être exposé à des gouttes ou des éblouissements. Aucun objet rempli de liquide, tel qu'un vase, ne doit être placé au-dessus ou à proximité du produit.
- Le produit est instable s'il n'est pas correctement placé ou fixé au mur. Veuillez suivre les instructions de montage mural fournies dans ce manuel d'utilisation pour assurer votre sécurité.

Sécurité

- **Lisez ces consignes** – Lisez toutes les consignes de sécurité et d'utilisation avant d'utiliser le produit.
- **Conservez ces consignes** – Conservez les consignes de sécurité et d'utilisation pour une consultation ultérieure.
- **Respectez tous les avertissements** – Respectez tous les avertissements sur le produit et dans le mode d'emploi.
- **Observez toutes les consignes** – Observez le mode d'emploi et toutes les consignes d'utilisation.
- **N'utilisez pas cet appareil à proximité d'eau** – Cet appareil ne doit pas être utilisé à proximité d'eau ou d'humidité – par exemple, dans un sous-sol humide ou près d'une piscine, etc.
- **Nettoyez uniquement avec un chiffon sec.**
- **Ne bloquez aucune bouche d'aération.** Installez conformément aux instructions du fabricant.
- **Ne l'installez pas près de sources de chaleur** telles que les radiateurs, les bouches de chaleur, les poêles ou autres appareils (y compris les amplificateurs) produisant de la chaleur.
- **Ne détruisez pas l'objectif de sécurité** de la fiche polarisée ou mise à la terre. Une fiche polarisée a deux lames avec une plus large que l'autre. Une fiche de type mise à la terre a deux broches et une troisième broche de mise à la terre. La lame large ou la troisième broche sont fournies pour votre sécurité. Si la fiche fournie ne rentre pas dans votre prise, consultez un électricien pour remplacer la prise obsolète.
- **Protégez le cordon d'alimentation** des piétinements et des pincements, en particulier au niveau des fiches, des prises de courant et du point de sortie du produit.
- **N'utilisez que les pièces jointes / accessoires** spécifiés par le fabricant.
- **N'utilisez que avec le chariot**, le pied, le trépied, le support ou la table spécifiés par le fabricant ou vendus avec l'appareil. Lorsqu'un chariot est utilisé, faites attention lorsque vous déplacez la combinaison chariot/appareil pour éviter les blessures dues au renversement.



- **Débranchez cet appareil** lors d'orages ou lors de non-utiliser pendant une longue temps.
- **Confiex tout entretien** au personnel qualifié. Un entretien est requis lorsque l'appareil a été endommagé de quelque manière que ce soit, par exemple au niveau du cordon d'alimentation ou de la fiche ou si un liquide a été renversé ou des objets sont tombés dans l'appareil, s'il a été exposé à la pluie ou à l'humidité, ne fonctionne pas normalement ou s'il a été abandonné.

Mises en garde

- Pour éviter les électrocutions, faites correspondre la lame large de la fiche à la fente large et insérez-la complètement.
- Ne placez aucune source de danger sur le produit (par exemple, objets remplis de liquide, bougies allumées).
- Débranchez le cordon d'alimentation pour l'éteindre en cas de problème ou si vous ne l'utilisez pas. Le cordon d'alimentation doit être facilement utilisable.
- L'utilisation de commandes ou de réglages, ou l'exécution de procédures autres que celles décrites dans les présentes, peut entraîner une exposition à des radiations dangereuses ou toute autre opération dangereuse.
- Le couteur du cordon d'alimentation/de l'appareil est utilisé comme dispositif de déconnexion; le dispositif de déconnexion doit rester facilement utilisable.
- L'étiquette d'identification se trouve au bas ou à l'arrière du produit.

Avis de conformité

Avis pour les États-Unis

Informations sur la FCC

Avertissement

- Les changements ou les modifications sur cet appareil non expressément approuvés par la partie responsable de la conformité pourraient invalider l'autorité de l'utilisateur pour manipuler l'équipement.
- Pour rester en conformité avec les consignes d'exposition aux RF, placez le produit à au moins 20 cm des personnes proches.

Remarque

- Cet équipement a été testé et déclaré conforme aux limites imposées aux appareils numériques de classe B, conformément à la section 15 du règlement de la FCC. Ces limites sont conçues pour fournir une protection suffisante contre les interférences préjudiciables dans une installation résidentielle. Cet équipement génère, utilise et peut émettre de l'énergie radioélectrique et, s'il n'est pas installé et utilisé conformément aux instructions fournies, peut produire des interférences affectant les communications radio. Cependant, rien ne garantit que des interférences ne se produiront pas dans certaines installations.

Si cet équipement génère des interférences préjudiciables à la réception de signaux radio ou de télévision (ce qui peut être constaté en éteignant puis en rallumant l'appareil), nous conseillons à l'utilisateur d'essayer une ou plusieurs des mesures suivantes pour tenter de corriger le problème :

- Réorienter ou déplacer l'antenne de réception.
 - Éloigner davantage le récepteur de l'équipement.
 - Brancher l'équipement sur une prise de circuit différente de celle sur laquelle le récepteur est branché.
 - Consulter le revendeur ou un technicien qualifié spécialisé en équipements radio/de télévision.
- Pour garantir la conformité continue, tout changement ou modification non expressément approuvé par la partie responsable de la conformité peut annuler l'autorité de l'utilisateur à utiliser cet équipement. (Exemple : utiliser uniquement des câbles d'interface blindés lors de la connexion à un ordinateur ou à des périphériques).

Cet appareil est conforme à la section 15 de la réglementation de la FCC. Le fonctionnement est soumis aux deux conditions suivantes :

- (1) Cet appareil ne doit pas causer d'interférences nuisibles, et
- (2) Cet appareil doit accepter toutes les interférences reçues, y compris celles susceptibles de provoquer un fonctionnement indésirable.

Déclaration de la FCC sur l'exposition aux rayonnements : Cet appareil est conforme aux limites de la FCC sur l'exposition aux rayonnements définies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec une distance minimale de 20 cm entre le radiateur et votre corps. Cet émetteur ne doit pas être placé au même emplacement ni être utilisé avec toute autre antenne ou tout autre émetteur.

AVERTISSEMENT : Les modifications apportées à cet équipement non expressément approuvées par TCL Corporation peuvent annuler l'autorisation de la FCC d'utiliser cet équipement.

Avis pour le Canada

Clause de classe B

Cet appareil numérique ne dépasse pas les limites de classe B relatives aux émissions de bruit radioélectrique émises par un appareil numérique, telles que définies dans le Règlement sur les interférences radio du ministre des Communications du Canada.

Cet appareil numérique de classe B est conforme à la norme canadienne ICES-003.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- 1) L'appareil ne doit pas produire de brouillage;
- 2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

CAN ICES (B) / NMB (B)

Déclaration IC relative à l'exposition aux rayonnements

Cet appareil est conforme aux limites canadiennes sur l'exposition aux rayonnements définies pour des environnements non contrôlés. Cet émetteur ne doit pas être situé au même endroit ou fonctionner en conjonction avec une autre antenne ou un autre émetteur.

Attention : le droit de l'utilisateur de faire usage de l'appareil peut être annulé par des modifications ou changements non approuvés expressément par l'entité en charge de la conformité de l'appareil par rapport aux normes.

DO NOT RETURN TO STORE

**WE ARE
READY TO
HELP** contact us first
with any questions



TCL SUPPORT:

US: support.tcl.com

CA: www.tcl.com/ca/en

www.tcl.com/ca/fr

1-877-300-9223

MX: www.tcl.com



**TAKE CARE WHEN
REMOVING THE SOUND BAR**