



G5 Pro

ACTIVE NOISE CANCELLATION WIRELESS HEADPHONES


QUICK START GUIDE

Packing list:


- > G5 Pro Bluetooth headset*1
- > USB-C charging cable*1
- > 3.5mm audio cable*1
- > 3.5mm microphone*1
- > Warranty card * 1
- > Instructions* 1

Product specification sheet:

Product model: G5 Pro
Wireless protocol: A2DP/AVRCP/HFP/HSP
Type: Head-mounted wireless bluetooth headset
Weight: 252 grams
Charging time: 2.5 hours
Music time: 100 hours
Impedance: 32Ω
Frequency response range: 20-20000Hz
Sensitivity: 108dB
Wireless Range: 30 feet
Bluetooth: v5.3
Speaker diameter: 40mm
Color: Gold/Black
Input: 5V --- 1A (USB TYPE-C port)
Output: 5V--- 0.1A
Capacity: 1000mAH

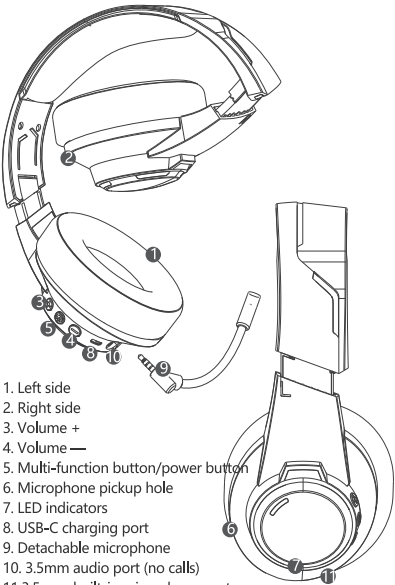

1. Left side
2. Right side
3. Volume +
4. Volume -
5. Multi-function button/power button
6. Microphone pickup hole
7. LED indicators
8. USB-C charging port
9. Detachable microphone
10. 3.5mm audio port (no calls)
11. 3.5 mm built-in microphone port

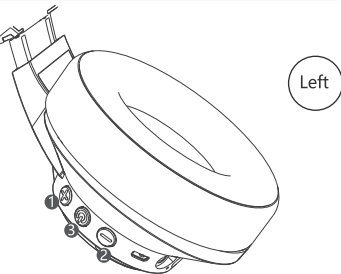

Description for control:

No	KEY	Action	Effect
1	Volume key +	Short press	Volume increase
2	Volume key -	Short press	volume down
1	Volume key +	Long press	Previous song
2	Volume key -	Long press	Next song
3	Multi-function key	Long press 2 seconds (shutdown state)	Boot up state, search status (red and blue lights blink)
3	Multi-function key	Long press 2 seconds (boot up state)	Shutdown
3	Multi-function key	Short press 1 second (on the phone)	Answer / hang up the call
3	Multi-function key	After powering on with no device connected double click 3 times	Turn on/off Chinese and English prompts
3	Multi-function key	double click 2 times (shutdown state)	Enable/disable ANC noise reduction mode (Press 2 more times to turn off)

Pairing instructions:

1. Press and hold the "Multi-function button" for 3 seconds, you will hear the boot tone, and the red and blue lights will flash alternately and quickly when connecting for the first time.
2. Turn on your mobile phone, activate the Bluetooth function, and in the Bluetooth setting interface, click "Search"
3. Select "BT" in "Available Devices" on the phone interface, and hear a long "beep" from the earphone, and at the same time the indicator light turns blue and flashes slowly, indicating that the pairing is complete.

When pairing is unsuccessful:

>The pairing mode will last for a few minutes, if the pairing fails, it will turn into a battery protection mode > If the pairing fails, please turn off the headset and try again > When the headset is successfully connected to the mobile phone once, just keep the "Bluetooth mode" of the mobile phone turned on, the headset Close to the phone and turn it on to automatically connect to the phone.

Common problem:

Q: Why can't I boot?
A: Before using the headset, please charge it first, and make sure the battery is fully charged (The red light turns off when the battery is fully charged)
Q: Why can't I hear the sound?
A: First confirm that the headset and the phone have been successfully paired, and then increase the volume to your satisfaction.
Q: Why can't my mobile phone find my headset device?
A: Restart and try to reconnect. If your mobile phone has many records of paired Bluetooth devices, please "unpair" them and restart the headset to connect again.

Precautions:

*Do not place the headset in a high temperature environment, including direct sunlight.
*Do not place the headset near fire or other excessive heat.
*Do not place the earphones in wet or submerged in liquid, keep the earphones dry.
*Do not attempt to charge the earbuds in any other way than the provided charging cable.
*Do not disassemble the earphones, any attempt to repair or modify the earphones is prohibited.
*Please pay attention to excessive drop, impact, scratches or other behaviors that affect the function of the earphones. If there is any damage, such as dents, punctures, tearing, deformation or corrosion, please stop using the earphones immediately and contact the store where you purchased them or Contact us through the contact information on the warranty card.
*If the earphone produces abnormal smell, higher than normal temperature, abnormal color or shape changes, please stop using the earphone immediately, and contact the store where you purchased it or contact us through the contact information on the warranty card.

Kind tips:

1. Use a 5V/1A 5V/2A charger to charge the headset. Charging the earphones with a charging device with an excessively high voltage may damage the headset.
2. When the headset has not been used for more than 3 months, it needs to be charged before use.
3. When not in use for a long time, it is recommended to charge the headset every 3 months, which can protect the battery more effectively.
4. It is recommended to use the headset after it is fully charged.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

VOUCHER WARRANTY CARD

(Please keep it in good care)



SERVICE :

From the day of sale, Any quality problem happens under normal use. The user can apply for the return of the goods within 15 days, and apply for a new, one year free warranty service in 30 days.

The following situation does not belong to the three package service category: 1. No three packages of vouchers can be provided; 2. Damage caused by improper use of all products; 3. failure caused by unauthorized dismantling of products; and 4. appearance damage, only maintenance service.

Manufacturer: Shenzhen Pushengchang Technology Co., Ltd.
Address: Tong Xia Yong Industrial Zone, Songgang Town, Baoan District, Shenzhen.
Service Hotline: +86 20-89857247 E-Mail: support@plextone.com.cn

MODEL:

DATE:

NAME:

PHONE:

QUALIFIED CERTIFICATE

MODEL/ DATE: _____

