



2. Instructions For Use:

- To power on the computer, ensure it is connected to an AC power adapter or that the battery level is sufficient. Simply press the power button to start the computer.
- During use, pressing the power button briefly will suspend, resume, or shut down the computer, depending on the system settings.

2.1 Function Keys:

This product includes 12 function keys (F1-F12), each assigned to specific operations when used in combination with the "Fn" key. Below is a summary of their functions:

- F1: Enter Sleep Mode
- F2: Decrease Screen Brightness
- F3: Increase Screen Brightness
- F4: Toggle Screen Backlighting
- F5: Enable/Disable Touchpad
- F6: Mute/Unmute Audio
- F7: Decrease Volume
- F8: Increase Volume
- F9: Toggle Keyboard Backlighting
- F10: Open System Tools (Equivalent to Win + Shift + S)
- F11: Switch Between Internal and External Monitor Display
- F12: Enable/Disable Action Mode

Fn+Fn Lock: Function Lock Turn on or Off

• Capital Control: To release the control key, press the capital key on the Capital Key.

2.2 Power Supply and Charging:

This product can be powered using an internal battery or an AC power adapter.

Upon unpacking, connect the AC power adapter to the computer before first use.

- Lithium batteries have a "memory effect"; so they can be discharged at any time without causing for complete discharge.
- When the battery is fully charged, the power button will show a white charging. For faster charging, place the computer in sleep mode or turn it off.
- To prevent battery drain, the battery will charge when the power is on and below 90% and will not charge when the power is on and above 90% or when it is off.
- When the battery is low, a warning signal will appear on the screen. The computer will continue to operate as the battery is critically low, at which time it will shut down to prevent potentially causing unwanted data loss. Please charge the battery promptly.
- Always use the original power adapter to avoid potential damage to the computer.
- Do not use the power cord, the battery, and the power adapter to charge other devices. In addition to environmental protection, please do not dispose of the power adapter or battery improperly to prevent environmental pollution.

2.3 Cleaning, Maintenance and Storage:

Before cleaning the product, turn off the system and unplug the adapter.

- Clean the product exterior with a damp cloth and dry it with a soft cloth.
- Do not use a corrosive cleaning liquid.
- Avoid immersion in water or other liquid spills.
- After cleaning, store it in a dry, heat-resistant container.

