

 


STAGE STARS KARAOKE 2-MIC MUSIC STATION


AGES
8+

FUNCTIONS


KARAOKE STATION LAYOUT

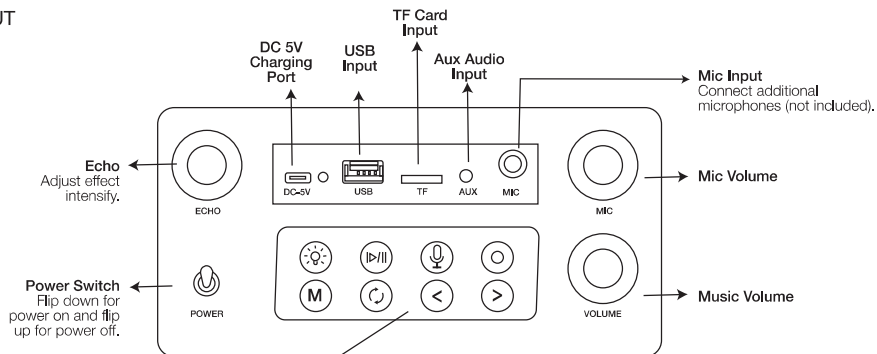

KARAOKE STATION BUTTONS

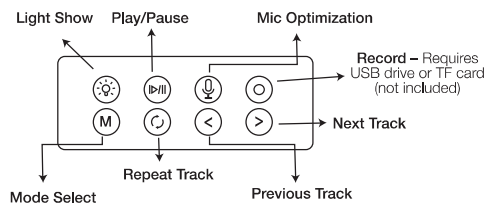 

REMOTE CONTROL BUTTONS

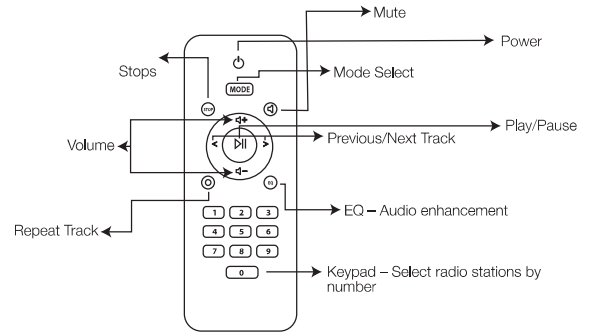

Note: To power on or power off the karaoke station using the wireless remote, leave the karaoke station's power switch in the on (down) position.

HOW TO USE





- Flip the switch on the mics to the on position and start singing. The included mics are already paired and are ready to use once batteries are installed. You can add another mic (not included) by connecting it to the mic input.




- Press the mode button to cycle through music options until you enter Bluetooth® wireless technology mode. On your smartphone or tablet, navigate to the Bluetooth® menu and select "FAO Karaoke Station" from the device list to sync your device.

- Prop up your smartphone or tablet on top of the karaoke station using the built-in stand to easily read song lyrics.
Note: Always remove any device before moving the karaoke station!

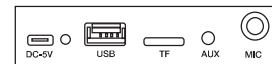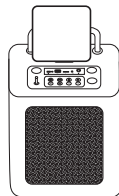

- For additional music options, install or connect your audio device(s) and press the mode button to cycle to the music option. The karaoke station also supports FM radio, USB, TF cards, and aux audio.

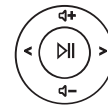

- In FM radio mode, long press the play/pause button to search all stations. Once the search is completed, press next/previous buttons to change stations.



- To record yourself singing to the music, insert a TF card into the TF card input or a USB drive into the USB input and then press the record button to start recording. Press the record button again to stop recording. The recorded audio will automatically begin to play in playback mode. Press the mode button again to exit the playback mode.

- Press the light show button to switch between different light show modes to better fit the mood of your song!

- To save battery, the karaoke station automatically enters sleep mode after 10 minutes without activity. Power off and then power on the karaoke station to exit sleep mode and keep singing.



SAFETY WARNINGS: READ BEFORE USE

- Do not make modifications to this item or use with any attachments not included.
- Thoroughly inspect products before every use. If the product appears worn, frayed/splintered, cracked, or broken in any manner, discontinue use and discard immediately.
- Never move the karaoke station with a mobile device on it.


size: 8.5" x11"




STAGE STARS KARAOKE 2-MIC MUSIC STATION

AGES
8+

CONTENTS

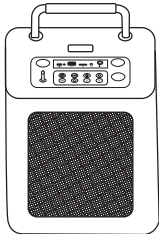


1 Karaoke Station

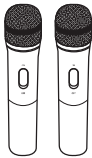


2 Wireless Microphones



1 Wireless Remote

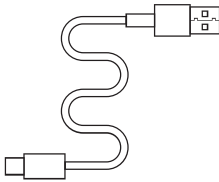

1 USB-C to USB-A Power Cable

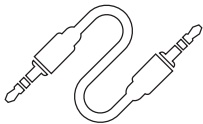

1 AUX Audio Cable

SETUP

BATTERY INSTALLATION – MICROPHONES



1. Twist off the battery cover on the bottom of each microphone.




2. Place 2 AA 1.5V batteries in each microphone.




3. Replace the battery covers.


BATTERY INSTALLATION – WIRELESS REMOTE

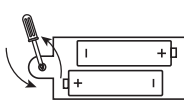

1. Using a Phillips-head screwdriver, remove the screw by turning it counterclockwise. Remove the battery cover.

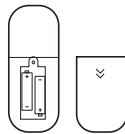


2. Place the batteries in the orientation shown above. Remote requires 2 AAA 1.5V batteries.

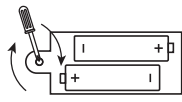


3. Replace the battery cover and screw.


CHARGING BATTERY – KARAOKE STATION

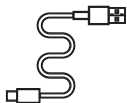

1. The karaoke station is powered by rechargeable 7.4V 2000mAh battery. Connect the USB-C to USB-A power cable to an appropriate power adapter(5V 2A) or outlet.

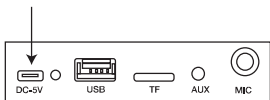

2. Connect the USB-C side of the USB-C to USB-A power cable to the port next to the power indicator LED that reads "DC=5V". The battery LED will be on while charging and will turn off when fully charged.

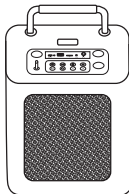

3. Wait 3 to 3.5 hours for the karaoke station to completely charge.

NOTE: When the screen says "LOW," the battery is low and needs to be charged.

SAFETY WARNINGS

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Alkaline batteries are recommended. Use only the specified voltage.
- Insert batteries using the correct polarity. Always use, replace, and recharge (if applicable) batteries under adult supervision.
- Do not attempt to charge non-rechargeable batteries.
- Do not short-circuit the battery supply terminals.
- Do not dispose of batteries in fire: batteries may explode or leak.
- Remove batteries before storing.
- Recycle or dispose of battery according to federal, state, and local laws.
- Keep these instructions for future reference.

BATTERY WARNINGS

- This product contains batteries that are non-replaceable.
- There is a risk of fire and personal injury if battery is punctured, damaged, or misused.
- Do not dismantle, crush, incinerate or short-circuit battery.
- Never expose battery to extreme temperatures or moisture.
- Keep away from flammable materials and direct sunlight.
- Only charge using the provided charger, cable, and/or adapters.
- Rechargeable battery is only to be charged by an adult.
- Adult supervision is required while charging the battery.
- Allow battery to cool to room temperature before charging.
- Charge on a non-flammable surface and keep away from flammable products.
- Discontinue charging if battery becomes hot, swells, smokes, or gives off a strong odor.
- Battery chargers used with the product are to be regularly examined for damage to the cord, plug, enclosure, and other parts. In the event of such damage, chargers must not be used until the damage has been repaired.
- Recycle or dispose of battery according to federal, state, and local laws.
- Keep these instructions for future reference.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Model No.: 1020936

POWER SUPPLY: LI-ION BATTERY, 7.4V, 2000MAH
TF CARD: MAX. 128GB
RATED POWER OUTPUT: 25W
FREQUENCY RESPONSE: 20-20K HZ
THD: 1% @1W OUTPUT

FM RADIO STORAGE: MAX. 28 CHANNELS
LIGHT MODES: 7
EQ MODES: 6
MICROPHONE RADIO RANGE: 10 METERS
BLUETOOTH RANGE: 10 METERS

FAO® and FAO Schwarz® names and logos are trademarks or registered trademarks, www.fao.com
Distributed by and © 2022 MerchSource, LLC, Irvine, CA 92618. All rights reserved. For customer support, please call 1-888-987-6533.
Printed in China.

KEEP THIS INSTRUCTION MANUAL AS IT CONTAINS IMPORTANT INFORMATION FOR FUTURE REFERENCE.

Due to continuous product improvements, the pictures on this manual may differ slightly from the actual product.