

2.1 TV Soundbar Speaker

User Manuel
ZSK-B01



2.1 home audio spaker

ULTRA THIN
ULTRA BASS



Model No.:ZSK-B01



BT



AUX



OPT



ARC



RC

 


USB




Made in china

1 ACCESSORIES LIST



Subwoofer

 

Soundbar



Power Adaptor



Stereo 3.5mm to 3.5mm
Audio Cable



HDMI Cable



Digital Optical
Cable



Remote Control



 
Wall Mounted Kit



User Manual

2 SOUNDBAR CONTROLS

Control Panel

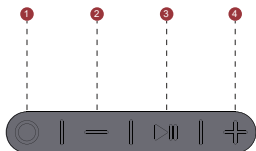

1 “ ”: Power Button

Long press to power on / Hold for 3 seconds to power off. Short press to switch channels: ARC-OPT-USB-AUX-BT (Press to switch to Bluetooth channel and enter pairing mode. see led showing “BT” use mobile phone to searching: ZSK-B01 to connect device)

 
2 “ ”: Long press previous song/short press volume down.

3 “ ”: Long press to off “BT” short press to play/pause.


4 “ ”: Long press next song / short press volume up.

Remote control

- 1 “” **Power Button**
Press to power on / Short press to power on
- 2 “” **Mute switch.**
- 3 “” **Volume Up**
- 4 “” **Play / Pause**
- 5 “” **Previous song**
- 6 “” **Next song**
- 7 “” **Volume Down**
- 8 “” **Press button to change mode BT/ARC/OPT/AUX/USB**
- 9 “” **Press BT unpaired**
- 10 “” **Press button music mode**
- 11 “” **Press button movies mode**
- 12 “” **Press button news mode**

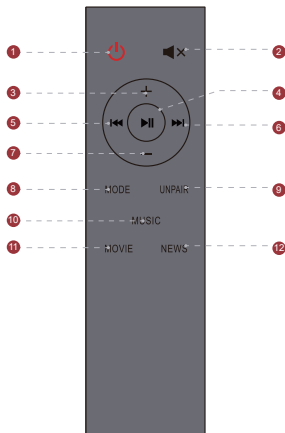

3 CONNECT TO SUBWOOFER

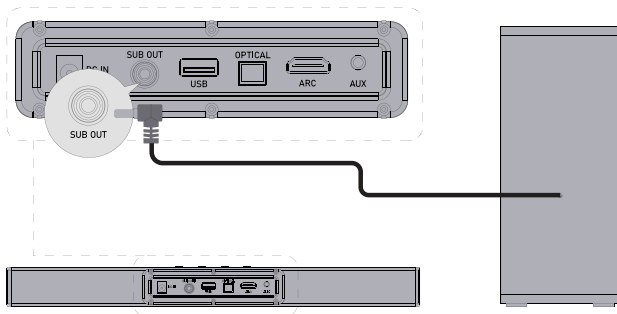 

4 CONNECT TO TV VIA HDMI ARC



Step 1:

Connect one end of the HDMI cable to the ARC port on the back of your TV.

Step 2:

 
Then connect the other end to the ARC port of the soundbar.

Step 3:


Press "MODE" button on the remote control to select "HDMI(ARC)" input.

When your TV is connected to a stereo, ARC (HDMI) mode will automatically switch to this mode if the TV has its own recognition. If not, go to the TV and choose settings-sound-find ARC (HDMI) or OPT RCA AUX, remember that the stereo also needs to select the corresponding MODE in MODE, in order to be the sound source normal access audio playback sound

5 CONNECT TO VIA OPTICAL/AUX

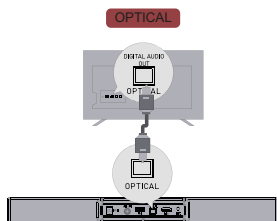

OPTION1:OPTICAL

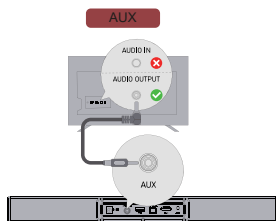 

OPTION2:AUX

- 1 Make sure the TV's port is OPTICAL OUT, connect both sides of the cable to OPTICAL, for both the TV and the soundbar.
- 2 Make sure the optical plug is inserted correctly as it shows in the picture. Do not insert the plug upside down and break the optical.

 
 
Note: If audio is playing from the internal TV speakers, mute or minimize the TV volume.

- 1 Connect the 3.5mm to 3.5mm Audio Cable to your TV's AUDIO OUT port.
 - 2 Not support AUDIO IN port on TV.
- Note:** Please remember to unplug the AUX cable from TV and Soundbar when you want to switch to other mode.




In Optical Mode: If there is no sound, try setting the TV audio output to PCM: TV Setings > HomeSettings > Sound > Digital Audio Output > PCN

6 CONNECT TO BLUETOOTH

- 1 Press the " " button on the soundbar or remote control to enter Bluetooth pairing mode.
- 2 Open your phone's Bluetooth settings, find and select "ZSK-B01" to connect the soundbar. **Note:** if it's already in the Bluetooth mode and connected, press and hold " " button for 3 seconds to disconnect the current device and connect to new device manually on your mobile phone / PC / TV.

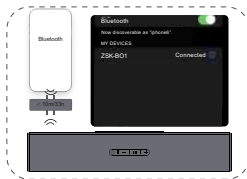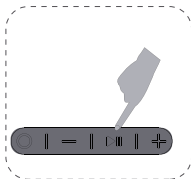

8 WALL MOUNT INSTALLATION

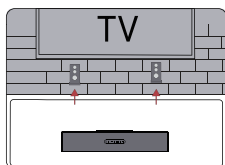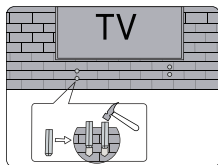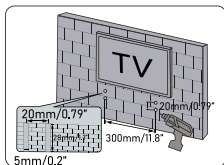   

9 SPECIFICATIONS

Model Number:	ZSK-B01
Input:	AC 110-240V ~50/60Hz
Output:	20V~2000mA
Soundbar Drivers:	(1.2*3.8")*2(Soundbar)+ 5.25"(Subwoofer)
Frequency Response:	45Hz-18kHz
Standby Power:	< 0.5W
Operating Temperature:	0℃-45℃//32F-113F

Bluetooth Vision:	5.3
Soundbar:	W 400*H38*76D (MM)
Subwoofer:	W270*H115*270D(MM)
Packaging:	L383*W165*H445 (MM)
Net Weight:	3.3kg/7.28lbs
Gross Weight:	4.2kg/9.26lbs

IMPORTANT SAFETY INSTRUCTIONS



CAUTION: To reduce the risk of electric shock, do not open the device, there is no part inside for the user. Refer all servicing to qualified personnel.



The lightning with the arrow symbol in the triangle is a warning sign alerting the user to dangerous voltage inside the unit.



The exclamation point in the triangle is a warning sign alerting the user of important instructions accompanying the product.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

IMPORTANT

- The use of apparatus in moderate climates.
- The marking plate is located on the bottom of unit.
- Make sure to have a minimum distance of 5 cm around the unit for sufficient ventilation.
- Ensure that the ventilation openings are not covered with items such as newspapers, tablecloths, curtains, etc.
- Do not place naked flame sources, such as lighted candles on the apparatus.
- Do not expose this appliance to dripping or splashing water
- Do not place objects filled with liquids, such as a glass, vase on the device



If in the future, you need to get rid of this product, please note that Waste electrical products should not be disposed of with household waste. Recycling facilities exist. Check with your municipality or ask your dealer for advice. (Directive for Waste Electrical and Electronic Equipment)

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

2.1 テレビスピーカー

取扱説明書
ZSK-B01



2.1 home audio spaker

超薄型
超重低音



モデル.:ZSK-B01



BT



AUX



OPT



ARC



RC

 


USB




Made in china

1 部 品 構 成 表



重低音スピーカー

 

サウンドバー



電源アダプタ



ステレオ3.5 mm~3.5 mm
オーディオケーブル



HDケーブル



デジタル光学
ロープ本



リモート制御



 
壁掛けキット



ユーザ取扱説明書

2 サ ウ ン ド バ ー 制 御

コントロールパネル

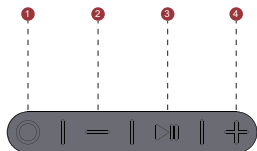

1 “○”: 電源ボタン

電源をオンにする/3秒間押し続けて電源をオフにする切り替えチャンネル:ARC-OPT-USB-AU X-BT(押すとBluetoothチャンネルに切り替えてペアリングモードに入ります。led表示を参照して、携帯電話を使ってZSK-B01接続デバイスを検索してください)


2 “—”: 前の曲を長押しして音量を下げて

3 “||”: 長押しで“BT”を閉じ、短押しで再生/一時停止します。


4 “+”: 長押しする1曲、短押し音量プラス

リモコン

 
- ① “” 電源ボタン
押して開く/押して開く
- ② “” ミュートスイッチ
- ③ “+” 音量が増す
- ④ “” 再生/一時停止
- ⑤ “” 前の曲
- ⑥ “” 次の歌
- ⑦ “-” 音量降低
- ⑧ “MODE” ボタンを押してモード
BT/ARC/OPT/OUT/USBを変更する
- ⑨ “UNPAIR” BT未ペアリングを押す
- ⑩ “MUSIC” キー音楽モード
- ⑪ “MOVIE” キー映画モード
- ⑫ “NEWS” ニュースモード

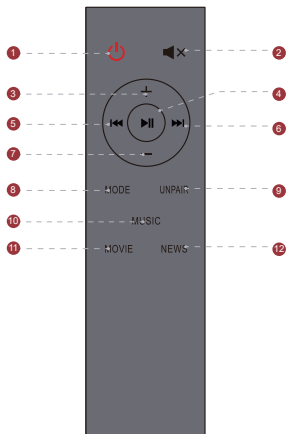

3 サブウーファに接続

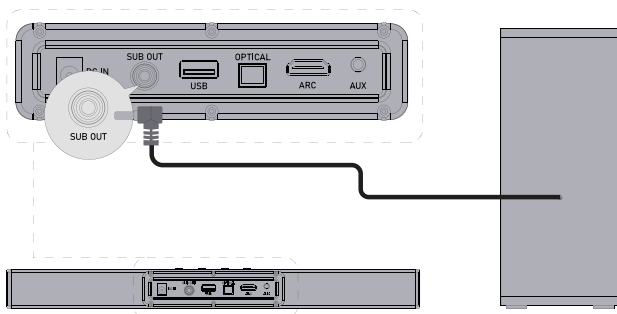 

4 HDMI ARCでテレビに接続する

 


ステップ1:
HDMIケーブルの一端を
テレビ背面のARCポート
に接続します。

ステップ2:
次に、もう一方の端をストリッ
プスピーカーのARCポートに
接続します。


ステップ3:
リモコンの“MODE”ボタンを押
して“HDMI (ARC)”入力を選択

音声を設定してARC (HDMI) またはOPT RCA AUXを見つけるには、ステレオはまたMODEの中で適切なMODEを選択する必要があり、音声oになることができます。テレビがステレオに接続されているとき、テレビに独自の識別機能があれば、ARC (HDMI) モードは自動的にこのモードに切り替わります。ない場合は、TVに移動し、通常のアクセス音声再生を選択してください

 5 OPTICAL/AUXを介して接続

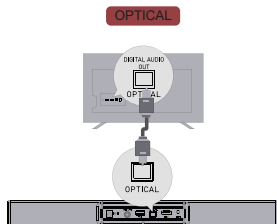

オプション1: OPTICAL

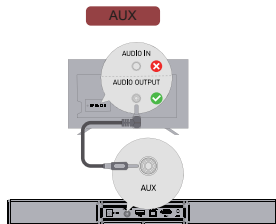 

オプション2: AUX

 
 
 
① TVSポートがOPTICAL OUTであることを確認し、ケーブルの両側をテレビとスピーカーのOPTICALに接続します
② 光学プラグが図のように正しく挿入されていることを確認します。CDが破損しないようにプラグを逆さまに挿入しないでください。注：内蔵テレビスピーカーでオーディオが再生されている場合は、テレビの音量をミュートまたは縮小します。

① 3.5 mm～3.5 mmオーディオケーブルをTVS AUDIOOUTポートに接続する
② テレビのAUDIO INポートはサポートされていません注意：他のモードに切り替えたい場合は、テレビとスピーカーのAUXケーブルを外してください。




光学モードで：音声がない場合は、**TVオーディオ出力をPCMに設定**してみてください：**TV設定>ホーム>設定> 音声>デジタルオーディオ出力>PCM**

6 Bluetooth に 接 続

- ① スピーカーまたはリモコンの“”ボタンを押すと、Bluetoothペアリングモードに入ります。
- ② 携帯電話のBluetooth設定を開き、スピーカーに接続するには「ZSK-B 01」を選択します。
注：Bluetoothモードで接続されている場合は、“”ボタンを3秒間押して現在のデバイスを切断してから、携帯電話/PC/TVに手動で新規機器に接続する。

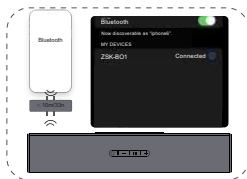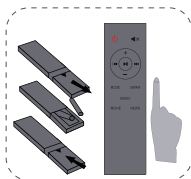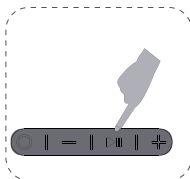

8 壁 取 付 け

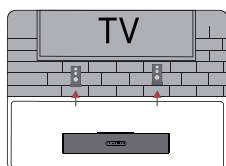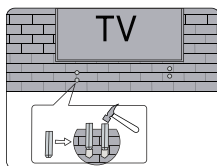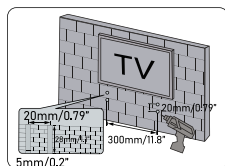   

9 仕 様

モデル：	ZSK-B01
投入：	AC 110-240V ~50/60Hz
産出：	20V~~2000mA
ストリップスピーカドライバ：	(1.2"*3.8")*2(ストリップスピーカ)+ 5.25"(サブウーファ)
パー周波数応答：	45Hz-18kHz
スタンバイ電源：	< 0.5W
動作温度：	0℃-45℃//32F-113F

Bluetoothビジョン	5.3
サウンドバー:	W 400*H38*76D (MM)
サブウーファ:	W270*H115*270D(MM)
ほうそう:	L383*W165*H445 (MM)
ネットウエイト:	3.3kg/7.28lbs
もうじゅうりょう:	4.2kg/9.26lbs

重要なセキュリティの説明

に警告 感電危険開けないでください	警告: 感電の危険を減らすために、本機を開けないでください。機内は使用者の接触を禁止します。すべて参照合格者にサービスを提供する。
-----------------------------	--

 三角形の矢印記号を持つ稲妻は警告マークであり、使用者に危険電圧があることを警告する“単位”内。

 三角形の感嘆符は警告マークであり、製品に付属する重要な説明に注意するようユーザーに警告します。

警告: 火災や電気ショックの危険を防ぐために、本機を雨や湿気のある場所に置かないでください。

重要な:

- 穏やかな気候条件下で計器を使用する。
- マーキングプレートはユニットの底にあります。
- 十分な換気を確保するために、マシンの周囲に少なくとも5センチの距離があることを確認します。
- 通気口が新聞やテーブルクロスなどに覆われていないことを確認します、カーテンを閉める、待つ。
- 火をつけたろうそくのような覆いのない火元を設備に置かないでください。
- 本器具を水滴やスパッタリングに曝さないでください。
- ガラス瓶や花瓶など、液体を満たしたものを設備に置かないでください。



将来、この製品を処理する必要がある場合は、廃棄された電子製品は家庭廃棄物回収施設があります。市政当局またはディーラーにお問い合わせください。(廃棄物命令電気及び電子機器)