



INSTALLATION GUIDE

Smart Thermostat and Controller H036

For mini-splits, VRFs, and
ductless systems

Mount Display with




QUICK SETUP

Download "Boldr - Installer" App to install in minutes


Download
"Boldr - Installer"



Download "Boldr – Installer" App


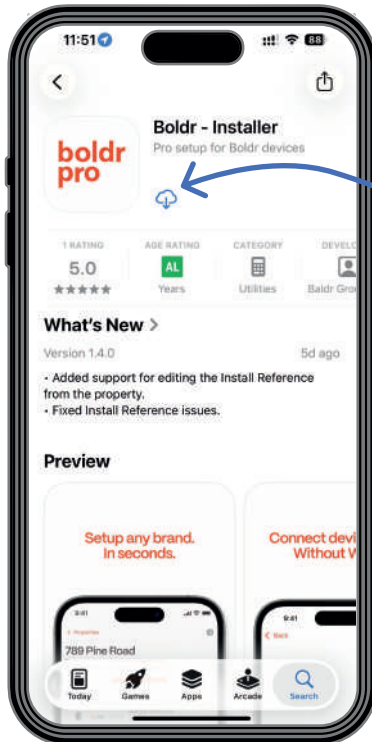


Boldr – Installer
Download and follow
the instructions

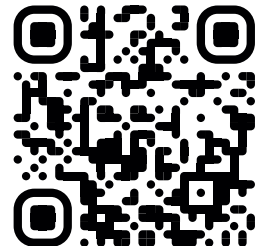


Check if the unit is functioning



1

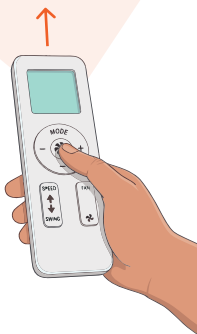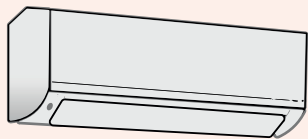



2

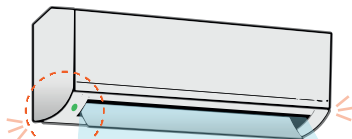


3

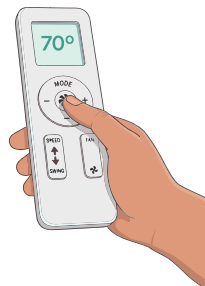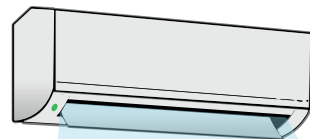

What is in the box

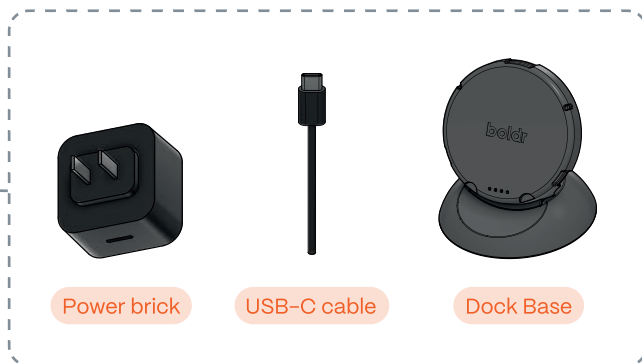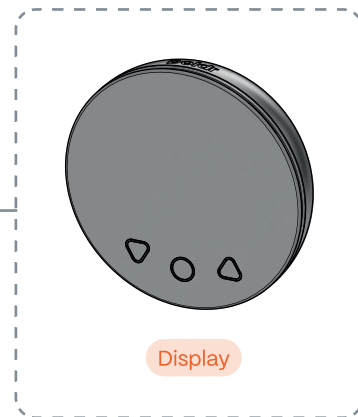

What is in the box

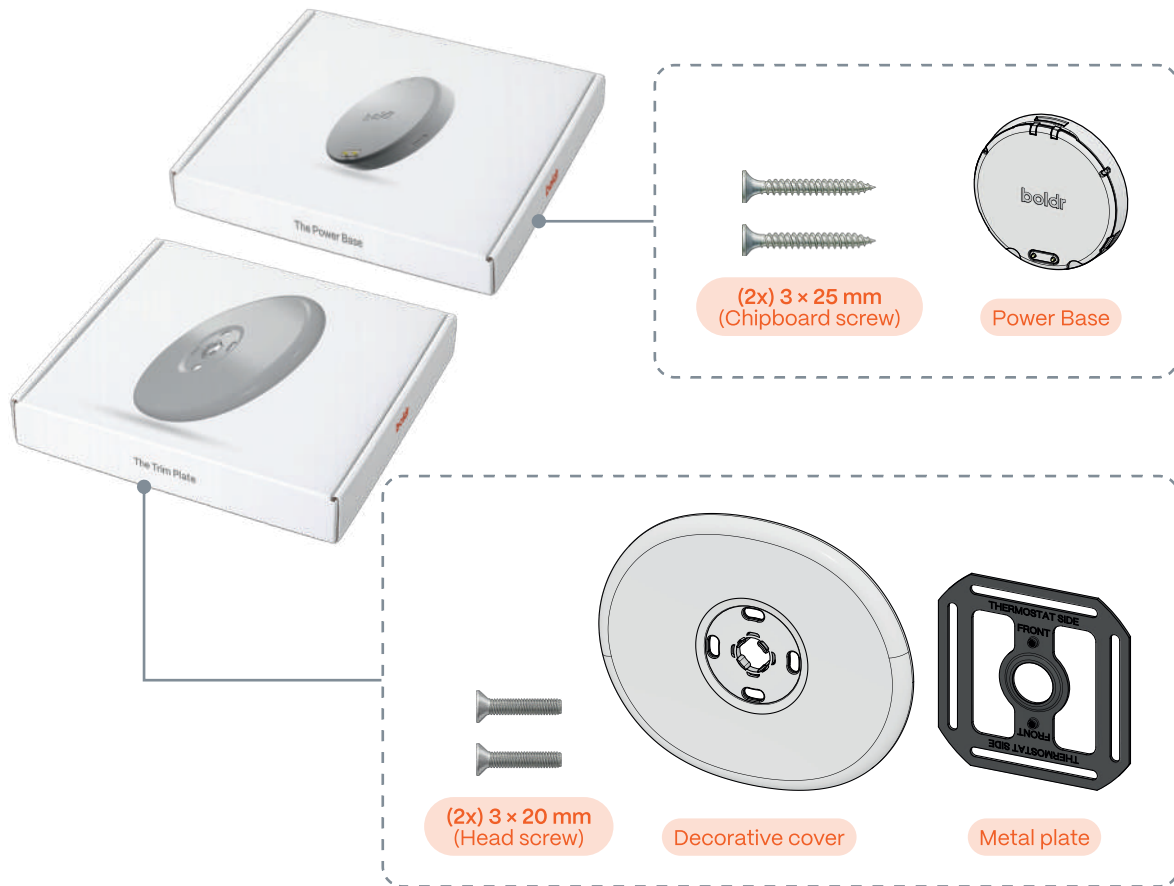


Find a good mounting spot

The Boldr Display controls the mini-split with infrared, just like the remote. Before mounting, check that it can reach the unit.

1. Choose where you want to place the display.
2. From that spot, point the remote the way the display will face and press a button.
3. Unit beeps or responds? You're set.
4. Nothing? Pick another spot and test again.

Tip: *Anywhere the remote works from, the display works from.*

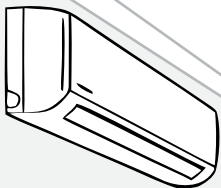

Bounced




Sideways



Direct




Note: Aim matters. A remote pointed freehand can pass where the fixed display won't.

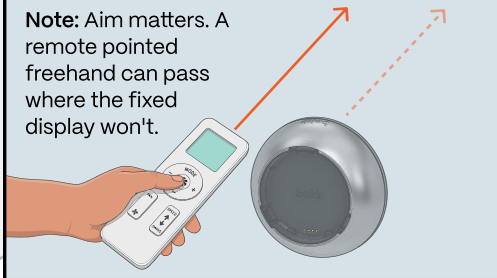

Choose Mounting Option




Dock Base (A)

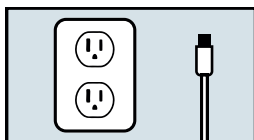

or



Power Base (B)

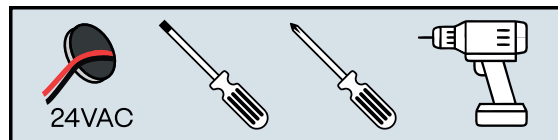




Dock Base



Dock Base (A)



08

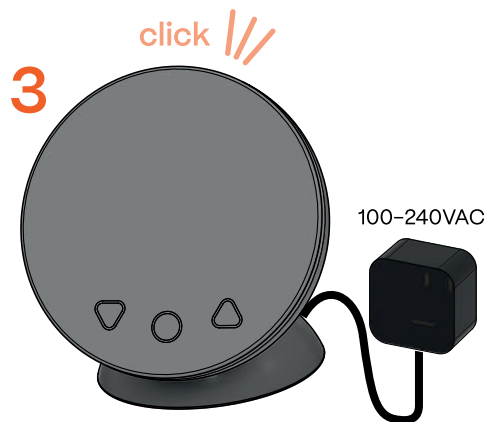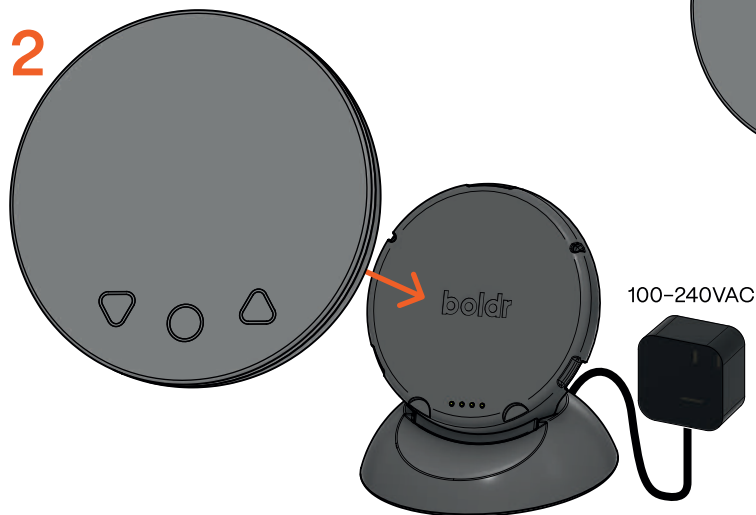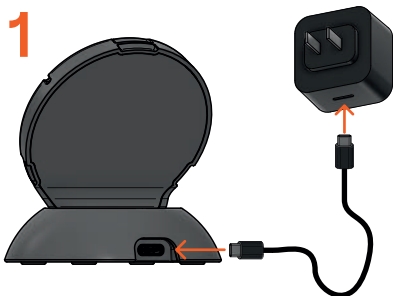

Power Base




Display Wall Mounting



10




or

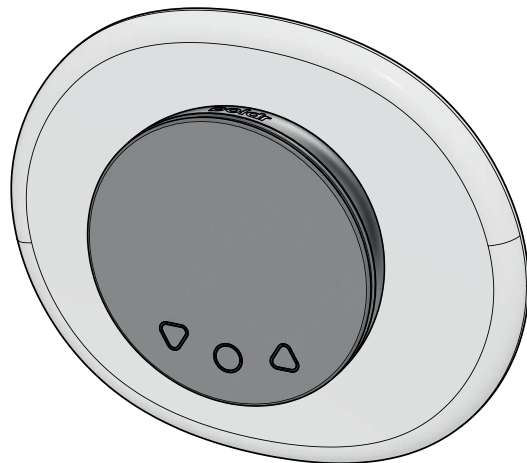

Direct to wall (B.1)



With plate (B.2)

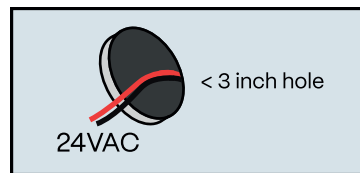

Power Base
Direct to Wall




Requires 24VAC Power




12

2a

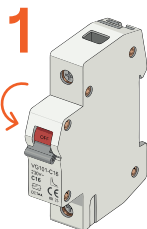


Turn power off

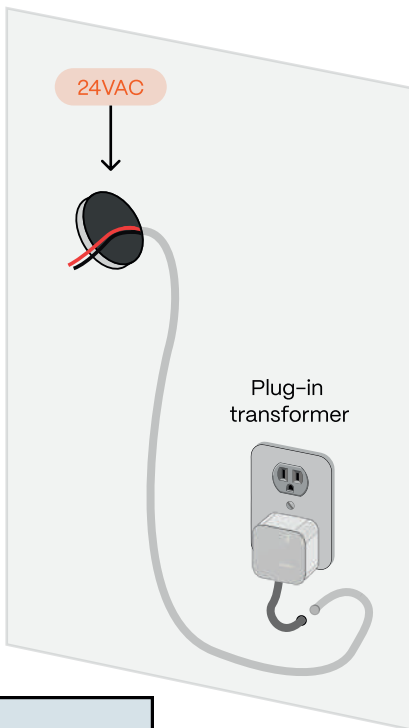

2b

or

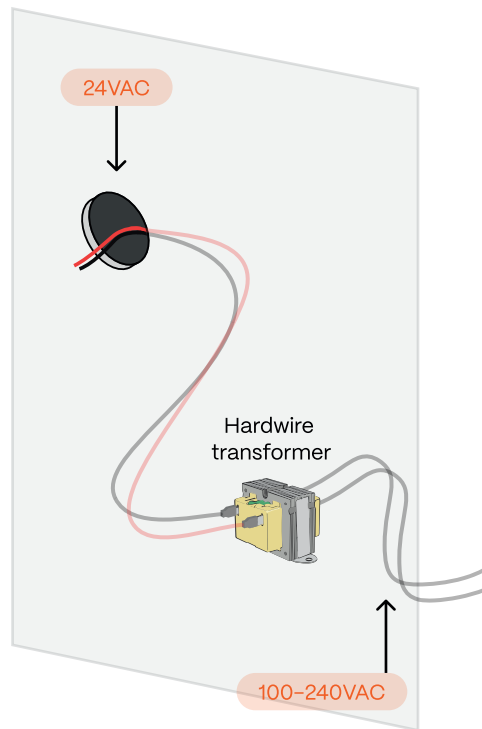

Up to 1 inch hole

Direct to wall (B.1)



13

