

儿童打印相机

产品使用手册



温馨提示:规格参数可能因机型配置不同会有变更,请以实物为准

前言

感谢您使用本公司生产的智能数码产品,我们随机配备了内容详细的使用说明书,您从中可以获得产品的使用介绍等,在您开始使用本机之前请先仔细阅读说明书,以便您能准确的使用本产品,当涉及内容有变更时,恕不另行通知。

产品概述

本产品是一款外观独特,设计精美,携带方便的儿童打印相机,专为小朋友设计的数码产品,让小朋友在使用中学会更多的想像力发挥,体验大自然的乐趣。

注意事项(安全警告)

本节内容是为了使用者正确使用打印相机、确保产品性能良好而设定,请认真阅读并遵守。

☆ 避免热源、灰尘、潮湿、易受震动或易被风吹倒的地方,亦不可浸入水滴,勿抛放、震动机器、以免损坏机器的零部件、以免损坏机器的零部件。
☆ 避免频繁的连接外部设备(如充电接口等),以免造成接口松动、接触不良影响本机的正常使用。

☆ 禁止自行拆卸、修理、改造、重排,以免对本机造成损坏,如本机出现故障,请及时联系客服中心进行维修。
☆ 切勿接触苯、稀料等化学物品。

警告:所有包装材料,如胶带、提手、塑料片、捆绑线、标签等都不属于产品的一部分,不适用于儿童玩耍,为了您孩子的安全,请妥善处理以上包装材料。废旧电池、旧电子产品,请分类妥善处理。

充电使用方法

1.当电池图标显示“”状态时,表示当前电量低,请及时为本机充电;
(注意:禁止充电使用)
2.使用随机附赠的充电线连接充电器(推荐使用规格DC 5V=1.0A,本产品不提供充电器);

3.约4-6小时可充满电。(指示灯:充电时红灯亮,充满灯灭。)
4.充电时请放到小朋友接触不到的地方,避免出现安全隐患

重要事项(警告)

如果电池长期未使用或电池电量耗尽,再次充电时可能无法立即正常开机,请待充电一段时间后再次开机使用。
1.请勿将电池浸于水中,注意防潮防霉。
2.请勿擅自拆卸或改造电池。
3.请勿短路电池正负两极。

4.请勿将电池置于60℃高温中或靠近火源。
5.电池浸水后禁止使用。
6.内含小零件,不适宜三岁以下儿童使用!
7.玩耍时请勿靠近火源!
8.儿童玩耍时监护人应在旁边看管。

根据我司获得国家强制性产品CCC认证标准,本产品出厂均不含电源适配器,用户若使用电源适配器供电,则需购买配套使用获得CCC认证并满足标准要求的产品电源适配器。

 
机器的维护和保养

1.请勿用尖锐物体在机器表面刮划。
2.为保护打印机,建议您使用后放回原包装。
3.如机器表面有灰尘或水滴,请用柔软的干布轻轻擦拭,保持机身清洁。
4.请勿使用挥发性有机溶剂(如汽油、稀料等)清洗机器表面。
5.机器长时间放置不用时,请关闭电源开关。
6.在机器使用前请检查各接口是否有异物或破损,如有发现异物请尽快取出,如有破损请咨询厂商进行维修。

MICRO-TF卡的安装与更换:

1.无卡可打印,不可拍照。
2.使用前请插入TF卡,卡速要Class4以上。


产品结构/产品说明

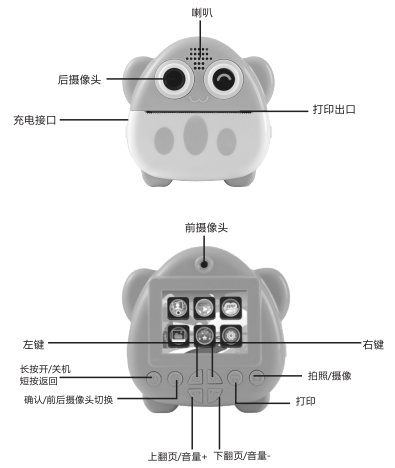


1.拍照/确认键:①拍照模式下:短按拍照
2.上/下翻键:对焦
3.左翻键/相册键:左翻键图片/视频查看(查看视频短按拍照/确认键即可播放)
5.镜头切换键:镜头切换效果效果展示
6.右翻键/打印键:左翻键图片/视频查看/拍照模式下即拍照打印
7.返回/开/关键:游戏返回键,长按开关机,短按返回主菜单

打印纸的安装与更换:

 确保按图示正确安装,否则无法打印

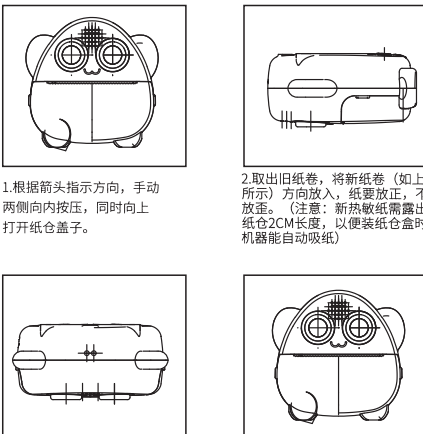

功能简介

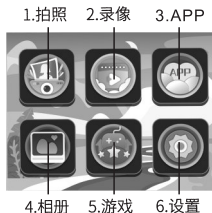 

1.拍照模式:①短按上翻/下翻键可以拉近或拉远;
②在拍照模式下短按左翻/右翻键可以切换相框和滤镜;
③在拍照模式下按“确认键”可切换前/后摄像头,按开关机键可返回主页面。
2.录像图标:切换至录像图标显示“确认键”进入录像模式。
①进入录像模式后点击“拍照键”再次点击“拍照键”一次后停止录像。
②在录像模式下按“确认键”可直切切换前/后摄像头,视频点击“确认键”进行播放,再次点击停止录像。
3.相册图标:进入相册模式后可短按左翻/右翻键进行图片或视频翻看。
①选中图片按“打印键”再按“确认键”可打印图片,②选中图片按“拍照键”会出现删除,然后按“确认键”可连串删除和全部删除,选定后按“确认键”即可删除。
4.设置图标:(1).拍照后打印:可开启或关闭即拍照打印功能;
(2).打印浓度:进入设置模式后可选择打印浓度设置,选中后点击“确认键”进行设置,浓度设置选项比较低时,打印出的图片对比度较弱;比较高时,对比度较强,可根据自己的需求合理选择。

(1).打印模式:可选点阵打印或灰度打印
(2).照片大小:设置拍摄照片大小
(3).视频格式:设置拍摄视频清晰度
(4).自动关机:设置自动关机时间
(5).日期/时间:开启可在照片上显示时间
(6).恢复出厂设置:清空所有并重置
(7).日期/时间:设置机器日期时间
(8).自动关机:设置自动关机时间
(9).按键声音:可开启或关闭按键音
(10).语言设置:可更换多种语言
(11).格式化:清除所有文件
(12).软件版本:查看软件版本
5.游戏图标:进入游戏模式,按左翻/右翻键可以切换游戏,按“确认键”确定游戏开始

技术规格参数

显示屏:2.4英寸彩屏
存储卡:最大支持32G
系统语言:中文、英文等

 
打印说明:

1.确认TF卡和打印纸已正确安装。
2.进入拍照模式,按下“打印键”即可实现随拍随打印。
3.通过“相册键”切换进入图像浏览模式,在已拍的所有图片中,选择喜欢的照片,按打印键,即可打印当前照片。

OTG数据线传输:

1.电脑下载:可通过数据线传输下载相机里“照片、视频”下载到电脑。
2.手机下载:可通过OTG数据转换器,连接数据线传输下载相机里“照片、视频”下载到手机。

Function Introduction

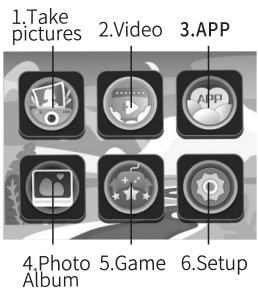

1. Photo mode: ① Short press the up/down key to pull closer or farther;
② Short press the left/right flip key in the photo mode to switch the photo frame and filter;
③ Press the "Ok key" in the photo mode to switch the front/rear camera, and press the switch key to return to the main page.
2. Video icon: switch to the video icon and press "OK" to enter the video mode.
① After entering the video recording mode, click the "camera button" to record, and then click the "camera button" again to stop video recording.
② In the video mode, press the "confirm key" to switch the front/rear camera directly, and click the "confirm key" for video To play, tap again to stop playing.

用户保修卡

用户保修卡 第一次	NO:
姓名:	产品型号:
联系电话:	购买地址:
购买日期:	备注:
联系地址:	

用户保修卡

用户保修卡 第二次	NO:
姓名:	产品型号:
联系电话:	购买地址:
购买日期:	备注:
联系地址:	

Kids print camera

Operating Manual



Warm Prompt: Specifications and parameters may be changed depending on the configuration of the model. Please refer to the actual product.

Introduction

Thank you for using the intelligent digital products produced by our company. We have randomly equipped with detailed instructions, from which you can obtain instructions on the use of the products. Please read the instructions carefully before you start using this machine, so as to facilitate you to use this product accurately. When the contents involved are changed, no notice will be given.

Product overview

This product is a children's digital print camerd with unique appearance, exquisite design and convenient carrying. It is specially designed for children to learn more imagination and experience the fun of nature.

Precautions (Safety Warning)

This section is set for users to use the children's digital print camerd correctly and ensure good product performance. Please read carefully and observe it.

☆ Avoid direct light, heat source, dust, humidity, places that are easily shaken or blown down by the wind, and do not immerse in water drops. Do not throw or shake the machine to avoid damaging its components or parts.

☆ Avoid frequent plugging and unplugging of external equipment (such as charging interface, etc.), so as not to cause loose socket and bad contact and affect the normal use of the machine.

☆ It is forbidden to disassemble, repair, rebuild or fall down on its own to avoid damage to the machine. If the machine fails, please contact the service center in time for repair.
☆ Do not contact with benzene, thinner and other chemicals.

☆ Do not use when cycling, driving cars and motorcycles to avoid danger.

Warning: All packaging materials, such as adhesive tapes, handles, plastic sheets, binding wires, labels, etc., are not part of the product and are not suitable for children to play with. For the safety of your children, please properly handle the above packaging materials. Waste batteries and old electronic products should be sorted and properly disposed of.

Charging method

1. When the battery icon shows "status", it means the current power is low. Please charge this machine in time; (Do not use the machine while charging)
2. Connect the charging adapter with the charging cable that comes with you (recommended specification DC5V=1.0A, this product does not provide a charger);
3. It can be fully charged in about 4-6 hours. (Indicator light:when charging the red light is on and the full light is off.
4. When charging, please keep it out of the reach of children to avoid potential safety hazards.

Important (warning)

If the battery has not been used for a long time or the battery power is exhausted, it may not be able to turn on immediately when charging again, please keep charging for a period of time and then turn on the battery.
1. Please do not immerse the battery in water, pay attention to moisture-proof explosion-proof.
2. Please do not disassemble or modify the battery without permission.
3. Do not short-circuit the positive and negative battery poles.
4. Do not place the battery in high temperature of 60℃ or near fire source.

 
5. The battery is not allowed to be used after being immersed in water.
6. Contains small parts, not suitable for children under three years old!
7. Please do not play near the fire!

Children playing guardians should watch over the side.
According to our national compulsory product CCC certification standards, the product is shipped without the power adapter, users who use the power adapter power supply, it is necessary to purchase the supporting use of CCC certification and meet the standard requirements of the power adapter

Machine maintenance and care

1. Please do not use sharp objects in the machine surface scratching.
2. To protect the machine, it is recommended that you put it back in the original packaging after use.
3. If the surface of the machine is splashed with dust or water droplets, please gently wipe it with a soft dry cloth to keep the machine clean.
4. Do not use volatile organic solvents (such as gasoline, thinner, etc.) to clean the machine surface.
5. Please turn off the power switch when the machine is not in use for a long time.
6. Before and after using the machine, please check whether there is any foreign matter or damage on each interface. If there is any foreign matter, please take it out as soon as possible. If there is any damage, please consult the manufacturer for repair.

Product structure / product description

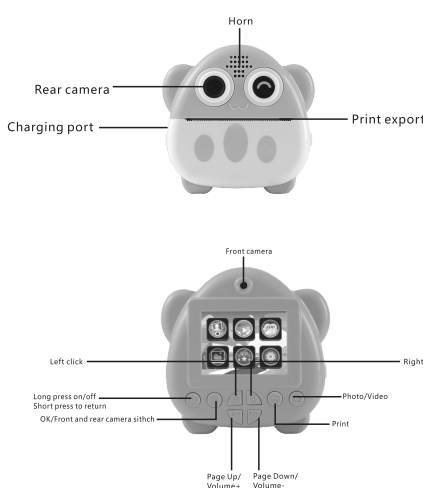

1. Take photo/confirm key: (1) In photo mode: short press to take a photo
2. Swipe up: switch up and down (menu, picture preview, settings, frame/filter mode)

3. Left flip button/album key: Left flip button to view picture/video (view video, short press to take photo/confirm button to play)
4. Flip down: switch up and down (menu, picture preview, settings, frame/filter mode)
5. Lens switch key: lens effect preview/effect display
6. Right flip key/print key: Left flip key to print
7. Back/On/Key: Game back key, long press on and off, short press to return to the main menu

Technical specifications

Display:2.4inch color screen
storage card:Up to 32g
Volume size: 94*43*90mm
Fuselage weight:about 163gram
Working temperature: -5℃ to 40℃
System language:Chinese,traditional Chinese,English,etc

MICRO-TF card installation and replacement:

 
1. No card can be printed, not photographed.
2. Please insert the TF card before use, card speed requirements Class4 or more.

Printing instructions:

1. Make sure the TF card and print paper are correctly installed.
2. Enter the photo mode, press the "print button" to print as you go.
3. Switch to image browsing mode by "picture browsing key", select the photo you like in all the pictures you have taken, and press the print key to print the current photo.

Print paper installation and replacement:

Ensure that the correct installation according to the diagram, otherwise it can not print

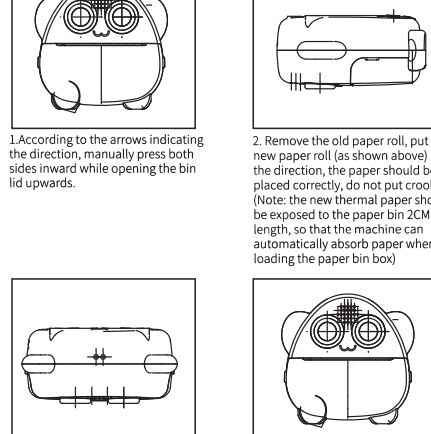

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

The devices has been evaluated to meet general RF exposure requirement, the device can be used in portable exposure condition without restriction