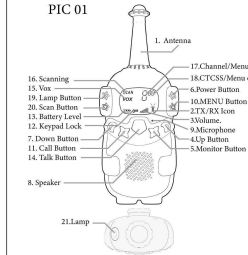
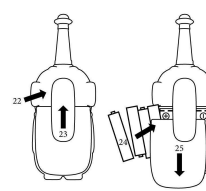


Walkie talkie toys 	PIC 01 	PIC 02 	EN—Instructions for use This set includes 2 walkie-talkie units; these are communication devices which operate on mobile radio frequencies. They come with 22 optional channels as well as a backlit LCD screen, enabling you to communicate over several kilometers free-of-charge (up to 3 km in open areas) using the equipment and remain for future consultation! SPECIFIC RECOMMENDATIONS • If you carry any kind of personal medical device, consult a doctor before use. • To avoid the risk of burns, do not use the device if the aerial is damaged in any way. • Do not use the device in a potentially explosive setting (e.g. around petrol pumps, on the lower deck of a boat or around a fuel storage installation or chemical products) • If travelling in a car or by bike, stop before using the device. Switch off the device if on an aeroplane or in a hospital. • Never use the device in close proximity to a radio to avoid interference. • Remove the batteries if the device is not in use for an extended period of time. Never mix used and new batteries. • Position the transmitter and antenna at least 5 cm from your face. Direct the antenna upwards and speak normally. • Clean the device with a damp cloth. Avoid the use of cleaning agents and solvents. • Do not modify the device in any way. In the event of damage occurring, ensure that the device is checked by a qualified professional. • The device cannot be used to contact the emergency services.	ITEM DESCRIPTION (Pic01,02) 1. Antenna 2. RX icon - Displayed when receiving 3. TX icon - Displayed when transmitting 4. Volume level indicator 5. Adjuster button Up (▲) 6. Continued reception (MON) 7. On / off button (O) 8. Loud speaker 9. Microphone 10. Menu 11. Enter the menu settings 12. Call button (CALL) 13. Battery level indicator 14. Push to talk (TALK) button 15. VOX indication 16. Scanning indication 17. Displayed during scan mode 18. Channel/Memo item indication 19. 18/CTCSS/Memo option - value 20. Scan Button 21. Lamp 22. Belt attachment clip 23. Belt attachment 24. Batteries (not supplied) 25. Battery compartment	BEFORE USE (Pic02) To insert batteries into the device, first remove the belt attachment lift the attachment clip(23) and press the belt attachment upwards (24). Open the battery compartment (26) and insert AAA batteries (25) (not supplied), ensuring that the poles are correctly aligned. Then close the lid. USING THE TWINTALKER 1. Turning the device on/off: To turn the device on or off, hold down the on/off button (6) for 3 seconds; a BEEP sound will be played to confirm. 2. Adjusting the volume: To increase the volume, press the Up adjuster button (▲) and press the Down (▼) button to decrease volume. Note: The volume level (3) is displayed on the screen. 3. Battery Level/Low Battery Indication The battery level is indicated by the number of squares presented inside the battery icon on the LCD Screen. ■ Battery Full ■ Battery 2/3 charged ■ Battery 1/3 charged □ Battery empty When the battery level is low, the battery icon will flash and a beep will be heard to indicate that the battery needs to be recharged or replaced.	4. Receiving/transmitting communications: The devices are in Reception mode when lit up, i.e. they are ready to receive a callor sound transmitted on the activated frequency. - When you press the Call tone button (12), the device switches to Transmission mode. You are then transmitting a sound signal to the other device. - To send a voice message, press the TALK button (15) and speak into the microphone (8). Continue to press the button until you have finished transmitting your message. Hold the microphone a minimum of 5 cm from your face. 5. Changing Channels - Press the MENU button (11) once, the current channel number flashes on the display. - Press the ▲ button (4) or the ▼ button (7) to change the channel. - Press the TALK button (15) to confirm and return to stand-by Mode. Note: If no button is pressed within 15 seconds during setting, the unit will return to standby. 6. CTCSS (Continuous Tone Coded Squelch System) License free radio/operating on the 400-470 MHz frequency band, like the Twintalker Jave 8/20/22 available radio channels, if there are many radio users in your neighborhood, there is a chance that
EN USER INSTRUCTIONS						