

Quick Guide

Scan the QR code with the camera to watch how to set up the WiFi Extender



Model:Z03-300



Repeater Mode Setup Guide (via phone)

Step 1

Plug the WiFi Extender into a power outlet near your Router (Recommended within 20 feet).

Tips: Please make sure that the router is turned on and able to access the internet before setting!

Step 2

Go to your phone settings and open the WiFi list, Search the default network "Extender-2.4G-XXXX" and connect.



 
Step 3

Waiting for the management page to pop up automatically, and click "Start". If access fails, please check if the WiFi "Extender-2.4G-XXXX" is connected



Step 4:

After entering the page, click "Next" button and choose "Repeater" to set up.

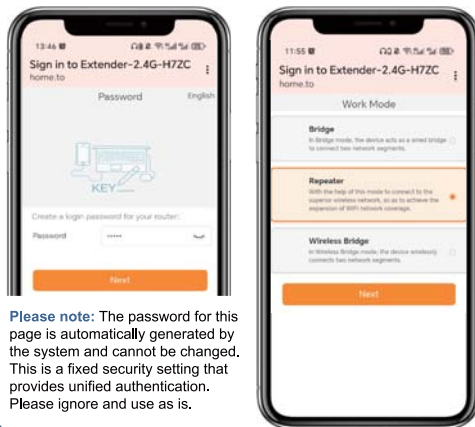

Please note: The password for this page is automatically generated by the system and cannot be changed. This is a fixed security setting that provides unified authentication. Please ignore and use as is.

 
Step 5:

Select the existing network you want to extend (e.g.: My WiFi), and click "Next". (If the network you want to extend didn't appear, please click on "🔄" and try again.)




Step 6:

Enter your router password (e.g.: A1234567) and click "Next".

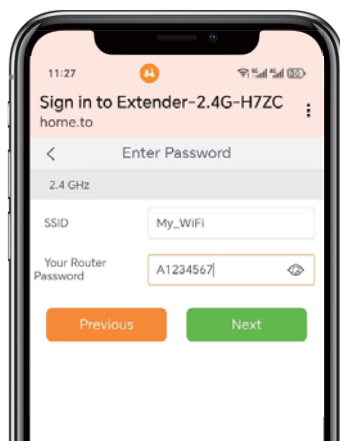


Step 7:

 Enter your router password (e.g.: A1234567) and click "Save". **Please note:** You can change password here if you prefer a different password for the repeater

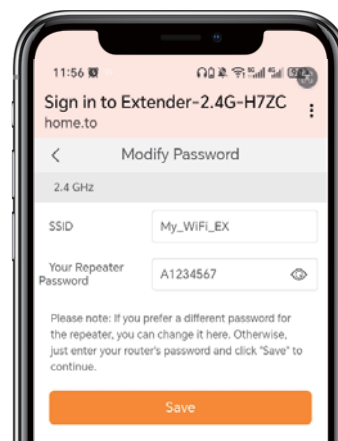

Step 8:

 Please wait 30 seconds and Back to WiFi list. The new extended network defaults to the "router name-EX", enter password to connect and access the network.

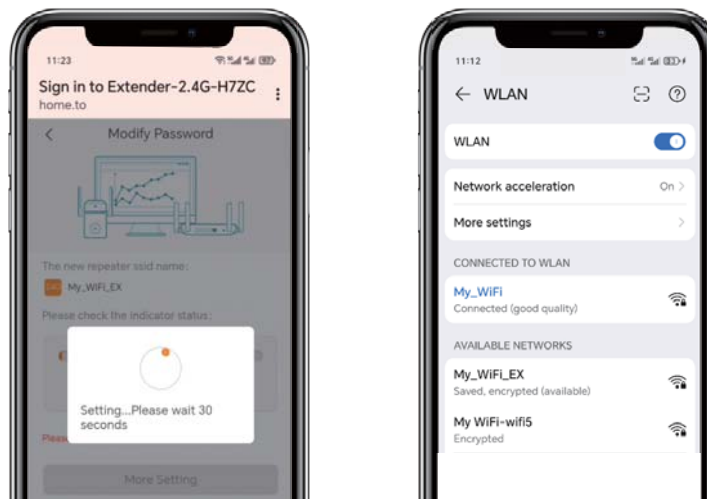


Congratulations! The WiFi extender has been set up.

Repeater Mode Setup Guide(via WPS button)

- 1 Plug the WiFi Extender into an outlet near your Router (Recommended within 20 feet). Wait 1 minutes for it to boot.
- 2 Press the WPS button on your main router for 1-2 seconds.
- 3 Press the WPS button on the WiFi Extender for 1-2 seconds within 10 seconds and the Signal Lights will remain flashing.
- 4 Please wait 1 minutes and reconnect to the new expanded network, (The expanded networknames are "router name-EX" by default). Enter the same password as your router network to connect andaccess the network.




 Product Introduction

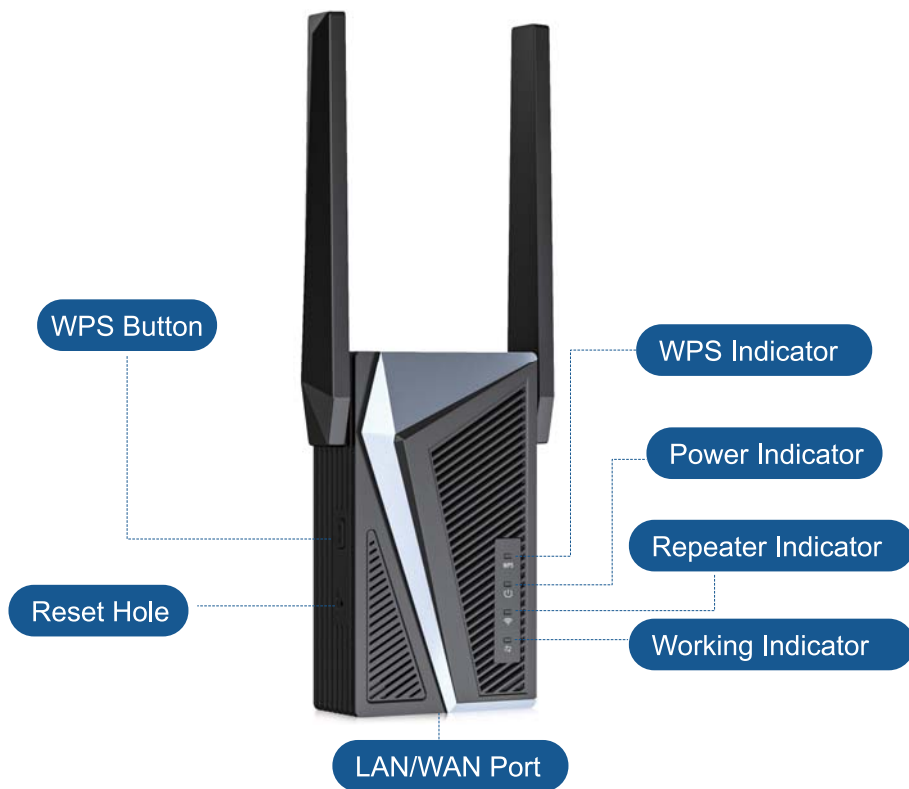

How to Reset the Wifi Extender

 - 1 Plug the WiFi Extender into an outlet.
- 2 Wait 1 minute for it to boot
- 3 To reset the WiFi extender, locate the reset hole on the device. Insert the card pin into the reset hole and press and hold for 5-7 seconds until the indicator light blinks to restore the factory settings.

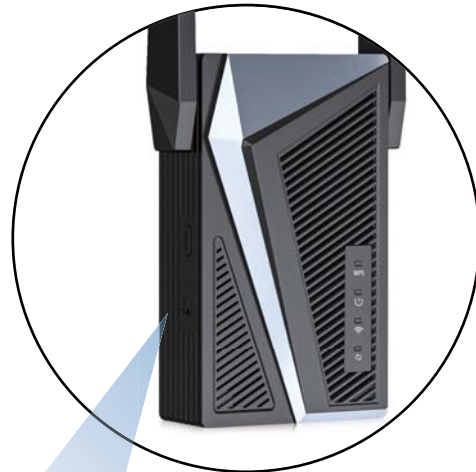

RESET

1. My WiFi says connected but I have no internet connection.

- If the WiFi is connected, but there is no internet, check that the router's WiFi is actively working. And try to restart the router.
- You may have entered the wrong password, It could also be for some other reasons, so try to restore factory settings. To do that, please use a card pin to press the RESET hole for 5-7 seconds to restore the factory setting. And setup again via mobile phone.

2.How far should the Extender be from the router?

- It should be between the router and the area with a low signal. The position must be able to receive a good WiFi signal from the router.

3.Does the extender work with 5G?

- No, only with 2.4G.

FCC Statement

15.105

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

KDB447498 D01 v05r02 (P5)

FCC Radiation Exposure Statement

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment and it also complies with Part 15 of the FCC RF Rules. This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provided with antenna installation instructions and consider removing the no-collocation statement.

15.19

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

15.21 / KDB784748 D01 v08 (P4)

Caution!

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

GUARANTEE

- **IMPORTANT:** All WiFi extenders on the market are designed to increase or improve WiFi coverage. That means It can improve the locations which are getting weak signals from your router and **NOT TO INCREASE WIFI SPEED**
- According to the laws of physics, WiFi Extenders will always be slower than your existing router. This is because the WiFi extender has to split its bandwidth between the router.
- **Note!** Based on 350 000+ sold units, the extender may not be effective or doesn't work in 3% of cases due to interference or incorrect setup. **ONE OF THEM?** Contact our friendly customer service team.
- **UNHAPPY?** We'll give a full money refund or a replacement and you can keep the old product to avoid to hassle of shipping the product back.

WARNING

1. Keep the device away from water, fire, humidity or hot environments.
2. Do not attempt to disassemble, repair, or modify the device. If you need service, please contact us.
3. Do not use the device where wireless devices are not allowed.
4. The socket-outlet shall be installed near the equipment and shall be easily accessible.

5. For pass through devices, plug the power strips into the integrated electrical sockets of the devices, but devices of the same or another type not be stacked in normal use. Please read and follow the above safety information when operating the device. We cannot guarantee that no accidents or damage will occur due to improper use of the device. Please use this product with care and operate at your own risk.

Scan the QR code with the camera to watch how
to setup the WiFi Extender



Thanks for your trust and purchase!