

Quick Installation Guide

View full video
setup tutorial at
<https://youtu.be/hvUvMooZ88>


or scan QR



Model: Z04-300M



Product Introduction

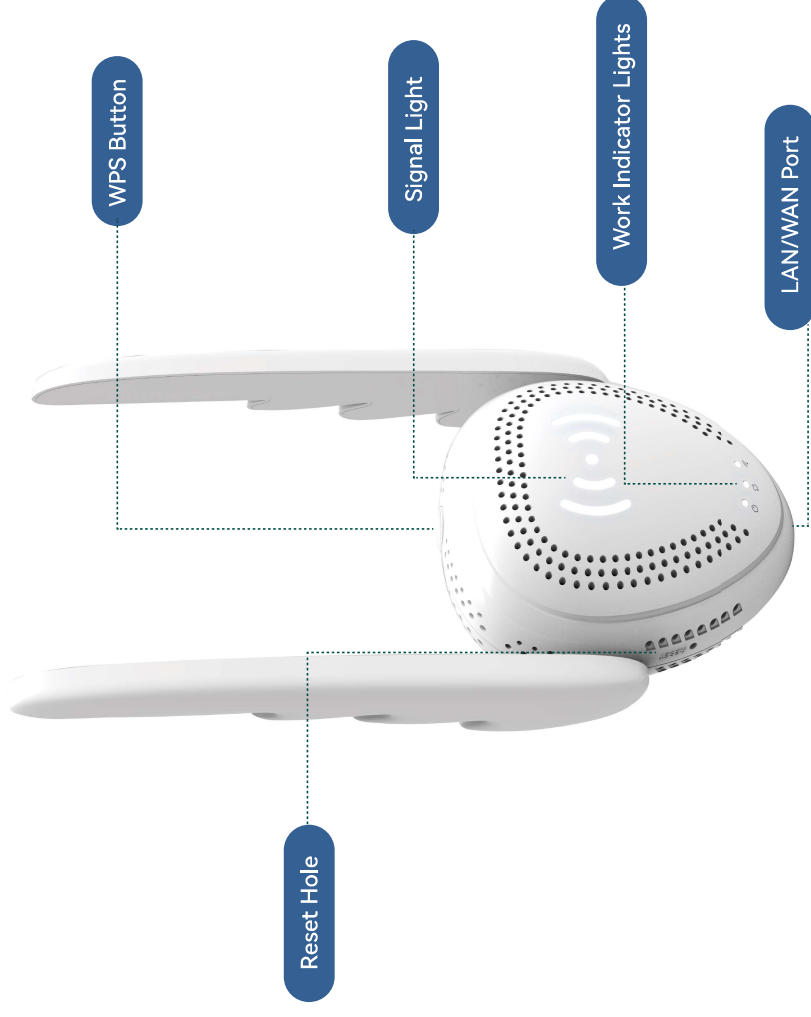

Repeater Mode setup Guide (via phone)

Step 1

Plug the WiFi Extender into an outlet near your Router (Recommended within 20 feet). Wait 1 minutes for it to boot.

Tips: All LEDs Solid (Power/Signal/WiFi) Confirms operational readiness.
Enables access to the configuration interface .



Step 2

Open and enable WiFi on your phone or PC settings. Search for the network name "Extender-2.4G-xxxx" and connect one of them



Step 3

Wait for the management page to load automatically. If it does not load, open your web browser (Safari, Chrome, Firefox) and enter

home.to

in the address field.


Tips: Please enter "home.to" when mobile data is disconnected and no Wi-Fi signal is available.

Step 4

Click the “Start” button to begin setup, then click “Next” to proceed to subsequent steps.


Tip: Password Configuration Guide

1. Default Credentials:
Initial administrative access requires the preset password: “admin”
2. Optional Modification:
You may customize this password; this action will not affect subsequent setup procedures.
3. Reset Behavior Note:
Performing a factory reset will restore the administrator password to its default value—admin (requires reconfiguration after reset).

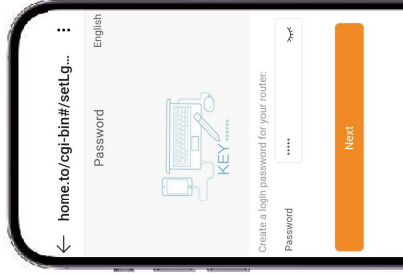


Step 5

Enter the software management interface and click “NEXT”

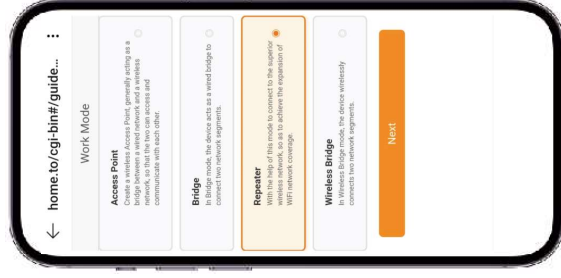


Step 6

Scan and select the WiFi network you want to extend and wait **20** seconds.

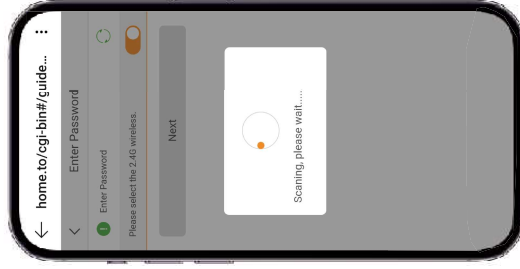


Step 7

Select your router network and click **"NEXT"**

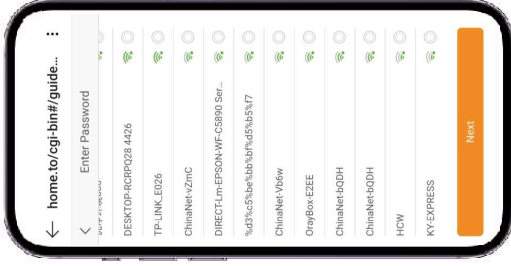

Step 8


Type the [password of your main router](#) and click "Next".

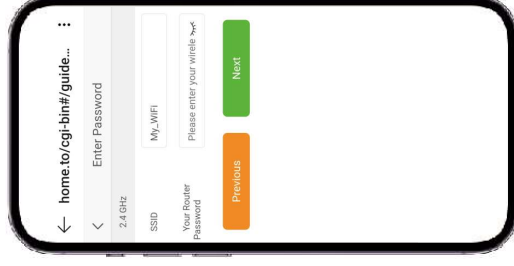

The screenshot shows a mobile interface for configuring a router. At the top, there is a navigation bar with a back arrow, the text "home.to/cgi-bin#/guide...", and a menu icon. Below this is a sub-header "Enter Password" with a left arrow and a right arrow. The main content area has a "2.4 GHz" label. There are two input fields: "SSID" with the value "My_WiFi" and "Your Router Password" with the placeholder "Please enter your wireless". At the bottom, there are two buttons: "Previous" (orange) and "Next" (green).

Step 9

To modify the network name and password, enter the new SSID and password, then click "[Save](#)".

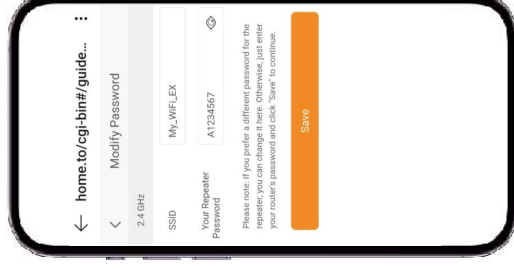


The screenshot shows a mobile interface for configuring a router. At the top, there is a navigation bar with a back arrow, the text "home.to/cgi-bin#/guide...", and a menu icon. Below this is a sub-header "Modify Password" with a left arrow and a right arrow. The main content area has a "2.4 GHz" label. There are two input fields: "SSID" with the value "My_WIFI" and "Your Repeater Password" with the value "A1234567". At the bottom, there is a large orange "Save" button. A note at the bottom reads: "Please note: If you prefer a different password for the repeater, you can change it here. Otherwise just enter your router's password and click 'Save' to continue."

Step 10

After the countdown ends, return to the WLAN settings page.


Note: Do not click “More Settings.”

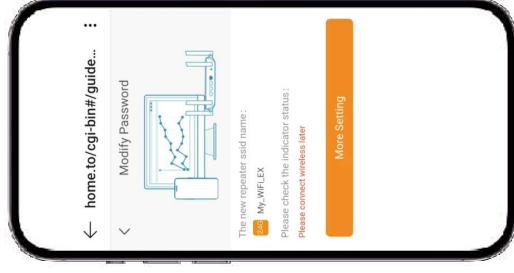

Step 11


Congratulations!
The WiFi Extender has been setup and you can go online.

NOTE: For example, the SSID of my main router is "My WiFi". So it's name is "My_WiFi_Ext"

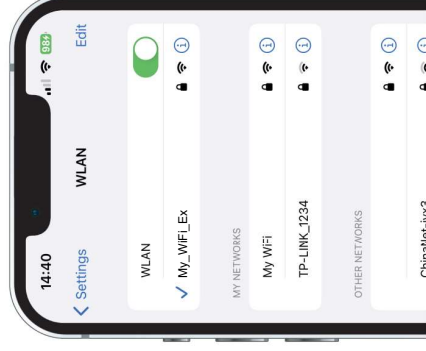

Repeater Mode Setup Guide(via WPS button)

- 1 Plug the WiFi Extender into an outlet near your Router (Recommended within 20 feet). Wait 1 minutes for it to boot.
- 2 Press the WPS button on your main router for 1-2 seconds.
- 3 Press the WPS button on the WiFi Extender for 1-2 seconds within 10 seconds and the Signal Lights will remain flashing.
- 4 Please wait one minute, then reconnect to the new extended network (the extended network name is "Router Name-Ex"). Enter the same password as your router's network to connect and access it.

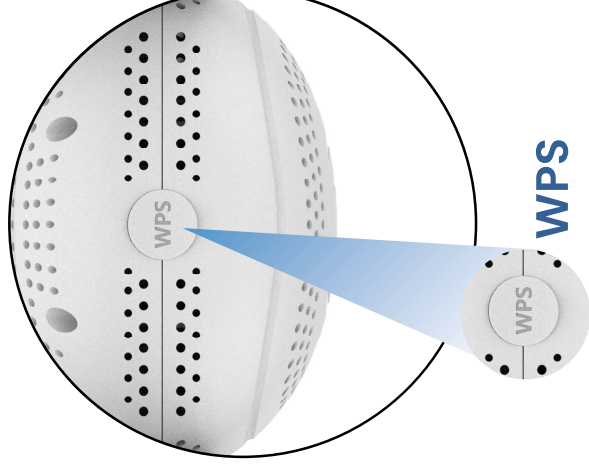

HOW TO RESET THE WIFI EXTENDER

- 1 Plug the WiFi Extender into an outlet.
- 2 Wait 1 minute for it to boot
- 3 To reset the WiFi extender, locate the reset hole on the device. Insert the card pin into the reset hole and press and hold for 5-7 seconds until the indicator light blinks to restore the factory settings.



1. My device won't connect to the extender:

- Make sure the device is on the same network and band.
REMEMBER: WiFi enabled devices are complex and vary widely. Some off brand devices may not recognize premium quality extenders due to their technological limitations.

2. My WiFi says connected but I have no internet connection:

- If the WiFi is connected, but there is no internet, check that the router's WiFi is actively working. And try to restart the router.
- You may have entered the wrong password. It could also be for some other reasons, so try to restore factory settings. To do that, please use a card pin to press the RESET hole for 5-7 seconds to restore the factory setting. And setup again via mobile phone.

GUARANTEE

- **IMPORTANT:** All WiFi extenders on the market are designed to increase or improve WiFi coverage. That means It can improve the locations which are getting weak signals from your router and **NOT TO INCREASE WIFI SPEED**
- According to the laws of physics, WiFi Extenders will always be slower than your existing router. This is because the WiFi extender has to split its bandwidth between the router.
- **Note!** Based on 350 000+ sold units, the extender may not be effective or doesn't work in 3% of cases due to interference or incorrect setup. **ONE OF THEM?** Contact our friendly customer service team.
- **UNHAPPY?** We'll give a full money refund or a replacement and you can keep the old product to avoid to hassle of shipping the product back.


WARNING

1. Keep the device away from water, fire, humidity or hot environments.
2. Do not attempt to disassemble, repair, or modify the device. If you need service, please contact us.
3. Do not use the device where wireless devices are not allowed.
4. The socket-outlet shall be installed near the equipment and shall be easily accessible.
5. For through-type devices, plug the power cord into the integrated power port on the device. However, do not stack devices of the same or different types during normal operation. Carefully read and follow the safety information above when operating the device. We cannot guarantee that accidents or damage caused by improper use will not occur. Use this product with caution, and assume full responsibility for any operational risks.

Scan the QR code with the camera to watch how
to setup the WiFi Extender



RECOMMEND

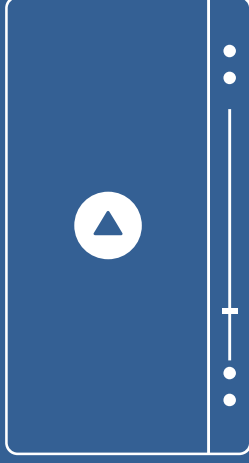

ALTERNATIVE

Thanks for your trust and purchase!

FCC Warning

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.