


EV AC Charger Instruction Manual

HBE-AC32A01HW-U-SHEAED / HBE-AC40A01HW-U-SHEAED
HBE-AC48A01HW-U-SHEAED / HBE-AC32A01HW-U-SHEAED4G
HBE-AC40A01HW-U-SHEAED4G / HBE-AC48A01HW-U-SHEAED4G

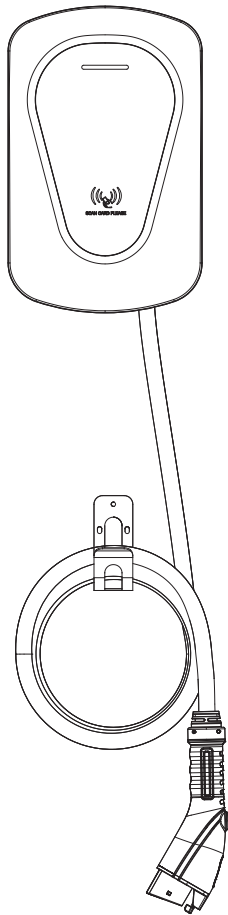

Catalogue

IMPORTANT SAFETY INSTRUCTIONS.....	2
CONCERNANT LA SÉCURITÉ CONSERVER CES.....	3
For Both FCC & IC application.....	4
CAUTION.....	5
Safety Precautions.....	6
1. Brief account.....	6
2. Equipment parameters.....	7
3. Schematic diagram.....	10
4. Shape Model Diagram.....	11
5. Product installation.....	12
5.1 Tools and Materials Required.....	12
5.2 Basic Requirements for hanging plate.....	12
5.3 ColumnInstallation Requirements.....	13
5.4 Input Device Requirements.....	15
5.5 Device Commissioning.....	16
6. Charging operation flowchart.....	16
6.1 Charging operation flowchart.....	16
6.2 Charging Mode Startup operation interface.....	18
6.3 Process for Setting Parameters.....	21
7. Operating instructions and use of emergency stop switch.....	23
7.1 Operatingprocedures.....	23
7.2 Use of emergency stop switch.....	23
Warm reminders.....	24
8. User maintenance instructions.....	24
8.1 Instructions.....	24
8.2 Maintenance.....	25
9. Description of packing, handling, transportation and storage.....	25

IMPORTANT SAFETY INSTRUCTIONS



WARNING – When using electric products, basic precautions should always be followed, including the following.

- a) Read all the instructions before using this product.
- b) This device should be supervised when used around children.
- c) Do not put fingers into the electric vehicle connector.
- d) Do not use this product if the flexible power cord or EV cable is frayed, has broken insulation, or any other signs of damage.
- e) Do not use this product if the enclosure or the EV connector is broken, cracked, open, or shows any other indication of damage.
- f) This charging pile cannot be dismantled, repaired or modified by the customer.
- g) To reduce the risk of fire, connect only to a circuit provided branch circuit over-current protection in accordance with the CSA C22.1-15 Canadian Electrical Code, Part 1 (Canada) or NOM-001-SEDE Electrical installations (utility) (Mexico) or ANSI/ NFPA70 National Electrical Code (USA).
- h) **WARNING**

GROUNDING INSTRUCTIONS

This product must be connected to a grounded, metal, permanent wiring system, or an equipment-grounding conductor must be run with the circuit conductors and connected to the equipment grounding terminal or lead on the product.

- i) When any fault occurs, the product is prohibited to use, the user is prohibited to repair, must be sent to the after-sales maintenance or call the after-sales service for help.
- j) Risk of electric shock.



SAVE THESE INSTRUCTIONS

CONCERNANT LA SÉCURITÉ CONSERVER CES



AVERTISSEMENT: Des mesures de précautions de base devraient être utilisées avec tous les produits électriques, y compris les mesures indiquées ici.

- a) lisez toutes les instructions avant d'utiliser ce produit.
- b) Ce dispositif devrait être supervisé lorsqu'il est utilisé autour des enfants.
- c) Ne mettez pas les doigts dans le connecteur du véhicule électrique.
- d) N'employez pas ce produit si le cordon d'alimentation flexible ou le câble EV est effiloché, a une isolation cassée, ou tout autre signe de dommages.
- e) N'utilisez pas ce produit si le boîtier ou le connecteur EV est cassé, fissuré, ouvert, ou montre toute autre indication de dommages.
- f) Cette pile de charge ne peut être démontée, réparée ou modifiée par le client.
- g) Pour réduire le risque d'incendie, branchez uniquement un circuit pour une protection contre les surintensités de circuit de branche conformément à la norme CSAC22.1-15 du Code canadien de l'électricité, partie 1 (Canada) ou à la norme NOM-001-SEDE Electrical installations (utility) (Mexique) ou à la norme ANSI/NFPA 70 du Code National de l'électricité (États-Unis).
- h) **CONSIGNES DE MISE À LA TERRE** Ce produit doit être raccordé à un réseau de câblage mis à la terre, métallique et permanent, ou un conducteur de mise à la terre de l'appareil doit être ajouté au circuit et raccordé à la borne de terre de l'appareil ou au conducteur d'alimentation de l'appareil.
- i) Quand n'importe quel défaut se produit, le produit est interdit pour employer, l'utilisateur est interdit pour réparer, doit être envoyé à l'entretien après-vente ou appeler le service après-vente pour l'aide.
- j) Risque de choc électrique.



CONSERVER CES INSTRUCTIONS

For Both FCC & IC application:

This device complies with Part 15 of the FCC Rules / Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

MPE Requirements

To satisfy FCC / IC RF exposure requirements, a separation distance of 20 cm or more should be maintained between the antenna of this device and persons during device operation.

To ensure compliance, operations at closer than this distance is not recommended.

Les antennes installées doivent être situées de façon à ce que la population ne puisse y être exposée à une distance de moins de 20 cm. Installer les antennes de façon à ce que le personnel ne puisse approcher à 20 cm ou moins de la position centrale de l'antenne.

La FCC des états-unis stipule que cet appareil doit être en tout temps éloigné d'au moins 20 cm des personnes pendant son fonctionnement.

CAUTION

- Risk of electric shock. Do not remove cover or attempt to open the enclosure. No user serviceable parts inside. Refer servicing to qualified service personnel.
- Do not use this product if there is any damage to the unit. To reduce the risk of electric shock, connect only to properly grounded outlets.

WARNING

- Only for use with vehicles that do not require ventilation.
- To avoid a risk of fire or electric shock, do not use this device with an extension cord.
- Risk of explosion. This equipment has arcing or sparking parts that should not be exposed to flammable vapors. This equipment should be located at least 460 mm (18 inches) above the floor.

ATTENTION

- Risque de choc électrique. Ne pas retirer le couvercle ni essayer d'ouvrir le boîtier. Aucune pièce interne réparable par l'utilisateur. Confier tout travail d'entretien ou de réparation à un technicien qualifié.
- Ne pas utiliser ce produit si l'appareil est endommagé. Pour réduire le risque de choc électrique, brancher sur une prise correctement mise à la terre.

AVERTISSEMENT

- Ce dispositif est destiné au chargement des véhicules ne nécessitant pas de ventilation au cours du chargement.
- Pour réduire le risque de choc électrique ou d'incendie, ne pas utiliser de rallonge avec cet appareil.
- Risque d'explosion. L'appareil comporte des pièces pouvant produire des arcs électriques ou des étincelles qui ne devraient pas être exposées aux vapeurs inflammables. Cet appareil devrait être installé à au moins 460 mm (18 pouces) au-dessus du plancher.

Safety Precautions

1. Do not bring dangerous items such as inflammable, explosive, or combustible materials, chemicals, and combustible steam near charging piles.
2. Keep the head of the charging gun clean and dry. If there is any dirt, please wipe it with a clean dry cloth. Do not touch the charging plug core with your hand when it is electrified.
3. Do not use charging piles in case of charging plug or charging cables are broken, cracked, exposed etc. If anything above is found, please contact the staff in time.
4. Do not disassemble, repair and modify charging piles without permission. If there is any need for maintenance and modification, please contact the staff. Improper operation may cause equipment damage and leakage phenomenon.
5. If there is any abnormal situation during usage, please immediately press the emergency button and cut off the power supply.
6. During the charging process, the vehicle is not allowed to drive and can only be charged when it is stationary. Please turn off the engine before charging the hybrid electric car.
7. In case of rain and thunder, please charge carefully.
8. Children should not approach and use charging piles during charging to avoid injury.
9. Please close the doors on both sides during charging to avoid electric shock.
10. During the charging process, the charging connector should not be pulled out forcibly, which may cause fire at the connector and result in a safety accident.

1. Brief account

It is a wall-mounted AC charger, which is mainly used for AC slow charging of electric vehicles. It integrates charging control, human-computer interaction control, communication, billing and metering functions. With protection level up to 4X, it can work safely indoors (If installed outdoors, chargers should be equipped with an awning, if not, please do not charge cars when it rains). It meet tha charging needs of electric vehicles with different capacities.

2. Equipment parameters

a. HBE-AC32A01HW-U-SHEAED parameters ☐

HBE-AC32A01HW-U-SHEAED4G parameters ☐

Specifications	Values
Maximum power of the product	7.6KW
Input Voltage	240VAC
Input Frequency	50/60Hz
Output voltage	240VAC
Single Maximum Output Current	32A
Charge Mode	Optional: ☐ Offline swipe card ☐ Operation online scan code ☐ Operation online swipe card ☐ Plug and play ☐ Credit card terminal
Communication Mode	Optional: ☐ Ethernet ☐ WIFI ☐ 4G
Operating Temperature	-30 to +50°C
Relative Humidity	≤95%
Protection Level	TYPE 4
IK protection degreeT	IK08
Safety Design	The protection of leakage, over-voltage protection, over current, under-voltage protection, emergency stop protection, full stop charging protection, short circuit protection, Overtemperature protection
Installation Mode	Wall-mounted mode
Interfaces Count	One cable with 18 ft
Size	16 1/2 x 10 1/2 x 4 1/2 inch (419.7x 267.5 x 115.5mm)
Operating Environment	Outdoor , Indoor
Operating Occasion	Residential charging
Output Interface	SAE J1772 AC
Altitude	≤6561.68 ft
Net Weight	16.5 lbs(Contains a gun and 18ft output cable)

b. HBE-AC40A01HW-U-SHEAED parameters ☐**HBE-AC40A01HW-U-SHEAED4G parameters** ☐


Specifications	Values
Maximum power of the product	9.6KW
Input Voltage	240VAC
Input Frequency	50/60Hz
Output voltage	240VAC
Single Maximum Output Current	40A
Charge Mode	Optional: ☐ Offline swipe card ☐ Operation online scan code ☐ Operation online swipe card ☐ Plug and play ☐ Credit card terminal
Communication Mode	Optional: ☐ Ethernet ☐ WIFI ☐ 4G
Operating Temperature	-30 to +50°C
Relative Humidity	≤95%
Protection Level	TYPE 4
IK protection degreeT	IK08
Safety Design	The protection of leakage, over-voltage protection, over current, under-voltage protection, emergency stop protection, full stop charging protection, short circuit protection, Overtemperature protection
Installation Mode	Wall-mounted mode
Interfaces Count	One cable with 18 ft
Size	16 1/2 x 10 1/2 x 4 1/2 inch (419.7x 267.5 x 115.5mm)
Operating Environment	Outdoor , Indoor
Operating Occasion	Residential charging
Output Interface	SAE J1772 AC
Altitude	≤6561.68 ft
Net Weight	16.5 lbs(Contains a gun and 18ft output cable)

c. HBE-AC48A01HW-U-SHEAED parameters ☐**HBE-AC48A01HW-U-SHEAED4G parameters** ☐


Specifications	Values
Maximum power of the product	11.5KW
Input Voltage	240VAC
Input Frequency	50/60Hz
Output voltage	240VAC
Single Maximum Output Current	48A
Charge Mode	Optional: ☐ Offline swipe card ☐ Operation online scan code ☐ Operation online swipe card ☐ Plug and play ☐ Credit card terminal
Communication Mode	Optional: ☐ Ethernet ☐ WIFI ☐ 4G
Operating Temperature	-30 to +50°C
Relative Humidity	≤95%
Protection Level	TYPE 4
IK protection degreeT	IK08
Safety Design	The protection of leakage, over-voltage protection, over current, under-voltage protection, emergency stop protection, full stop charging protection, short circuit protection, Overtemperature protection
Installation Mode	Wall-mounted mode
Interfaces Count	One cable with 18 ft
Size	16 1/2 x 10 1/2 x 4 1/2 inch (419.7x 267.5 x 115.5mm)
Operating Environment	Outdoor , Indoor
Operating Occasion	Residential charging
Output Interface	SAE J1772 AC
Altitude	≤6561.68 ft
Net Weight	16.5 lbs(Contains a gun and 18ft output cable)

3. Schematic diagram

**a. HBE-AC32A01HW-U-SHEAED / HBE-AC40A01HW-U-SHEAED /
HBE-AC48A01HW-U-SHEAED**

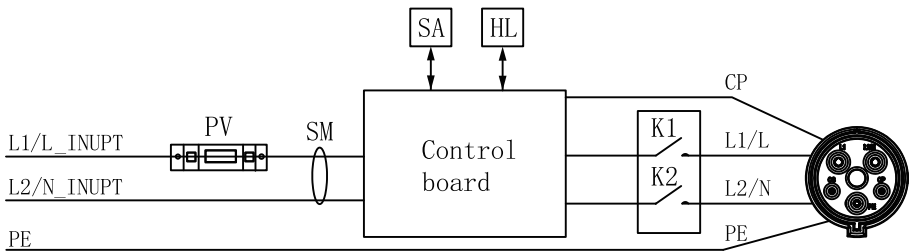

**b. HBE-AC32A01HW-U-SHEAED4G / HBE-AC40A01HW-U-SHEAED4G /
HBE-AC48A01HW-U-SHEAED4G**

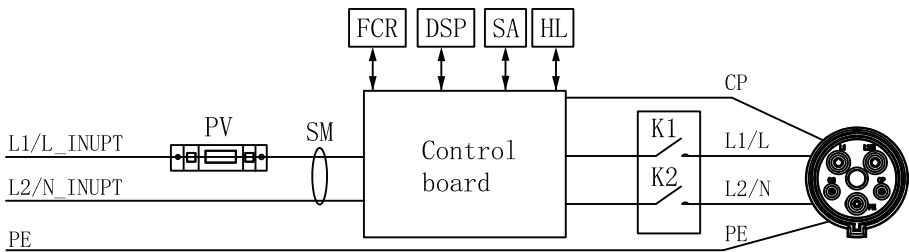

4. Shape Model Diagram




5. Product installation

Before installation, test the local network environment to ensure that the network environment ranges from 45 dB to 55dB.

5.1 Tools and Materials Required


Type	Description
Screwdriver	No. 2 and 3
Adjustable wrench	Pieces 0.25"(6.3mm) metric machine set STMT82672-23
Socket screwdriver	No. 8, 10, 17 and 19
Electrical tape	Black / 0.6" (15mm) Width
Electric drill	One manual electric drill (Diameter 0.24"(6 mm)) (Wall-mounted 0.55"(14 mm) Column installation)
Wire nipper	One
Needle nose pliers	One

5.2 Basic Requirements for hanging plate:

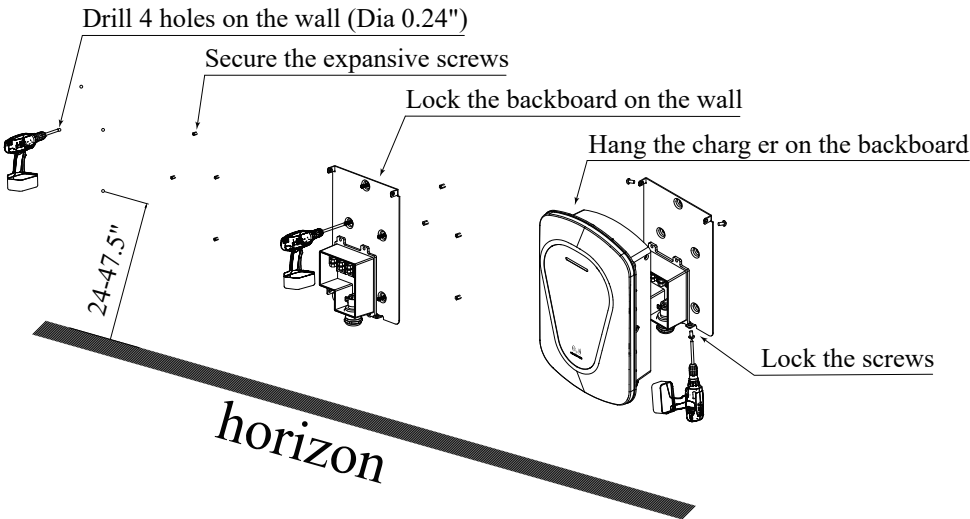


5.3 Column Installation Requirements:


Picture: Height, width, foundation installation diagram

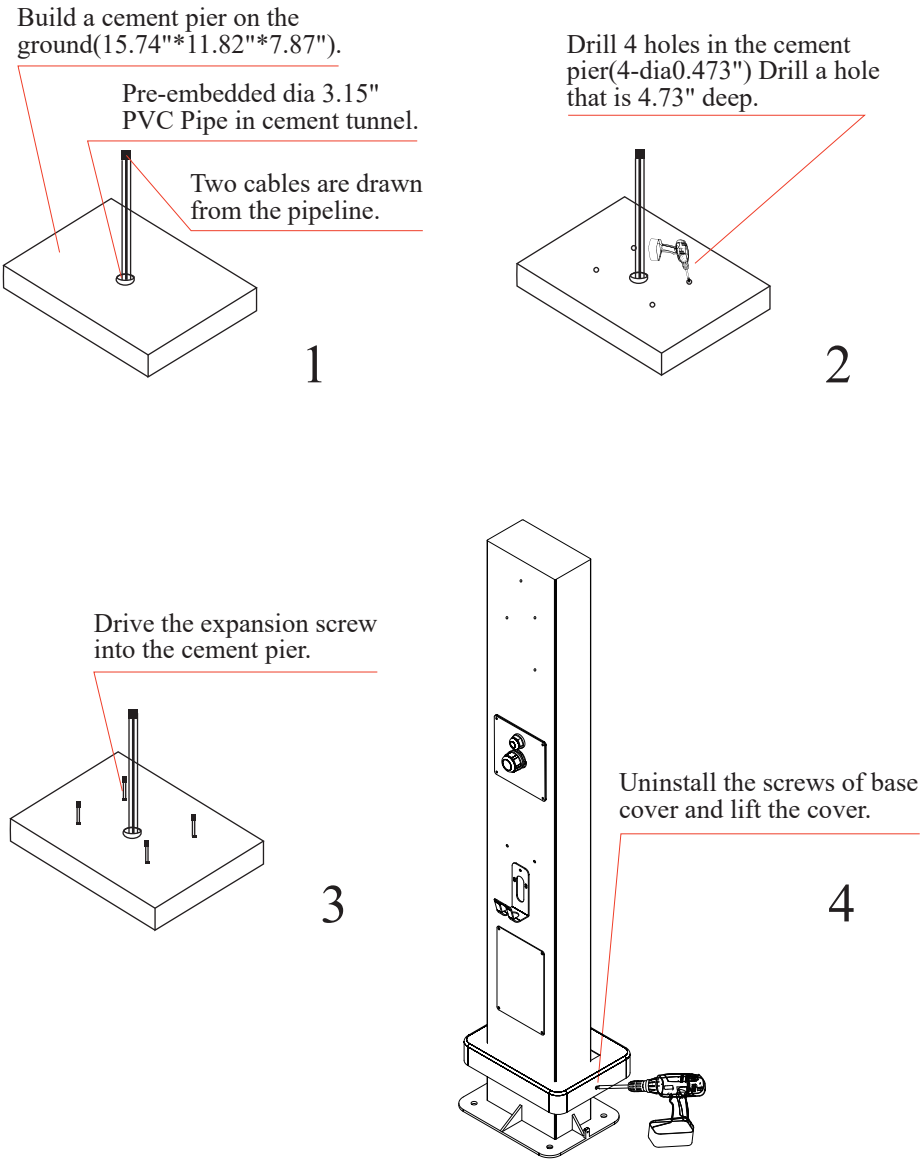



Aligned the screws of pedestal with the ones in cement pier and tight them.

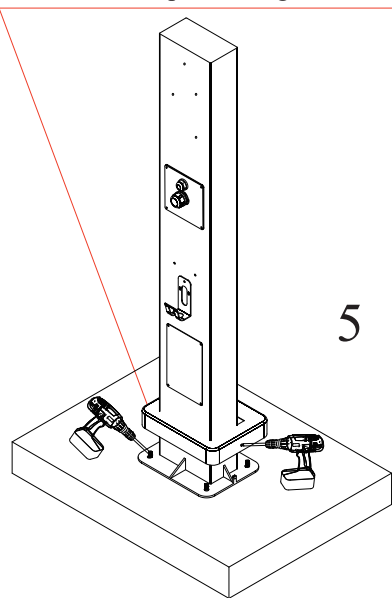


Secure the screws of cover

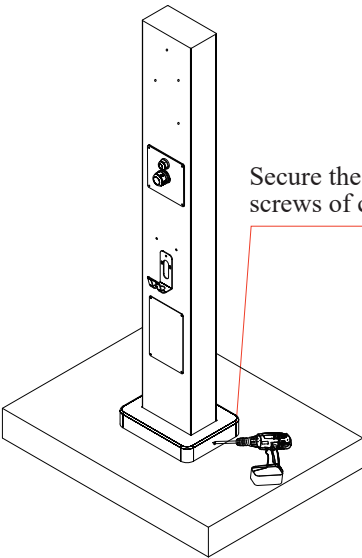

Assemble the backboard and charger pile in sequence

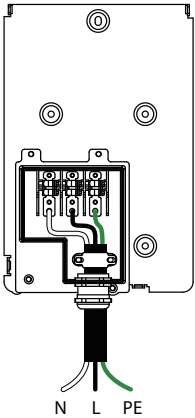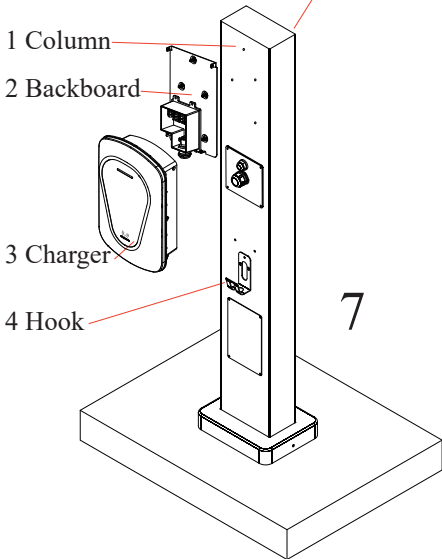

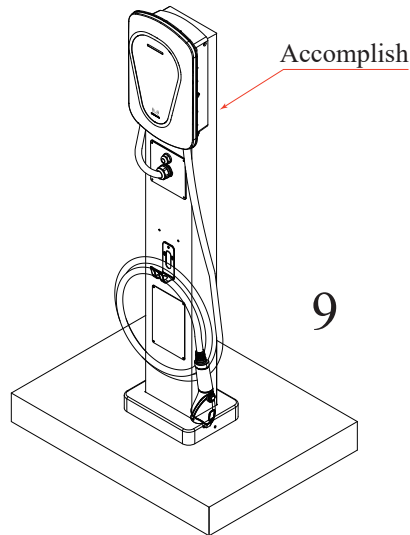

Note: This device shall be mounted at a sufficient height from ground such that the height of the storage means for the coupling device is located between 450 mm (18 inches) and 1.2 m (4 feet) from ground for indoor use, between 600 mm (24 inches) and 1.2 m (4 feet) from ground for outdoor use.

5.4 Recommended Tools for Installation:

a. HBE-AC32A01HW-U-SHEAED / HBE-AC32A01HW-U-SHEAED4G

Cable for Hardwire: 10AWG ×3

Breaker: Minimum requirements 50A/2P

b. HBE-AC40A01HW-U-SHEAED / HBE-AC40A01HW-U-SHEAED4G

HBE-AC48A01HW-U-SHEAED / HBE-AC48A01HW-U-SHEAED4G

Cable for Hardwire: 8AWG ×3

Breaker: Minimum requirements 63A/2P

Note: The cordset metal tube and Ethernet cord with the anti-theft tube do not with the EV charger shipped, only as an accessory.

Recommended: The cordset metal tube size for AC inlet lines is 1 inch.
Ethernet cord with the anti-theft tube size is 1/4 inch.


5.5 Device Commissioning:

- a. Check the device before power-on
- b. Check the power-on voltage of the device
- c. Pre-charge test


6. Charging operation

6.1 Charging operation flowchart

- a. HBE-AC32A01HW-U-SHEAED / HBE-AC40A01HW-U-SHEAED /
HBE-AC48A01HW-U-SHEAED

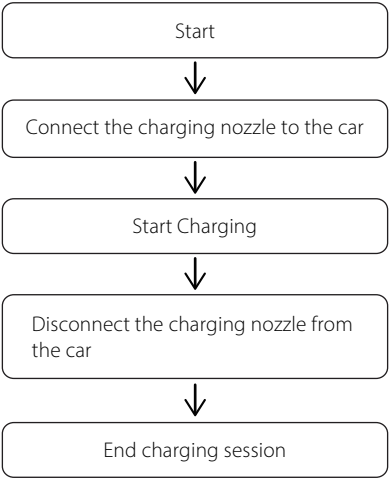

**b. HBE-AC32A01HW-U-SHEAED4G / HBE-AC40A01HW-U-SHEAED4G /
HBE-AC48A01HW-U-SHEAED4G**

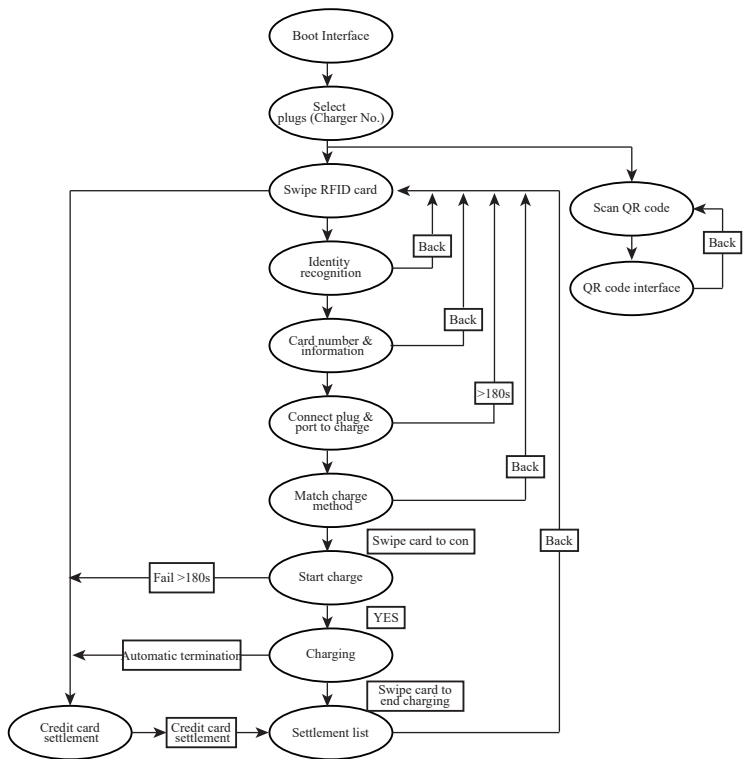

6.2 Charging Mode Startup operation interface

HBE-AC32A01HW-U-SHEAED4G / HBE-AC40A01HW-U-SHEAED4G /
HBE-AC48A01HW-U-SHEAED4G


This series of charging machine has two charging startup modes: swiping card(online card swiping/ offline card swiping) and scanning QR code. Specific operation examples are as follows:

a.Charging by swiping card(online card swiping/ offline card swiping)


1. Click on the middle position of the screen to enter the charging method selection interface.

The screen displays "Welcome to the charging system" with a green car illustration and a "Language" dropdown menu.


2. Click on the card reading charging method and select the card swiping charging mode.

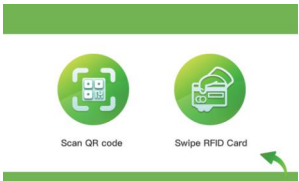The screen shows two options: "Scan QR code" and "Swipe RFID Card". A green arrow points to the "Swipe RFID Card" option.


3. Enter the waiting card swiping to start charging interface.

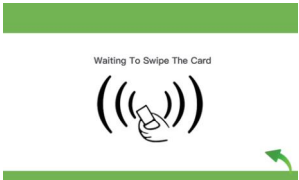The screen displays "Waiting To Swipe The Card" with a hand icon and a green arrow pointing to the right.

4. Swipe card successfully and enter the charging interface.

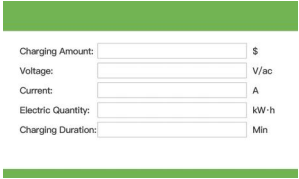The screen shows input fields for: Charging Amount (\$), Voltage (V/ac), Current (A), Electric Quantity (kW-h), and Charging Duration (Min). A green arrow points to the right.

5. Swipe the card again to stop charging and enter the settlement interface.

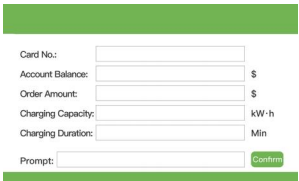The screen shows input fields for: Card No., Account Balance (\$), Order Amount (\$), Charging Capacity (kW-h), and Charging Duration (Min). It also has a "Prompt:" field and a "Confirm" button. A green arrow points to the right.

b. Scan QR code for charging mode

Scan the QR code on the pile directly with APP.

1. Click on the middle position of the screen to enter the charging method selection interface.

Language▼

Welcome to the charging system



2. Click on scan code to charge, wait for the user to start using the APP scan code.



Scan QR code



3. The APP successfully scanned the code and entered the charging interface.

Charging Amount: \$

Voltage: V/ac

Current: A

Electric Quantity: kW·h

Charging Duration: Min

4. Users use the app to remotely stop charging and enter the settlement interface.

Card No.:

Account Balance: \$

Order Amount: \$

Charging Capacity: kW·h

Charging Duration: Min

Prompt:


c. Password charging method

1. Click on the middle position of the screen to enter the charging method selection interface.




The screen displays a green car on a grassy field with trees in the background. The text 'Welcome to the charging system' is centered at the top. A 'Language' dropdown menu is in the top right corner.

2. After setting the password charging configuration, the user clicks on the screen and enters the user password.

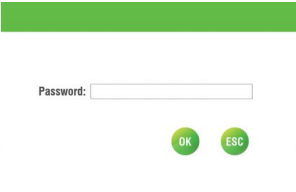


The screen shows a green header bar. Below it is a 'Password:' label followed by a text input field. At the bottom are two circular buttons labeled 'OK' and 'ESC'.

3. The user password has been successfully entered and enters the charging interface.

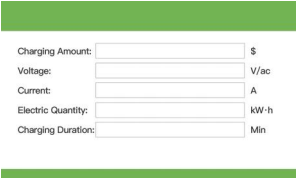


The screen features a green header bar. Below it are five rows of labels and input fields: 'Charging Amount:' with a '\$' symbol, 'Voltage:' with a 'V/ac' symbol, 'Current:' with an 'A' symbol, 'Electric Quantity:' with a 'kW·h' symbol, and 'Charging Duration:' with a 'Min' symbol. A green bar is at the bottom.

4. When the user is charging with a password, click on the screen and the password box will pop up. Enter the user password to enter the settlement interface.

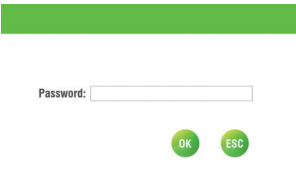

The screen shows a green header bar. Below it is a 'Password:' label followed by a text input field. At the bottom are two circular buttons labeled 'OK' and 'ESC'.

5. If the user password is entered correctly, the charging is completed.

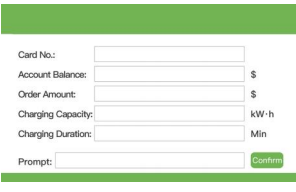

The screen features a green header bar. Below it are several rows of labels and input fields: 'Card No.', 'Account Balance:' with a '\$' symbol, 'Order Amount:' with a '\$' symbol, 'Charging Capacity:' with a 'kW·h' symbol, 'Charging Duration:' with a 'Min' symbol, and 'Prompt:' with a 'Confirm' button. A green bar is at the bottom.

6.3 Process for Setting Parameters

1. Continuously click on the bottom left corner, select English and French language, and jump to the password input interface.

Language▼

English

Français

Español

Welcome to the charging system



2. Enter the device parameter interface.



Parameter

screen800*480_2023.07.10



3. Enter a 3-digit password ***

1

2

3

4

5

6

7

8

9

0

←

OK



4. Users can configure the URL address, device station number, etc. of OCPP through this screen interface.

OCPP:

Charger No.:

Next Page

Cancel

Cancel

Page 21 of 25

5. Users can choose device offline, 4G, WIFI and other communication, grounding, leakage protection functions, etc. on this interface. After completion, click OK to return to the first interface.

Offline: ☐ 4G: ☐

Next Page

Leakage Protection: ☐ Wi-Fi: ☐

Confirm

Ground Protection: ☐

Charge Disabled

Cancel

6. Users can select the AC single-phase/three-phase, maximum current coefficient, etc. of the device on this interface.

Single Phase/Three Phase:

Next Page

Rated Current:

Confirm

Cancel

7. Users can choose the charging mode of the device on this interface, which includes: plug and play charging, APP scanning, RFID card swiping, password charging, etc.

Mode Selection

Plug-in-Charge:

Next Page

Standard Charging:

Confirm

Password Charging:

Cancel

8. After setting the parameters, click Save to return to the first interface.



7. Operation procedures and the use of emergency stop switch

7.1 Operating procedures

1. Open the hatch cover and charging socket protective cover on the vehicle after parking it in the charging station space.
2. Connect the car socket and the charging station plug.
3. Choose the appropriate mode (swipe card/ scan QR code), Save and then begin charging in accordance with the instructions above.
4. The combined instrument will display the pertinent parameters as soon as the charging indication turns on.
5. When the vehicle is fully charged, press and hold the unlock button to pull out the plug , insert it into the holder of the pillar.
6. Close the hatch cover and protective cover of the socket, end charging.

7.2 Use of emergency stop switch

1. In case of fire or electric shock, press the emergency stop switch immediately;
2. If the machine leaks electricity, please press the emergency stop switch immediately;
3. When the emergency stop switch is pressed in the charging state, the charging will stop immediately, the circuit breaker on the output side will be disconnected, and the fault light will turn on;
4. In case of pile failure, unable to stop charging, internal circuit short circuit and other abnormal conditions, please immediately press the emergency stop switch;
5. When the emergency stop switch is pressed in the non-charging state, the fault light will be on and the display screen will jump to the fault interface;
6. When the critical situation is relieved, please rotate the emergency stop switch, otherwise the charging cannot continue;

Warm reminders:

1. Please read the operation instructions and precautions carefully.
2. Before charging, check whether the charging gun is firmly in contact with the charging interface and whether the indicator works well.
3. During the charging process, do not forcibly pull out the charging connector. Forcibly pulling out the charging connector may cause fire at the connector, resulting in safety accidents.
4. To stop charging in advance, press the stop button and hold it for 5-10 seconds before pulling out the charging gun.
5. If any safety accident occurs during the charging process, such as abnormal sound or short circuit, press the emergency stop button immediately, disconnect all power supplies, and contact the on-site personnel.

8.0 User maintenance instructions

8.1 Instructions

The maintenance of AC charging pile is relatively simple. During operation, attention should be paid to ventilation and heat dissipation and keep the environment clean. There should be no explosive dangerous medium in the air, and no gas enough to corrode metal and destroy insulation. The device should be placed in a stable place without violent vibration or turbulence. Before the device is put into operation for the first time after transportation, or when it is put into operation again after a long-time outage, the whole machine should be checked. In addition to checking the wiring according to the drawings, it is also necessary to check whether the components are loose or fall off, whether the connection is strong, whether the contact is good due to transportation and other reasons. After the inspection, carry out the electrification test. Dust removal and cleaning should be carried out regularly according to the degree of ambient air. When cleaning, all power supplies should be cut off, and the surface and internal components of the device and the connection of wires should be cleaned with compressors, vacuum cleaners, or small brushes. Do not use any cleaning agent or damp rags when cleaning the internal components of the device, including the circuit board.

8.2 Maintenance

According to the need to clean the pile inside and outside, regularly check wiring terminals, wiring cables, contactors, switching switches, insurance for excessive dust and dirt. Check whether the insulation of terminals and wiring cables is strong, check the contact force of contactors, contacts and insurance, check whether the jumper cap of the circuit board is loose, whether the component is strong, and the control function and state switch of each module, to avoid the hidden trouble caused by failure.

9. Instructions of packing, handling, transportation and storage

- 9.1 Package: charging pile product weight 27.56lb (12.5KG) (including outer box), Dimensions: 20.08" x 17.32" x 13.19" (510*440*335MM).
- 9.2 The transportation can be by car, vessel or aircraft.
- 9.3 During transportation, attention should be paid to sunscreen and civilized loading and unloading, avoiding violent vibration and impact.
- 9.4 Products stored in Class I environment and stored for more than 6 months are recommended to be re-tested and can only be used if they are qualified.

Made in China

Name of Manufacturer: SHENZHEN HB ELECTRONIC CO., LTD

Address : Floor 301, Bldg 21, Zhengdaan Industrial Park, 172 Xiangshan Rd,
Luotian Village Yanluo Town, Baoan District Shenzhen City 518105, China

Federal Communications Commission (FCC) Statement. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) this device must accept any interference received,

including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this device not expressly approved by SHENZHEN HB ELECTRONIC CO LTD.

may void the FCC authorization to operate this device. Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

RF exposure statement:

This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. The device is installed and operated without restriction.

ISED Statement

- English: This device complies with Industry Canada license - exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

The digital apparatus complies with Canadian CAN ICES - 3 (B)/NMB - 3(B).

- French: Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

l'appareil numérique du CIEM conforme canadien peut - 3 (b) / NMB - 3 (b).

For Receiver:

This device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and compliance with RSS 102 RF exposure, users can obtain Canadian information on RF exposure and compliance.

cet appareil est conforme à l'exemption des limites d'évaluation courante dans la section 2.5 du CNR - 102 et conformité avec RSS 102 de l'exposition aux RF, les utilisateurs peuvent obtenir des données canadiennes sur l'exposition aux champs RF et la conformité.

For Transmitter:

This device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and compliance with RSS 102 RF exposure, users can obtain Canadian information on RF exposure and compliance.

cet appareil est conforme à l'exemption des limites d'évaluation courante dans la section 2.5 du CNR - 102 et conformité avec RSS 102 de l'exposition aux RF, les utilisateurs peuvent obtenir des données canadiennes sur l'exposition aux champs RF et la conformité.