


USE AND CARE GUIDE

MULTI-COLORED LED PUMPKIN DISC LIGHT

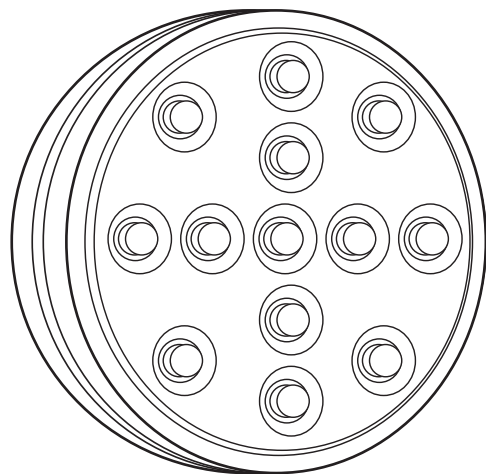

THANK YOU
We appreciate the trust and confidence you have placed in HOME ACCENTS HOLIDAY through the purchase of this MULTI-COLORED LED PUMPKIN DISC LIGHT. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing HOME ACCENTS HOLIDAY!

Safety Information

FOR INDOOR AND OUTDOOR USE

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC MODEL NO.: PMKL-13M4-RV

Pre-Installation

BEFORE YOU BEGIN
If any part is missing or damaged, do not assemble this product. Contact Customer Service.

PLANNING INSTALLATION
Estimate installation time: 1 minute
Number of people required: 1

NO TOOLS REQUIRED

PACKAGE CONTENTS

Part	Description
A	1 Completely assembled Disc Light. (3 x AA batteries not included)
B	4 Suction cups
C	1 Remote control (1 x CR2025 battery is included)

Disassembly & Storage

- Store in the original carton.
- Store in cool, dry location away from sunlight.

WARNING

• **INGESTION HAZARD:** This product contains a button cell or coin battery.
• **DEATH** or serious injury can occur if ingested.
• A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
• **KEEP** new and used batteries **OUT OF REACH OF CHILDREN**.
• **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



Safety Information (continued)

BATTERY INSTALLATION:

- Remove the remote control from within the packaging.
- Located on the back of the remote control - Access the removable slide plate by using a fine pointed instrument to depress the "release" button located at the lower portion of the remote control - While simultaneously using your fingertips to slide-out the slide plate to access the battery compartment.
- Insert 1 x CR2025 battery by aligning the appropriate (+/-) markings accordingly.
- With battery installed, fully reinsert the slide plate accordingly.

CAUTION:

- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Battery type: CR2025.
- Nominal battery voltage: 3V
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above (140°F) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- Ensure the batteries are installed correctly according to polarity (+ and -).
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.
- Replace the slide plate on the back of the remote control.

DISPOSAL AND RECYCLING:

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice. This is applies to the battery also.


Warranty

LIMITED WARRANTY

This product is warranted to be free from defects in workmanship and materials for up to one seasonal year from date of purchase. If it fails to do so, please contact the Customer Service Team at 1-855-HDHoliday (1-855-434-6543) or visit www.HOMEDEPOT.COM.

Remote Control

- Before use, please remove the plastic protector from the bottom of the remote control (C).
- The maximum range of the remote control is 100ft/30m.
When not in use, press the "OFF" button to power off.

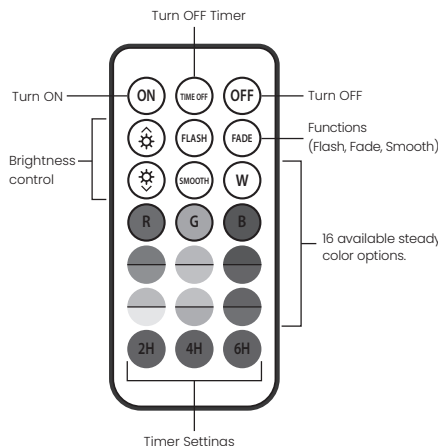

TIMER SETTINGS:

"2H hour"
(ON for 2 hours, OFF for 22 hours.)
Press the 2H button - the light ARE NOW ON for 2 hours. They will automatically turn OFF after 2 hours. The lights will automatically turn ON in 22 hours and stay ON for 2 hours. The cycle will repeat every 24 hours (until the "Time OFF" button is Pushed)

"4H hour"
(ON for 4 hours, OFF for 20 hours.)
Press the 4H button - the light ARE NOW ON for 4 hours. They will automatically turn OFF after 4 hours. The lights will automatically turn ON in 20 hours and stay ON for 4 hours. The cycle will repeat every 24 hours (until the "Time OFF" button is Pushed)

"6H hour"
(ON for 6 hours, OFF for 18 hours.)
Press the 6H button - the light ARE NOW ON for 6 hours. They will automatically turn OFF after 6 hours. The lights will automatically turn ON in 18 hours and stay ON for 6 hours. The cycle will repeat every 24 hours (until the "Time OFF" button is Pushed)

SUCTION CUPS:

Suction Cups (B) have been provided for flat and smooth surface application.
(Clean the surface before installation, make sure there is nothing between the surface and the suction cups.)