

Q30说明书

60mm

INSTRUCTIONS



COMPATIBLE ☒ ios ☒ Android

HOW TO USE

- 1. Startup:** press and hold the camera button for 3 seconds to start the machine, and the indicator flashes to enter the search state.
- 2. Wireless connection:** open the mobile phone Wireless search "vip" and click the connection. After the connection is successful, the indicator light goes out.
- 3. Photographing:** When the remote control is connected to the phone, click the camera button(need to enter the camera app), the indicator light will flash and take a photo.
- 4. Shutdown without connection:** when the remote control is in the state of no connection and no operation it will automatically shut down for about 5 minutes.
- 5. Connected shutdown:** When the remote control is connected to the phone, it will automatically shut down after about 5 minutes of inactivity.
- 6. No connection status:** indicator light flashing
- 7. Shutdown:** long press the photo key for 3 seconds, the indicator Bashes off and shuts down.
- 8. Back connection function:** the remote control has memory connection function. When the mobile phone Wireless is turned on, the remote control will automatically connect the matched mobile phone.

About Charging

Take out the remote control type-c and charge it



PTZ Type-C Charging

 


About power switch


"Press and hold the power button for 3 seconds to turn on (the cloud platform defaults to horizontal operation)



Tap power button.PTZ switch to portrait mode

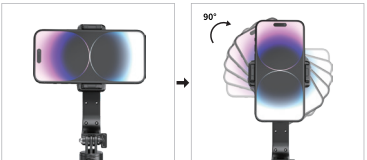

 Press the pan tilt again to switch to landscape mode

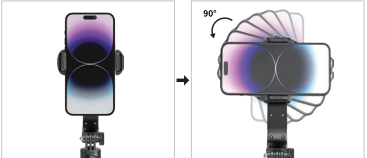

Product parameters

Width of holding mobile phone: 40-85mm
Supported mobile phone size: 4.7-7 inches
PTZ battery capacity:approximately 450mAh
PTZ battery model:602530 polymer (rechargeablebattery)
PTZ Full charge time:About 3.5 hours
PTZ charging current:approximately 400mA
Charging condition :5V1

Product parameters

 
Regarding the iOS system remote control not being a photography solution:

1. In non-photography apps, the remote control has a volume function
2. In the photo-taking app, click the "Take Photo" function
3. In the video recording mode of the photo app, click to start recording, and click again to end recording

For Android phones, press the remote control to add sound Solution to the problem of quantity /focus adjustment and /or no response.

1. Open the camera to enter the photographing interface.
2. Swipe left or pnd the camera settings
3. Click the volume key function.
4. Set the volume key function to shutter (do notselect zoom or zoom Focus).
5. The setting path of individual mobile camera isdifferent, please pnd it yourself.

Set the volume button of the Hongmeng system phone to the photo button

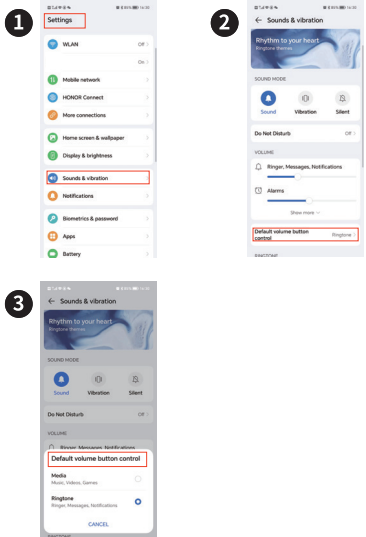

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communica-tions. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Remote operation QR code



APP



Easy Play

Stabilizer lock

Slide up to lock the stabilizer, slide down to unlock the stabilize



"When the stabilizer is locked, the red light will flash It will shut down in about 40 seconds

How do I open the tripod

Pinch and push the electroplated part downwards or upwards,To open or close the tripod

 


About power switch


Double click on startup to enter Inception Press 3-second power on/off button



Double click on vertical screen: Rotate the gimbal counterclockwise by 125 °, then clockwise by 270 °, and finally return to vertical screen

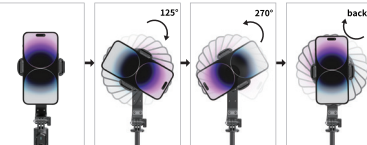

 Double-tap in landscape: The gimbal rotates 40° counterclockwise (to the initial position), then 230° clockwise, then counterclockwise back to the initial position, and finally returns to landscape.

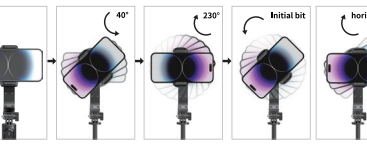

Remote control parameters

Battery model: 401020 polymer (rechargeablebattery)
Charging condition: 5V1
Battery capacity: 55mAh
Charging current: approximately 50mA
Full charge time: About 30-60 minutes
wireless version: 5.2
wireless Name: VIP
wireless communication: suitable for wireless version 3.0 and above
Operating system: iOS/Android universal
(suitablefor most mobile phones, Android 8.0 or above,iOS 4 or above)
Transmission frequency: 2.4GHz-2.4835GHz
Communication distance: 10m (32 feet)

Solution to the case of failure of remote control to connect to mobile phone

1. Turn on the Wireless of the mobile phone and clear some paired Equipment.
2. Turn off and restart the phone.
3. Turn off and restart the Wireless remote control.
4. Turn on the Wireless connection again.
5. Turn on the mobile phone Wireless, turn on the remote control, and search the mobile phone interface .When you get the VIP , click Connect, and the interface displays "connecting"When "connect / pair"!press the remote control button continuously andquickly, that ist can be connected normally
6. Excitationis only required for the prst connectionLive. automatic connection in the future. normal use.

The charging indicator of the gimbal is displayed

ed light is on during charging. Green light indicates full charge.

Set the volume key of the Android phone to the photo button

