

qlearsoul

Huizhou Yunkuo Information Technology Co., Ltd. Room 02, 1st Floor, No. 30,
6th Street, Dahuxi West 1st Road, Shuikou Sub-district Office, Huicheng
District, Huizhou, Guangdong, CN 516000

Discover more at www.qlearsoul.com

We hope you never have the need,
but if you do, our service is friendly
and hassle-free.


support@qlearsoul.com

HiFire X Audiophile Turntable System / Instruction Manual

Clear Sound, Clear Soul

CONTENTS

Preface	2
Product Description	4
What's in the box?	5
Installation Guide	5
Operation Description	11
Care	14
Troubleshooting	16
Specifications	18
Disposal	19

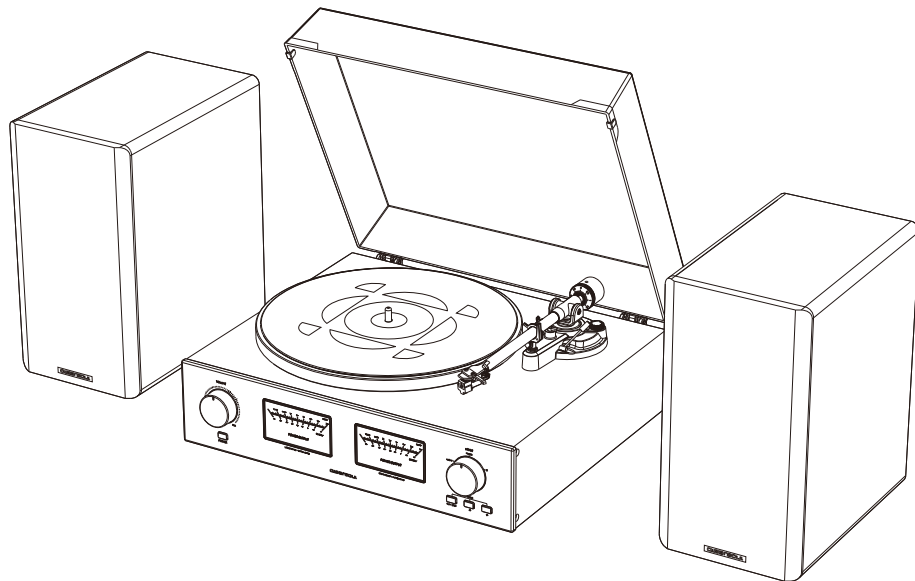

HiFire X Audiophile Turntable System
Model: HiFire X

Preface

1. Introduction

Thank you for purchasing this High Fidelity Belt Drive Turntable. This instruction manual contains important information about safety, usage and disposal. Use the product as described and keep this manual for future reference. If you sell this turntable or pass it on, also give this manual to the new owner.

2. Safety Instructions

Read and understand this entire manual before using this product. Keep these instructions for future reference.

- Do not use the turntable near water.
- Only connect the turntable to a power outlet type as indicated on the marking label or in the "Specifications" section of this instruction manual.
- The turntable has a polarized plug (one pin is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet in only one orientation. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
- Protect the power cord from being walked on or pinched, particularly at the power plug, at the point of connection between the plug and outlet and at the point of connection between the power cable and speaker.
- Do not overload wall outlets or extension cords as this will be a fire hazard and may cause electric shock.
- Never push objects of any kind into the turntable through openings as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
- Do not attempt to service the turntable yourself as opening or removing body panels may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
- Changes or modifications to the turntable not expressly approved by the party responsible for compliance could void the user's authority to operate the product.
- Do not use attachments not recommended by the manufacturer as they may cause hazards.
- Only place on a flat, sturdy table or use with the cart, stand, tripod or bracket as specified by the manufacturer or sold with the turntable. When a cart is used, use caution when moving the cart/turntable combination to avoid injury from tip-over.



- 11. Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating. Do not block or cover these openings.
- 12. Unplug the product during lightning storms or when unused for long periods of time.

3. Compliance With Fcc Regulations

- This device complies with Part 15 of FCC rules. Operation is subject to the following two conditions:
- This device may not cause harmful interference.
 - This device must accept any interference received, including interference that may cause undesired operation.
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.
- This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
- If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.


WARNING

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

4. Radiation Exposure Statement

- This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment.
- The FCC certification of this device refers to RF exposure testing performed in typical operating conditions, where a person is no closer than 20 centimeters from the device surface at all times, except for non-repetitive patterns with transient time intervals in the order of a second. Only in the stated conditions, the device is shown to fully comply with the FCC RF Exposure requirements of KDB 447498.

Product Description

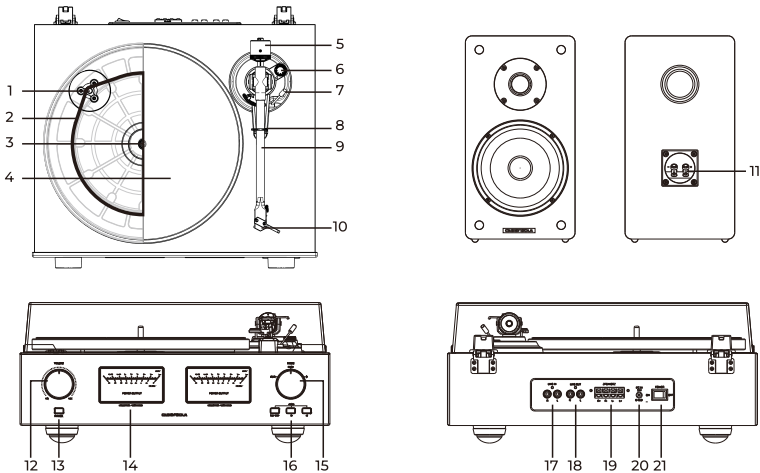

- | | | |
|-----------------------|----------------------------|--------------------------------------|
| 1. Motor Pulley | 8. Tonearm Clip | 15. Mode Knob (LINE IN PHONO BT) |
| 2. Drive Belt | 9. Tonearm | 16. PHONO Operation Panel |
| 3. Turntable Spindle | 10. Stylus Cartridge | 17. LINE IN R L |
| 4. Main Platter | 11. Speaker Jack - + | 18. LINE OUT R L |
| 5. Counterweight | 12. Volume Knob | 19. External Speaker Jacks |
| 6. Anti-skating Knob | 13. Power Button | 20. DC 21V Jack |
| 7. Tonearm Lift Lever | 14. R L Peak Power Meter | 21. Main Power Switch |

What's in the box?

Before installing the turntable, check the package contents to ensure all parts below are included and free of visible damage. Please retain the original packaging materials for exchange or return purposes.


1 X Turntable Unit	1 X 45 RPM Adapter	1 X Warranty Card
1 X Turntable Lid	1 X Counterweight	1 X Quick Start Guide
1 X Drive Belt	1 X AC Power Adapter	1 X Instruction Manual
1 X Turntable Platter	2 X Bookshelf Speakers	1 X Cartridge Alignment Protractor
1 X Slip Mat	2 X Audio Cables for Speakers	

Installation Guide

1. Platter Installation


01. Adjust the belt to the middle position.

02. Set the platter on the spindle.

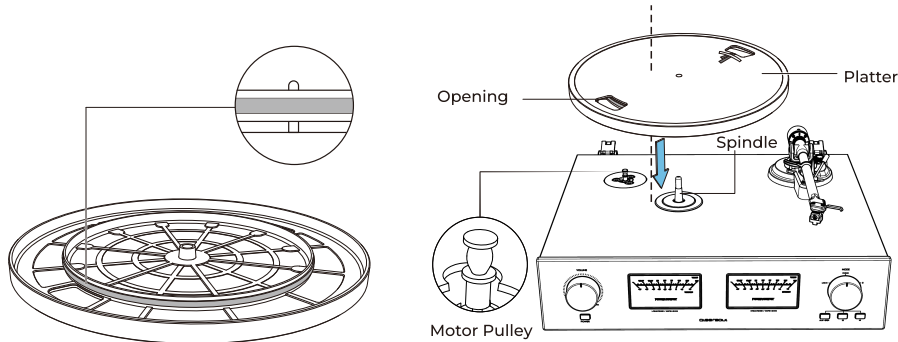


03. Place the belt on the motor pulley.

Remove the ribbon from the belt.

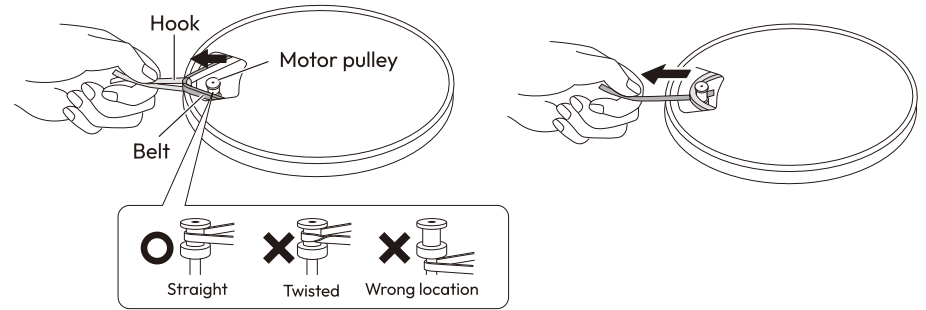


04. Slowly rotate the turntable ten times by hand.

05. Place the slip mat on top of the platter.

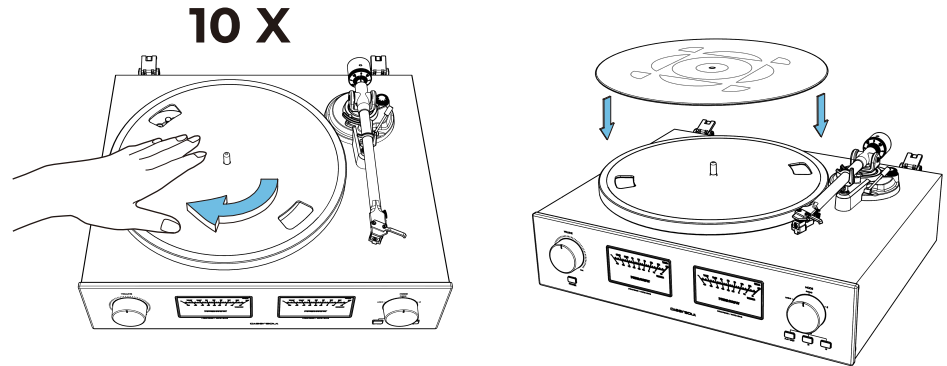


2. Balance Adjustment


01.

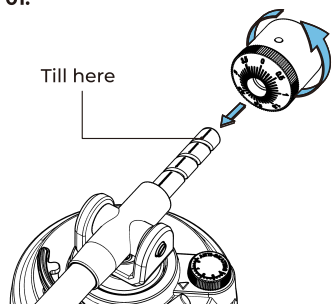


02. Put the protector straight forward to remove it.

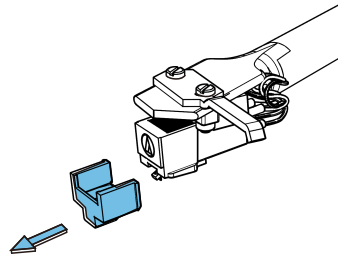


03. Unlock the tonearm.

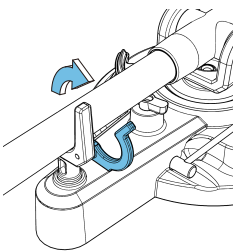


04. Position the cartridge between the tonearm rest and platter.

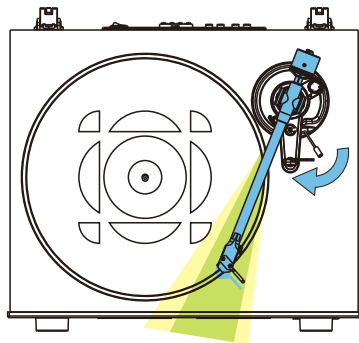


05. Lower the tonearm lift lever.

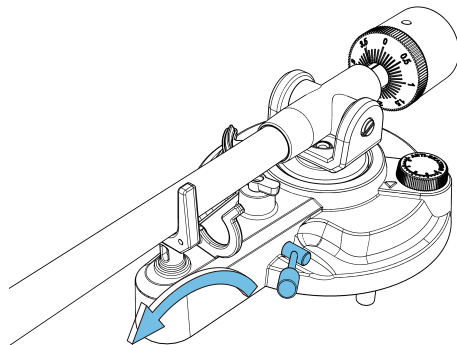


06. Adjust the counterweight until the tonearm achieves a neutral balance (Suspended).

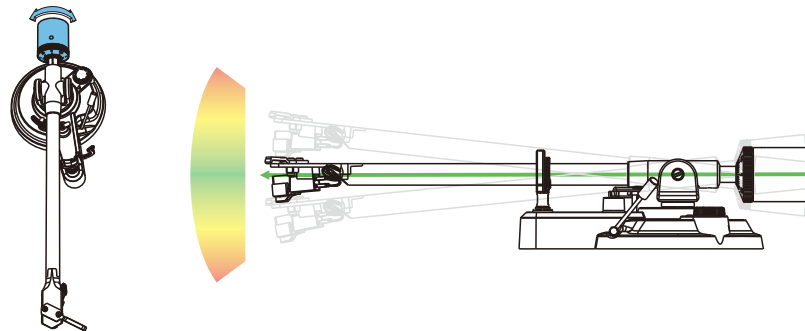


07. Raise the tonearm lift lever.

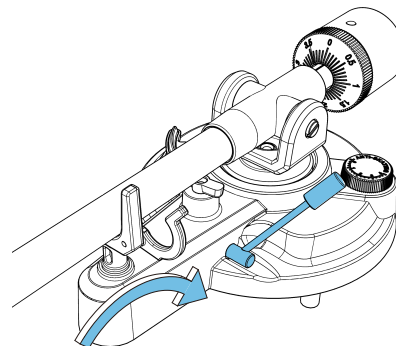


08. Return the tonearm to its rest.

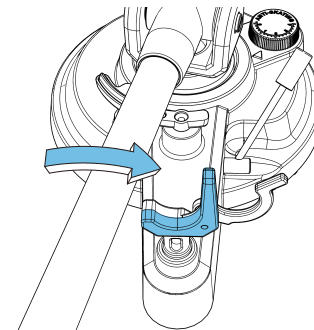


09. Lock the tonearm cilp.

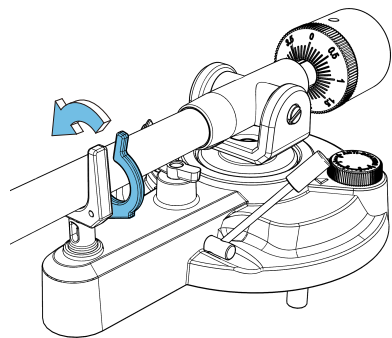


10. Without moving the counterweight, gently rotate the tracking force dial to "0".

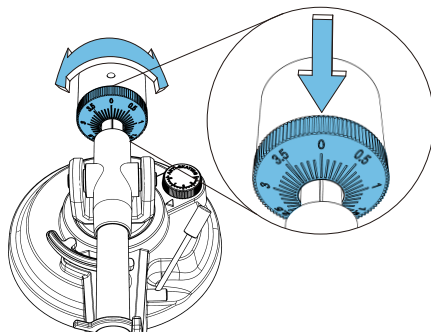

11. Go back to steps 3-6 in part 2 to **check that the tonearm is still balanced**. If so, proceed to step 12 and set the tracking force. If not, rebalance the tonearm.

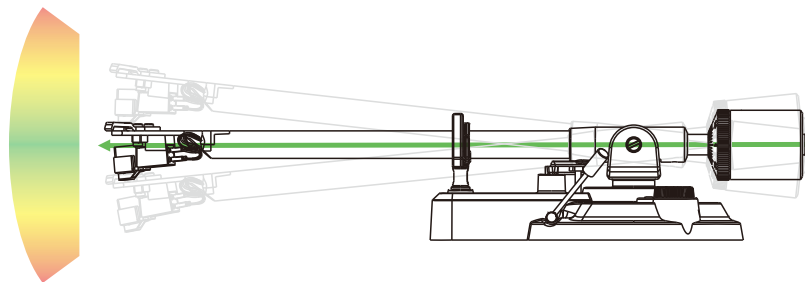


12. Rotate the counterweight and tracking force dial to align it with the "3.5" dial.

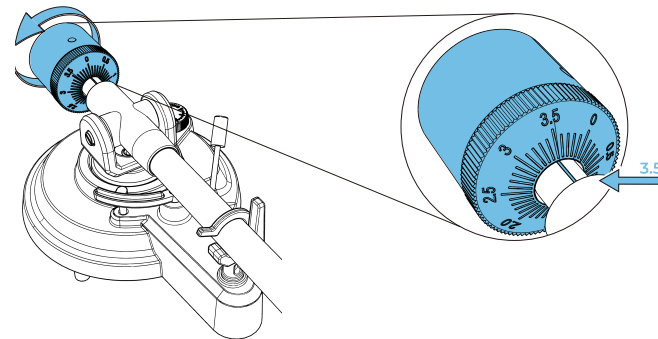


3. Anti-Skating Adjustment

1. Turn the anti-skate knob to set the same number as the cartridge stylus pressure.

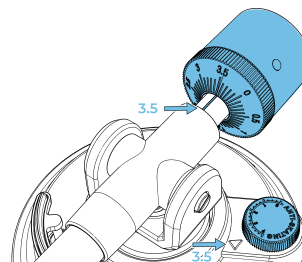

4 Installing the Lid

1. Insert the hinge pockets of the lid on to the hinges.

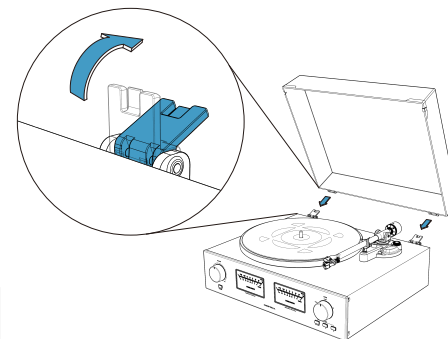

TIPS


The recommended tracking force for the factory-installed cartridge is $3.5g \pm 0.5g$.

Operation Description

1. LINE IN | LINE OUT Connection

01. LINE OUT with RCA CABLES

If you wish to use your own amplifier or speakers, please follow the instructions below:

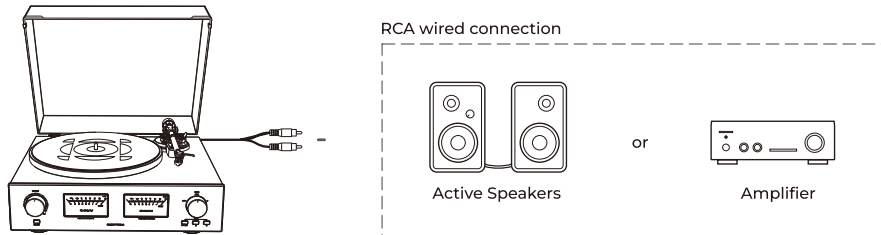


NOTE


In order to achieve the best sound, it is advised to set the turntable volume to a minimal level. Then the turntable's audio will be played back through your own amplifier, speakers, etc.

02. LINE IN with RCA CABLES

Connect your audio devices to turntable with LINE IN and play your music through the turntable amplifier and included speakers.

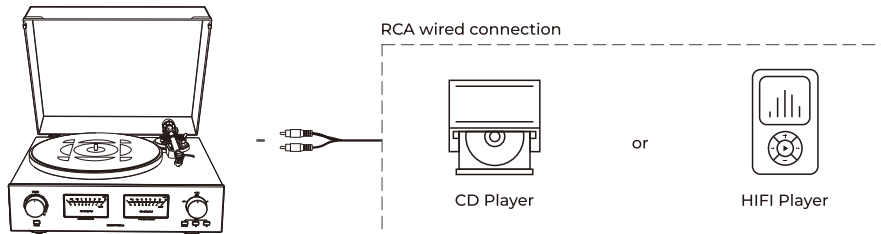

2. Front Panel

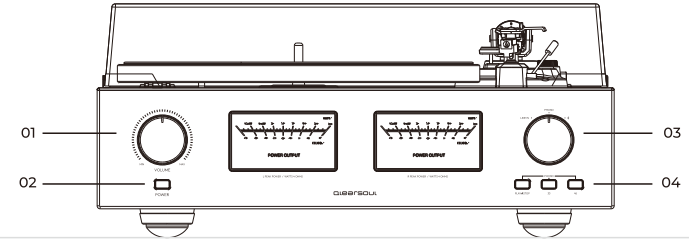

- 01. **VOLUME** Adjust the volume.
- 02. **POWER** Short press to open the device, and long press to enter sleep mode.
- 03. **MODE** LINE IN | PHONO | BT IN.
- 04. **PHONO** PLAY/STOP | 33RPM | 45 RPM.

3. Back Panel

01. Connecting Included Speakers

Connect the speakers using the supplied speaker cable (black cable to black clamp; & red cable to red clamp)

