



无线遥控器 K21使用说明书

⚠ 注意事项及声明/ Notices and statements

安装之前请仔细阅读以下说明。

 
1. 本产品需配合HFK摩托车专用行车记录仪使用, 具体型号如下: HM702、HM603、HM201、HM801、HM801P、HM701P、HM701、HM602。
2. 本产品需CR 1632的3V纽扣电池供电, 电池电量低时, 及时更换, 如长期不用, 请取下电池。
3. 安装好电池后, 请盖好电池盖板, 以免电池遗失和进水!
4. 本产品支持IP67防水, 严禁使用高压水枪冲洗, 若因此导致的产品故障, 不在保修范围内!
5. 车辆须妥善停放, 如遥控器被盗, 与本公司无关。

Please carefully read the following instructions before installation.


1. This product needs to be used with HFK motorcycle-specific dash camera, models as following: HM702, HM603, HM201, HM801, HM801P, HM701P, HM701, HM602.
2. This product power supply is CR1632 3V button cell battery. When the battery is low, please replace it in time, if not use it for a long time, please remove the battery.
3. After installing the battery, please buckle the battery cover plate to avoid battery losing or water ingress.
4. This product waterproof IP67. Forbidden to use high-pressure watergun to flush the DVR. If damage caused by this reason, no warranty.
5. The vehicle must be properly parked. If the remote control is stolen, there has no connection with our company.

安装指南/Installation guide




K21无线遥控器卡箍支架可360°旋转, 请先选好安装位置并调整好角度后再固定。
K21 wireless remote control clamp bracket can be rotated 360°. Please select the installation position first and fix it after adjusting the angle.

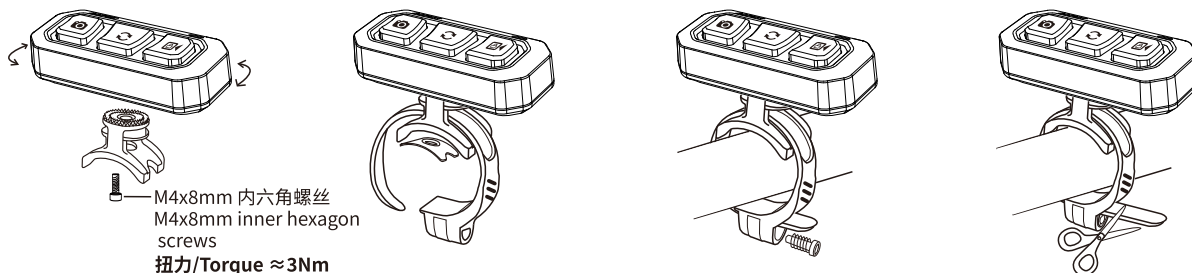

 L支架安装方式, 两种不同支架适配多种车型车把。
L bracket installation, two different brackets for different kinds of handlebar.

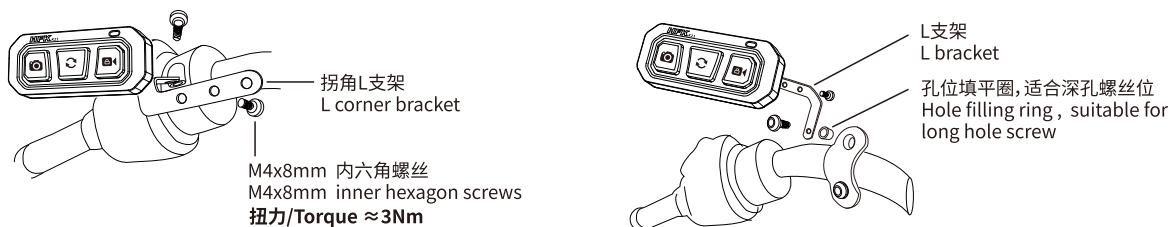

配对和设置/Matching and settings

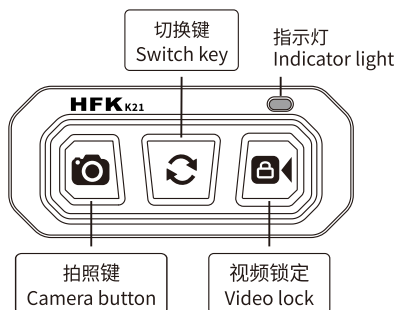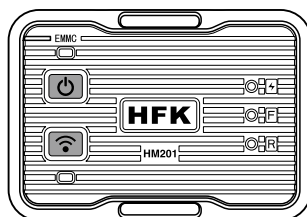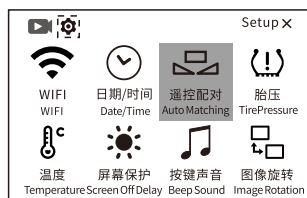   

按键功能介绍

拍照键: 短按抓拍当前图片, 前后摄像头各拍一张。

切换键: 1. 与HM201配对: 长按为开启/关闭WiFi。

2. 与HM702/HM603/HM801P/HM801/HM701P/HM701配对: 短按为数据界面录像界面循环切换, 长按为循环切换前、后摄像头和大小窗口显示。

3. 与HM602配对: 短按为循环切换前、后摄像头和大小窗口显示。

视频锁定键: 短按锁定当前视频。

配对操作一: 适用HM702、HM603、HM801P、HM801、HM701P、HM701、HM602

1. 短按主机上“确认键”暂停录像, 短按“设置键”两次进入“系统设置”界面, 选择遥控配对内的“开始配对”选项并确认, 屏幕上显示“开始配对...”。

2. 同时按住遥控器上“拍照键”和“视频锁定键”, 遥控器指示灯闪烁五次, 配对成功后主机屏幕会显示“配对成功”。如配对超时请重复以上操作。

匹配操作二: 适用HM201

1. 同时长按“电源键”和“WiFi键”3秒以上开启遥控匹配功能;

2. 同时按住遥控器上“拍照键”和“视频锁定键”, 匹配成功后, 遥控器指示灯闪烁五次, 主机发出3次“滴滴声”。若匹配未成功, 请重复以上操作。

指示灯: 电量高于20%亮蓝灯, 电量低于20%亮红灯。

Indicator light: Battery power more than 20% blue light on, power less than 20% red light on.

Matching operation 1. It's available for HM702, HM603, HM801P, HM801, HM701P, HM701, HM602

1. Short press the "OK" button on main host to pause recording. Short press "Setting" twice to enter system settings interface, select "Auto Matching" and confirm.
2. Simultaneously press and hold the "Camera" & "Video Lock" on the remote control. After the remote control indicator flashes 5 times, the matching is successful with words "Matching success" and the main screen will return to system settings interface. If not work, please try again.

Matching Operation 2: It's available for HM201

1. Long press power key and WiFi key simultaneously for 3 seconds to start remote control function.
2. Simultaneously press and hold the "Camera button" and "Video lock" on the remote control. After matching successfully, the remote control indicator flashes 5 times, main host will beep 3 times. If not work, please try again.

Function Buttons

Camera button: Short press to capture current picture, each camera will take one.

Switch key: 1. Matching with HM 201: long press it ON/OFF WiFi.

2. Matching with HM702/HM603/HM801P/HM801/HM701P/HM701: Short press for loop switching screen data and recording interface, long press for loop switching front/rear camera to be displayed separately or the front/rear camera size window displayed.

3. Matching with HM602: Short press for loop switching front/rear camera to be displayed separately or the front/rear camera size window displayed.

Video lock: Short press lock the current video.

电池更换/Battery replacement: Model CR1632

按电池盖上箭头指示, 逆时针拧电池盖90°, 电池盖弹起后取下电池盖

 
 
 
Screw the battery cover 90°counterclockwise as indicated by the arrow on the battery cover, remove the battery cover when it pops up.

更换新的CR1632电池, 注意电池正极朝外

Change new CR1632 button cell battery, please notice the battery positive face up.

装回电池盖。拧紧后电池盖凹槽与遥控器长边平行

Cover back the battery plate. The battery cover groove is parallel to the long side of the remote control when it tightened.

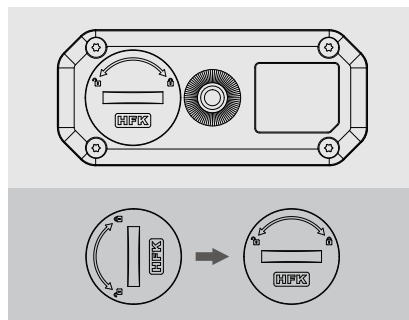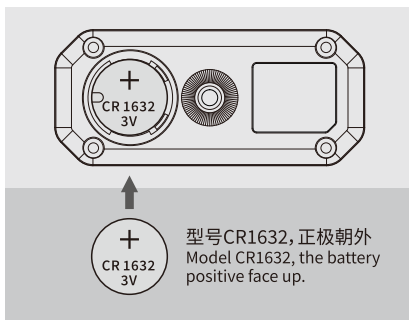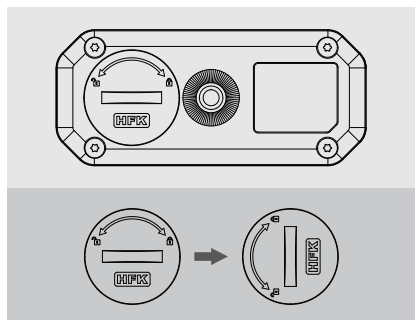

注: 为避免划伤电池盖, 可选用纽扣电池、硬币等具有一定厚度且边缘光滑的工具来拧电池盖。

Note: To avoid scratching the battery cover, you can use a button battery, coin or other tools with a certain thickness and smooth edge to screw the battery cover.

⚠ WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested
- As swallowed button cell or coin battery can cause **Internal chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH** of **CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



声明:

- a) 根据当地规定, 取出并立即回收或处理用过的电池, 远离儿童。不要将电池丢弃在家庭垃圾中或焚烧。
- b) 即使是使用过的电池也可能造成严重伤害或死亡。
- c) 致电当地毒物控制中心获取治疗信息。
- d) 本产品兼容CR1632 电池。
- e) 本产品电池电压3V。
- f) 不可充电电池不得充电。
- g) 不要强行排放、充电、拆卸、加热 (电池耐温度100度) 或焚烧。这样做可能会导致通风、泄漏或爆炸造成的伤害, 从而导致化学灼伤。

注意:

- 1) 确保电池要根据机型+和-正确的安装。
- 2) 不要混合使用新旧电池、不同品牌或不同类型的电池, 如碱性电池、碳锌电池或可充电电池。
- 3) 根据当地法规, 从长期未使用的设备中取出电池并立即回收或处理。
- 4) 须始终能完全的关键进电池盒。如果电池盒不能牢固关紧, 请停止使用本产品, 取出电池并将起放在远离儿童的地方。

STATEMENT:

- a) Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in house hold trash or incinerate.
- b) Even used batteries may cause severe injury or death.
- c) Call a local poison control center for treatment information.
- d) This product is compatible with Cr1632 batteries.
- e) The battery voltage of this product is 3V.
- f) Non-rechargeable batteries are not to be recharged.
- g) Do not force discharge, recharge, disassemble, heat above (Rated temperature value of 100 degrees) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.

Note:

- 1) Ensure the batteries are installed correctly according to polarity (+ and -).
- 2) Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- 3) Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- 4) Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

此设备符合 FCC 规则的第 15 部分。操作受以下两个条件的约束：
(1) 此设备不得造成有害干扰，(2) 此设备必须接受收到的任何干扰，包括可能导致不良操作的干扰。

FCC声明

根据FCC规则第15部分，该设备经过测试，符合B类数字设备的限制。这些限制旨在为住宅安装中的有害干扰提供合理的保护。该设备产生、使用并可以辐射射频能量，如果不按照说明安装和使用，可能会对无线电通信造成有害干扰。但是，不能保证在特定安装中不会发生干扰。如果此设备确实对无线电或电视接收造成有害干扰，可以通过关闭和打开设备来确定，鼓励用户尝试通过以下一种或多种措施来纠正干扰：

- 重新定向或重新定位接收天线。
 - 增加设备和接收器之间的间距。
 - 将设备连接到与接收器连接的电路不同的插座上。
 - 请咨询经销商或经验丰富的无线电/电视技术人员以获取帮助。
- 未经负责合规的一方明确批准的更改或修改可能会使用户操作设备的权限无效。

射频暴露声明

用户与产品之间的距离应不小于5mm。

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in port able exposure condition without restriction.

产品包含:K21无线遥控器x1,卡箍支架x1, L支架x1, 拐角L支架x1, 螺丝x2, 孔位填平圈 x 1, 使用说明书x1

Product packing: K21 wireless remote control X1, Clamp bracket X1, L bracket X1, L corner bracket X1, Screw X2, Hole filling ring X1, Instruction manual X1



扫码下载APP
Scan QR code
and download App



HFK官方网站
HFK Official Website



微信公众号
WeChat



HFK Facebook 账号
HFK Facebook Account

产品名称:无线遥控器
产品型号:K21
生产厂商:深圳黄方块科技有限公司
联系电话:400-800-9583
官方网址:www.hfkadv.com
邮箱:hfkadv@gmail.com hfk@hfkadv.com
地址:深圳市龙岗区坂田街道中兴路13号永畅嘉B栋3楼

Product name: Wireless remote Controller
Product model: K21
Manufacturer: Shenzhen HFK Technology Co., Ltd.
Phone number: +86-4008009583
Website: www.hfkadv.com
Email: hfkadv@gmail.com hfk@hfkadv.com
Address: Floor 3, 13th Zhongxing Road, Bantian, Longgang district, Shenzhen city, China