 


BLAISE

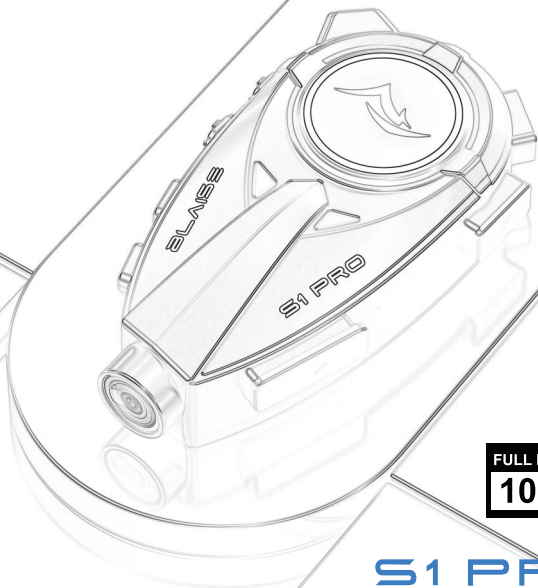


FULL HD 1080P


1080P

S1 PRO
HD INTERCOM
CAMERA RECORDER

CONTENTS

English	P3-10
中文	P11-18
Español	P19-26
Русский	P27-33
Indonesia	P34-40
Português	P41-48
ภาษาไทย	P49-56
日本語	P57-64

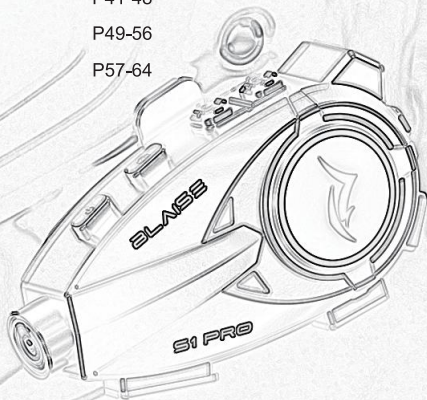 

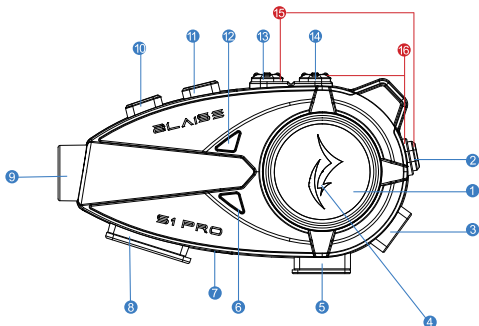 

- | | | |
|---|------------------------------------|-------------------------------------|
| 1. Power on or off button / Play or pause / Answer or hang up | | |
| 2. Intercom button | | 3. Speaker/Microphone interface |
| 4. Charging indicator (red) / Music radio indicator (white) / Wireless indicator (blue) | | |
| 5. Charging port | | 6. Intercom indicator (green) |
| 7. Recorder Microphone | 8. TF card | 9. Camera |
| 10. Recorder switch on/off
Recording on or off button | | 11. Photo button/
WIFI on or off |
| 12. Recording indicator (blue) /
WIFI indicator (red) | 13. Volume down /
Previous song | 14. Volume up /
Next song |
| 15. Music broadcasting function | 16. Voice assistant | |

Important Notice:

Before installing the headphones, follow the Quick Manual instructions to connect your phone and listen to the sound and volume.

If there is a large difference in sound effect and volume after installing it on the helmet, please adjust the position of the speaker in the helmet.

Power on / off

Power on: Long press 【Power on or off button】 for 3 seconds, hear the power-on tone, LED light flashes quickly;

Power off: Long press 【Power on or off button】 for 3 seconds, hear the shutdown beep and the LED light turns off;

Switching voice broadcast: power on, wireless and intercom is not connected state, double-click 【Power on or off button】, switch voice broadcast.

Power on or off button



LED light

Wireless connection

Wireless Connection: Long press the 【Power on or off button】 for 3 seconds to turn on the mobile phone, turn on the wireless, search and connect the wireless name 'BLAISE S1 Pro'.

Wireless Indicator Status: Before Wireless is not connected, the blue LED blinks rapidly; after wireless connection, the blue LED blinks slowly.

Power on or off button



Blue LED light

Intercom pairing/

Music sharing and intercom modes coexist

Intercom pairing: After turning on the machine, briefly short press the 【Intercom button】 on both machines to enter intercom mode and pair the intercoms. Short press again to exit intercom mode.

Intercom indicator status: Intercom is not connected before, the intercom indicator green light flashes fast; and accompanied by a tone 'intercom pairing', after pairing successfully, there will be a tone prompting the pairing success 'intercom has been connected', at this time, the intercom indicator green light long bright

Music sharing and intercom coexistence: in intercom mode, double-click 【intercom button】 to open the music sharing and intercom function at the same time, this time you can share the wireless music to each other to listen to, at the same time, you can intercom calls, double-click again to close the function.

Intercom button



Green indicator light

Music broadcast mode and pairing

Music broadcasting mode: after the two devices are switched on, short press 【intercom button + volume down button】 at the same time to enter the music broadcasting pairing (music broadcasting mode beep); short press 【intercom button + volume down button】 again at the same time to exit the music broadcasting pairing.

Switch Transmit/Receive Mode: At the same time, long press hold 【intercom button + volume down button】 to switch the music broadcast reception mode and the music broadcast transmission mode.

Music broadcast indicator status: when pairing status, the white LED light of the music broadcast transmitting end flashes fast, and the white LED light of the receiving end flashes slowly; after pairing success, the white LED light of the transmitting end flashes fast, and the white LED light of the receiving end lights up long;

Under the music broadcast mode, the volume up and down keys operate as follows: the transmitter long press 【volume up and down button】 to adjust the wireless volume and the music broadcast volume size at the same time, the receiver can long press 【volume up and down button】 to adjust the volume size of the machine, and a short press 【Power on or off button】 to mute or play.

Intercom button

 
Volume down button



White LED light

Dating mode

Dating mode (connecting third party): Wireless is not connected, a machine long press **Intercom button** into the dating mode, the other into the wireless pairing mode (not connected to the mobile phone), connect successfully, there will be a tone prompting 'dating mode connection success', long press again to exit the dating mode



Telephone function

Switch automatic/manual answer: When not connected to wireless, intercom, or music sharing, double-click the **Volume + button** switch manual answer/automatic answer

Auto answer: wait 15 seconds for an incoming call and then answer it automatically.

 
Manual answer: Incoming call, short press **Power on/off button** to answer the call.

Refuse to answer: Long press **Power on/off button** for 2 seconds to refuse to answer during an incoming call.

End call: Short press **Power on/off button** to end the call while on a call

End code replay: double press **Power on/off button** to replay the end code.

Cancel call: short press **Power on/off button** to cancel call when calling.




Music function

Music play and pause: When music is paused, short press **Power on/off button** to play music; when music is playing, short press **Power on/off button** to pause music

Previous song/Volume Down: When the music is playing, short press **Volume down button** for a short time to reduce the volume; double-click **Volume down button** to switch to the previous song.

 Next song/Volume up: When the music is playing, short press **Volume up button** for a short time to increase the volume, and double-click **Volume up button** to switch to the next song.

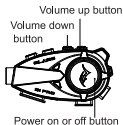


Voice assistant/Charging

Voice assistant: in case of wireless connection, short press **Intercom button + volume up button** at the same time to wake up the voice assistant; short press **Intercom button + volume up button** again at the same time to exit the voice assistant (exit status depends on the mobile phone)

Charging indicator status: The red light is on for a long time when charging, and the red light goes out after it is fully charged.

 *When the wireless device and dashcam are turned on, inserting the charger will automatically shut down the device. If you need to turn it on again, please press and hold the respective power button for 3 seconds to turn it on.

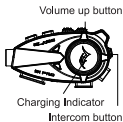

Mixing function

Mixing: Intercom and wireless can work independently without affecting each other, when the intercom and wireless are connected successfully, the two voices can be mixed out to the speaker end, you can hear the sound of the two modes at the same time

In music, intercom, and mixing modes, the volume plus and minus keys operate: ① short press the volume up and down keys to adjust the volume size of the wireless music ② long press the volume up and down keys to adjust the volume size of the intercom ③ double-click the volume up and down keys to switch the wireless music of the next song and the previous song

Recorder/Video

Recorder on/off: long press 【Recorder switch button】 for 3 seconds to turn on or off the car recorder, the blue LED light is on when the recorder is on.

Video on/off: (recorder on state) short press 【recorder switch button】 to turn on or off the video; The blue LED flashes slowly when video is recording.

Note: The car recorder must be inserted into the memory card to use.

Recorder on/off button



Blue LED light

WIFI/Photo

Taking pictures: (need to disconnect the WIFI used by the software and not in the video recording state), under the power-on state, short press the 【photo button / WIFI on/off button】 to take pictures.

WIFI on/off: double-click 【photo button/WIFI on/off button】 to turn on or off WIFI, when WIFI is on, the red LED light will be on.

Photo button/
WIFI on/off button



Red LED light

Video description / TF card reader

Video recording time and size: default every 5 minutes a file (APP can choose the video recording time and video file size) such as in the APP end of the slow download video, it is recommended that the APP end of the video recording time to change the short; video recording video in the APP to view only the image does not have the sound, you need to be in the car recorder APP end to download down or on the computer to view before the video sound will come out;

Video mode: cyclic video (that is, after a memory card is recorded, it will automatically cover the previous video file, and so on)

Video function use: long press the car recorder switch button to boot, the blue light is long bright, in standby mode, and then short press this key, start recording, the blue light flashes slowly.

Low power shutdown: in the process of use, due to the car recorder power consumption, the use of a short period of time will be shut down in advance, at this time the wireless function can continue to use, is a normal phenomenon; support (insert the TF card, insert the USB cable, one end of the head of the machine charging port, one end of the head connected to the computer, the machine automatically enters the card reader mode: the video indicator red and blue lights alternately slow flashing); can be copied or deleted files on the computer;

Micro SD card (support ≤ 256G). In the case of full card recording or more content, when using APP to view, the cache speed will become slower, it is recommended to use the card reader to open on the computer to view.



TF card insertion port

WIFI connection name/car recorder APP

WIFI connection name: BLAISE S1 Pro-WIFI (APP connects to LAN, after connecting successfully, the mobile phone can not connect to other WIFI, and can not use mobile phone traffic, otherwise APP will disconnect) When using APP to view the video, the mobile phone is in the state of no network, at this time, some mobile phone other APP has information over, the mobile phone may automatically jump to connect to the network of the other WIFI, resulting in the interruption of the phenomenon; at this time, you also need to if you want to connect to WIFI again, you need to restart the wifi connection.

Car recorder APP operation: (car recorder working conditions, must be inserted into the memory card in order to work normally)

1. Download APP: Open your mobile phone Android or IOS in the mobile phone application market or APP STORE directly search and download APP name: record the wind or viidure can be installed after.

2. Host connection APP: Long press the host car recorder switch on, double-click the photo button to open the WIFI, use your mobile phone to open the WIFI function, search for the WIFI name: BLAISE S1 Pro-WIFI..... After clicking connect successfully (the mobile phone will be in the state of no network), open the downloaded Roadcam, click to connect the recorder, after the connection is completed, the main interface of the APP will show that the recorder is connected successfully, click to enter to see the video recording.

3. View the recorded video or photo: Repeat the operation of point 2 above, enter the video interface, pause the recording, and then click on the video button on the window to view the recorded video; photo view the same operation.

4. When APP is running in the background, if you need to quit the APP mobile phone running in the background, first pause the video in the APP interface or quit the WIFI connection on the machine side, and then quit the mobile phone running in the background, in order to avoid the phenomenon of machine crash.

Car recorder APP operation mode

(Car recorder working conditions, must insert the memory card to work properly)

1 Download APP



The viidure or
wind recorder



Roadcam

Open the mobile phone Android or IOS, in the mobile phone application market or APP STORE directly search and download the APP name: viidure/wind recorder and then install it, or WeChat scanning code to download; and install to allow information services and camera access

2 Mobile phone connection to logger WIFI

After the recorder is switched on, you need to manually open the WIFI to connect (WiFi is limited to the use of this software)

Long press the host car recorder switch on, double-click the photo button to open the WIFI, use your mobile phone to open the WIFI function, open the viidure/recorder software interface, click the add recorder button, automatically jump to the WIFI interface, search for the connection "BLAISE S1 Pro-WIFI.....", back to the software interface again this time shows that the recorder has been connected successfully (WiFi is limited to the use of this software). ...", back to the software interface again at this time shows that the recorder has been successfully connected!

(Note: After connecting the recorder LAN, mobile phone traffic and other WiFi can not be used, and must use this network to view APP video)

3 Real-time video recording

Click on the software interface to enter the recorder button to view the real-time video.

4 Setting parameters

①Pause real-time recording; ②Click the window on the lower right corner of the "Settings" button, you can set a variety of parameters

5 View Recorded Video/Pictures

①Pause the real-time video; ②Click on the 'File' button, you can view, image operation as above

 
6 View downloadable videos/images

①Click the "Select" button, tick the video you need to download; ②Click the "Download" button ③Click the "Local Album" button to view the downloaded local video!

Intercom reset

I: wireless intercom connection operation (intercom connection is successful, the wireless music sound is off):

The first time the two machines connected to the intercom: after the machine is switched on, in the state of not connected to the wireless, both short press the intercom button to enter the intercom mode, the green light flashes quickly, and accompanied by a tone 'intercom pairing', start intercom pairing, pairing success will be prompted by a tone to indicate the success of the pairing 'intercom has been connected! After successful pairing, there will be a tone prompting successful pairing 'intercom has been connected', start intercom call, at this time, the intercom indicator green light will be on for a long time.

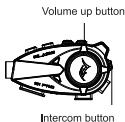

II: telephone priority answer

Telephone answer: two machines intercom connection is successful, wireless also connects to the mobile phone, when a call comes in, it automatically switches to the telephone to answer, after hanging up, the intercom is restored.

III: Clear the pairing and restore the factory settings

When turning on without connecting to wireless and intercom, music broadcasting or sharing, long press and hold the intercom button and the volume plus button for 5S at the same time. When you hear the "boom" sound, let go, that is, restore the factory settings and clear all pairing information.

IV: use the machine to connect the third-party helmet wireless headset for intercom calls

After booting, the two machines are not connected to the mobile phone wireless, the intercom machine boot long press the intercom button into the dating mode, wireless headset boot into the wireless mode, the two began to connect, connect successfully, there will be a prompt to the dating mode connection is successful, hear the 'thud' sound, that is, begin to talk to each other.

V: Music broadcasting (unlimited number of people within valid distance)

After the two devices are powered on, press the "Intercom key + Volume reduction key" at the same time to switch to the music broadcasting mode. A mobile phone is connected to the device to play music wirelessly and is accompanied by the prompt tone "Music broadcasting transmission mode" or "music broadcasting receiving mode" to start the music broadcasting and pairing: When one device is in the music broadcast transmission mode and other devices are in the music broadcast receiving mode, the music broadcast receiver will have a successful connection tone accompanied by the "Music Broadcast connection succeeded" tone. Note that the music broadcast transmitter will not have a successful connection tone. If two devices are connected to wireless music, they can only be shared by entering the music broadcast transmitter. In music broadcast mode: At the same time, long press hold the 'intercom button + volume down button' to switch between music broadcast reception mode and music broadcast transmission mode.

VI: music sharing and intercom at the same time

After the two devices are switched on and the intercom is connected successfully, one of the devices is connected to play music wirelessly, and the device connected to the mobile phone double-clicks the intercom button to open the music sharing function. At this point, you can enable both music sharing and intercom functionality simultaneously. Double-click again to disable the music sharing feature.

VII: Shutdown operation

Recorder power button: Only controls the power on/off of the recorder.

Wireless power button: Controls the power on/off of the wireless function and also controls the shutdown of the recorder (i.e., when the recorder is turned on and the wireless function is also turned on, long pressing and holding the wireless power button to shut down will also shut down the recorder).

Product List



BLAISE S1 Pro
device*1



 
Speakers &
Microphone*1



Clip-on Base*1



Velcro Package*1



Type-C Charging
Cable*1



Manual*1
32G high-speed
card*1

Light Status

Functional status	Logger Indicator Status
Power on	Blue light always on
Power off	Lights out
Start recording	Blue light flashing
Pause the video	Blue light
Turn on WIFI	The red light stays on
Turn off WIFI	Red light out
SD card abnormality	Red and blue lights blink 7 times at the same time to shut down the machine
Connect to PC card reader function	Red and blue lights flash alternately

Product Parameters

Product Model	BLAISE S1 Pro
Video pixels	2 million
Wide-angle lens	Wide 120°
Waterproof rating	IPX6
Video duration	6.5H (no music on)
WIFI device name	BLAISE S1 Pro-WIFI.....
Recording format	Video file format:MOV Photo format:JPG
Maximum memory	≤256G
Lithium battery	1500MAH
Charging time	About 3H
Charging Voltage	5V/1A
Applicable models	Motorcycle/Electric Vehicle

Frequently Asked Questions

BLAISE S1 Pro use common problems:

1. boot connected to the wireless, play music without sound, please confirm that the mark line in the correct interface or mark line interface has been fully access to the corresponding interface;.
2. In the normal use of the process, due to the car recorder power consumption is higher than the wireless, the car recorder will first shut down, wireless normal work, is a normal phenomenon.
3. The mobile phone connects to the WIFI of the car recorder, and the mobile phone has no signal, which is a normal phenomenon.
4. Car recorder connection APP is not successful, confirm that the mobile phone WIFI connection is the name of the machine's WIFI; or mobile phone exit APP, machine switch to reconnect.
5. If the charging red light does not light, confirm that the charging cable is on the correct charging interface, or the voltage may be too low, need to charge for half an hour.
6. Insert the machine into the charging cable to charge, the wireless function will automatically shut down, the car recorder side will be on, is a normal phenomenon. Recommended in the charging process, turn off the car recorder, do not use the machine.
7. Car recorder memory card, due to high-definition video read and write into, such as the need to buy, it is recommended to buy a brand of high-speed memory card (V30 high-speed card).
8. In the process of using the car recorder, in case of crash, please long press the car recorder at the same time to reset the key and photo button, and then reboot to use.
9. For the recorder's WiFi connection, it is recommended to first connect to the WiFi port in the mobile phone settings, then enter the app.

Caveat

1. Do not put the product into open flame to avoid explosion;
2. Do not disassemble the product to avoid damage to the product's electronic components;
3. Please do not close to sharp objects to cause damage to the product;
4. Please place it in a dry place if it is not used for a long time;
5. Before using the wireless device, please fully charge it first.
6. If the red light does not come on when charging, the voltage may be too low;
7. In order to extend the life of the built-in polymer battery, please charge the device at least once a month.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions.

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

* RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.