

 
Please read the Quick Start Guide carefully before using the product and keep it properly.

Reminder: Please charge the device for 2 hours before using it.

About this product


This manual is only a guide for related products and may differ from the actual product, please refer to the actual product. Due to product version upgrade or other needs, this manual may be updated without further notice!

This guide is applicable to various types of battery cameras. Some of the illustrations are based on battery camera.

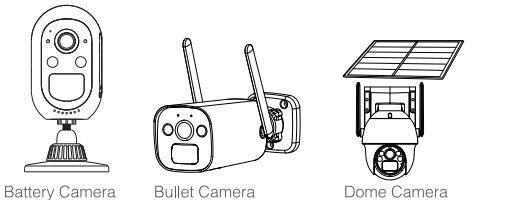

Interface description

 1.1 Battery camera

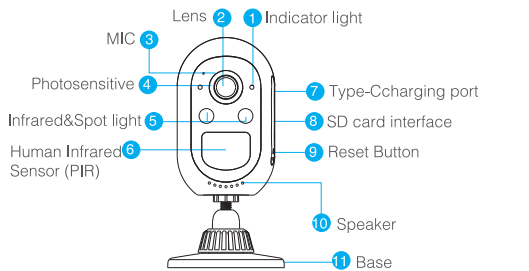


1

Packing list

Battery camera x1 Base x1 mounting guide sticker x1
Charging cable x1 3M Glue x1 Quick Start Guide x1
Screw package x1

 1.2 Solar PT Camera

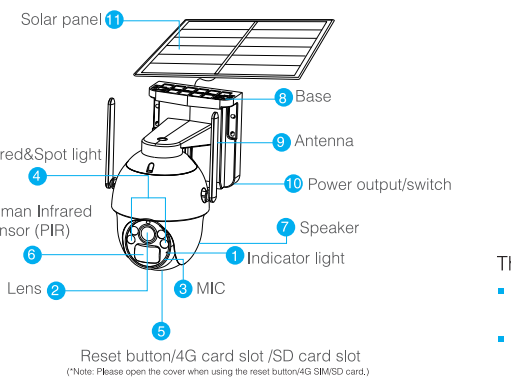


Packing list

Dome Camera x1 Solar panel x1 Solar panel mount x1
Mounting sticker x1 Quick Start Guide x1 Iron bracket x1
Hoop x2 Screw package x2

2

 1.3

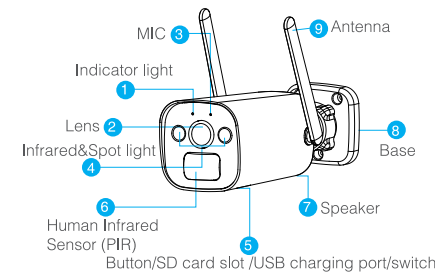

Packing list

Camera x1 Charging cable x1 Solar panel x1(*option)
Mounting sticker x1 Quick Start Guide x1 Screw package x1

The instructions of LED light :

- Green light flashes for 2s and goes out: The device is powered on and connecting to the network
- Green light + red light is always on: The camera is being previewed remotely (privacy light)
- Green light is always on: The device is connected to the network or awakened
- Green light flashes continuously: Upgrading
- Green light flashes continuously and slowly: Charging
- Red light flashes 3 times quickly: Power off
- Red light is always on: Low battery
- The traffic light is always off: In standby

3

Button operation for single button model:

- Press the reset button and hold for 3s: Turn on
- Press the reset button 3 times continuously: Power off
- Press the reset button and hold for 5s in the power-on state: Reset

Button operation for Two-button model:

- Press and hold the on off button for 2s when shutting down: Turn on
- Press and hold the on off button for 2s when powering on: Power off
- Press and hold the reset button for 3s: reset

Boot up and Charging instructions

 
3.1 Boot up

- When remote view by connecting to the router and direct connection method, please boot the device after insertting the SD card. When using by pairing to the wireless NVR, please make sure the memory(SD card, HDD etc.) of the wireless NVR is ready.
- During use, if it is found that the APP pushes low battery message or the camera has a low battery warning indicator, you need to charge the camera, as shown in the figure.

3.1.1 Battery camera

Please press the power button for 2s-3s to turn on the battery camera.

Reminder: Please charge the device for 2 hours before using it.

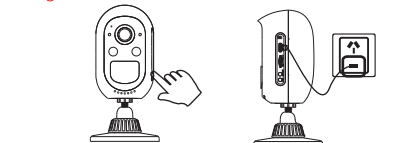


4

3.1.2 Solar Dome Camera

- Dial the camera switch to "ON" to turn on.
- Connect the camera to the solar panel.

 Reminder: If the device does not turn on after turning the switch to ON, please insert the solar panel connection cable and place the solar panel in sunlight for 1-2 hours to charge, or plug in a household charger to charge before trying again.

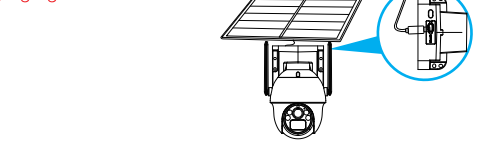

5

3.1.3 Battery Bullet Camera

- Please press the button for 3s to turn on the battery bullet camera.

Reminder: Please charge the device for 2 hours before using it.



6

APP Download and Installation

Use your mobile phone to scan the below QR code to download and install "EseeCloud", and follow the APP prompts to complete user registration.



 
Download "EseeCloud" APP

Note: For iOS system, it requires iOS 9.0 version or above. For Android, Android 5.1 or above.

3.3 Add device

(1). WIFI Camera:


- Please connect the device to the power supply to ensure that the device is powered on normally;
- Log in to the "Eseecloud" APP, turn on the Bluetooth function of the mobile phone, and click the "+" add button on the interface to enter the automatic search device interface;

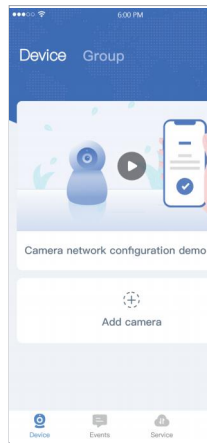

7

Step 3: Select the device you need to add, click the "Add" button on the right, and follow the interface guidance to add the device;

 Note: If you do not find the device you want to add after waiting 10s on the Bluetooth search interface, please click "Scan to add" below to scan the QR code on the device body to add the device.

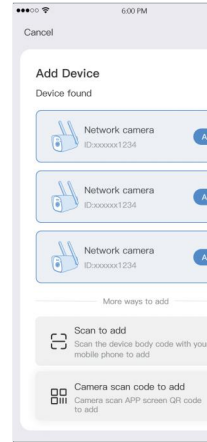


8

2. Direct connection through mobile phone (as the picture shows);



 3. Pair to wireless NVR (WiFi/4G Base station, WNVR, Tablet), as the picture shows.

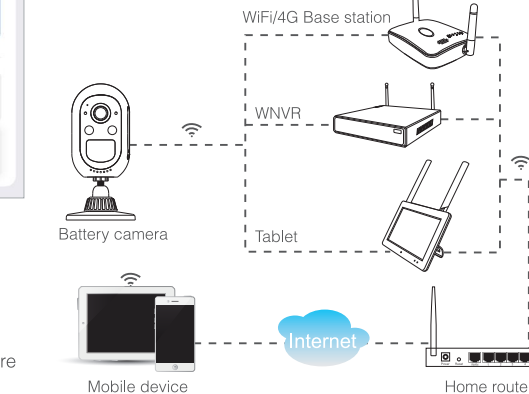


When remote view by connecting the router, the camera' WIFI should be connected to the router and the video is stored on the SD card of the camera or on the Cloud. When using in the local direct connecting mode, the WIFI of your mobile phone should be connected to the camera and the video can only store on the SD card of the camera. When working by pairing to the wireless NVR, the video is stored on the NVR and you can use mobile phone remotely to view and set up the camera through the wireless NVR.

9

(2). 4G Camera:

 - Please connect the device to the power supply to ensure that the device is powered on normally;
- On the automatic search interface, click "Scan to add" to enter the scan code interface;
- Scan the QR code on the device body, and add the device according to the interface guidance.

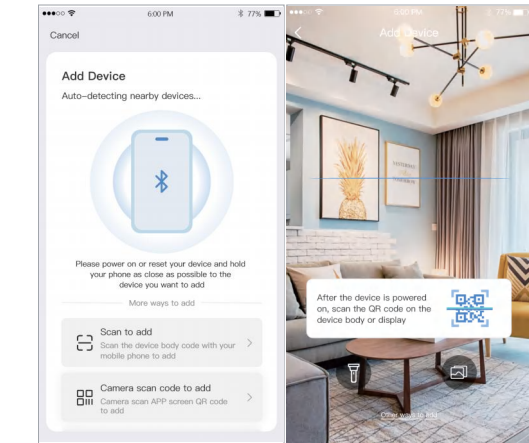


10

The device zoom function operation instructions

Note: This operation is only available for devices that support the zoom function.


1. Click the device play button in the device list to enter the real-time video interface;

 2. You can adjust the focal length and magnification speed of the device lens by sliding up and down the zoom axis on the right side of the gimbal or zooming with two fingers in the video area.

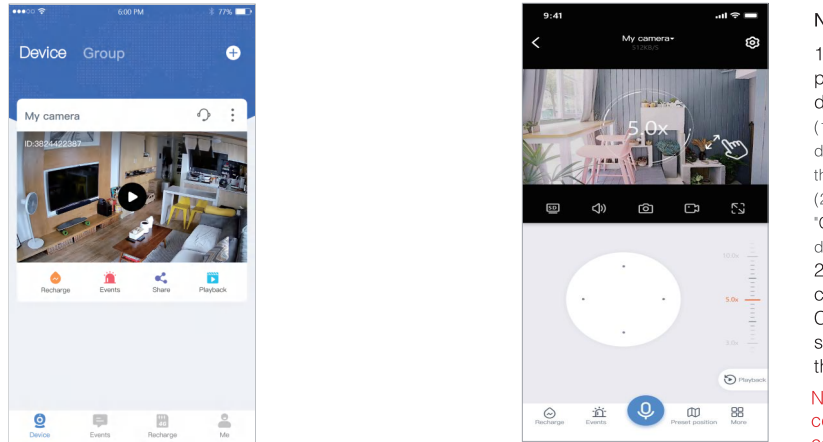

4G Camera working network diagram

 Mobile direct connection (as the pictureshows)

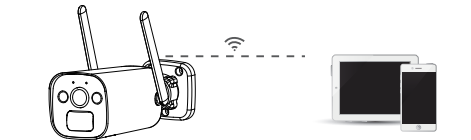

Note:

 
1.If you cannot find the QR code on the device body, please choose other adding methods according to the device type:

(1).Insert the SIM card or connect the network cable to use the device, please click "Manual Add", enter the device ID to add the device;

(2).For the device used to connect to the router WiFi, please click "Camera scan code to add" or "Camera hots pot add" to add the device according to the interface guidance;

2.If the location where you install the camera cannot be connected to the Internet, please click the "WiFi Connection" button in the upper right corner of the WiFi selection interface, and switch to "Direct Connection" in the pop-up window.

Note: The local direct connection needs to be connected to the camera's own WiFi to preview the camera screen normally, it cannot be viewed remotely.

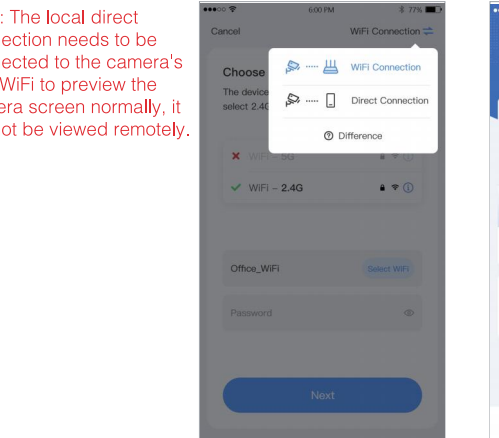


Adding method 2: To use with wireless NVR, please first power the wireless NVR and connect it to the Internet. After adding the wireless NVR by scanning the ID QR code on the body of NVR or displayed on the screen with the APP, you can check the battery camera on the APP.

1. When the WNVR (base station, network hard disk recorder and touch screen) is powered on, connect the WLAN network (some models support wireless connection) to the router which is already connected to the Internet;

2. Open the APP and click on the "+" in the upper right corner to enter the scan code interface;

 
3. Scan the ID QR code on the wireless NVR body or the screen, and add the device according to the simple setting guided by the APP. The camera paired to the wireless NVR will be directly displayed in the device list.

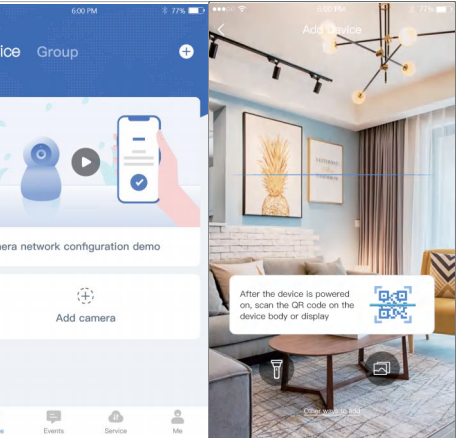

3.3


3.3.1 Battery camera

 1.Place on a desk or table, As shown below.

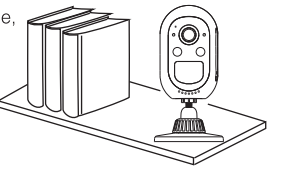

2. Fix the battery camera on the wall or glass

 First fix the mounting guide sticker to the wall with 3M glue (smooth surface such as glass) or screws (brick wall, etc.), put the magnetic base of the battery camera on the iron sheet, and adjust the angle.

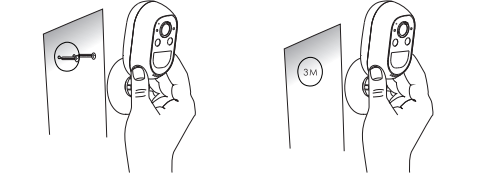

3.3.2

 
3.3.2 Pole installation

(1). Fix the iron plate behind the battery compartment of the dome camera with screws;

(2). Install the camera on the pole by holding the hoop;

(3). Solar holder installation;


(4). The solar panel is installed outdoors, and then connected to the camera;

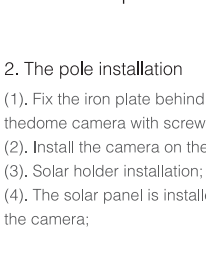

3.3.3

3.3.3 Ceiling installation

 (1). Use the mounting sticker to locate and bore holes, and the cement wall must be nailed into the rubber plug;

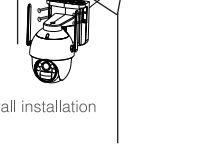


(2). The pole installation

(1). Fix the iron plate behind the battery compartment of the dome camera with screws;

(2). Install the camera on the pole by holding the hoop;

(3). Solar holder installation;

 (4). The solar panel is installed outdoors, and then connected to the camera;

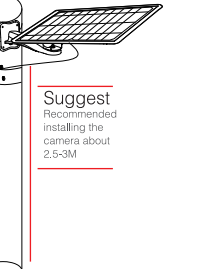

3.3.4

3.3.4 Wall installation

(1). Use the mounting sticker to locate and bore holes, and the cement wall must be nailed into the rubber plug;



 
(2). The pole installation

(1). Fix the iron plate behind the battery compartment of the dome camera with screws;

(2). Install the camera on the pole by holding the hoop;

(3). Solar holder installation;

(4). The solar panel is installed outdoors, and then connected to the camera;

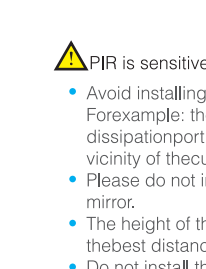

3.3.5

3.3.5 Ceiling installation

(1). Use the mounting sticker to locate and bore holes, and the cement wall must be nailed into the rubber plug;



 
(2). The pole installation

(1). Fix the iron plate behind the battery compartment of the dome camera with screws;

(2). Install the camera on the pole by holding the hoop;

(3). Solar holder installation;


(4). The solar panel is installed outdoors, and then connected to the camera;

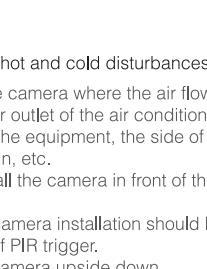

3.3.6

3.3.6 Wall installation

 (1). Use the mounting sticker to locate and bore holes, and the cement wall must be nailed into the rubber plug;

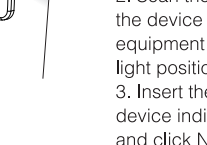


(2). The pole installation

(1). Fix the iron plate behind the battery compartment of the dome camera with screws;

(2). Install the camera on the pole by holding the hoop;

(3). Solar holder installation;

 
(4). The solar panel is installed outdoors, and then connected to the camera;

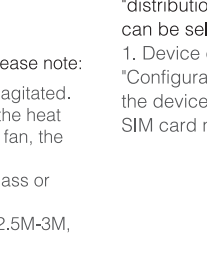

3.3.7

3.3.7 Ceiling installation

 (1). Use the mounting sticker to locate and bore holes, and the cement wall must be nailed into the rubber plug;

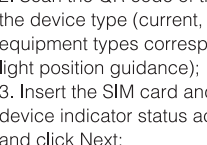


(2). The pole installation

(1). Fix the iron plate behind the battery compartment of the dome camera with screws;

(2). Install the camera on the pole by holding the hoop;

(3). Solar holder installation;

 
(4). The solar panel is installed outdoors, and then connected to the camera;

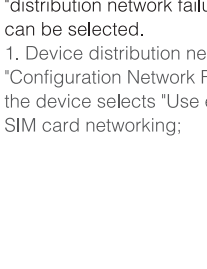

3.3.8

3.3.8 Wall installation

 (1). Use the mounting sticker to locate and bore holes, and the cement wall must be nailed into the rubber plug;

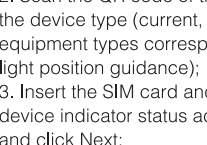


(2). The pole installation

(1). Fix the iron plate behind the battery compartment of the dome camera with screws;

(2). Install the camera on the pole by holding the hoop;

(3). Solar holder installation;

 
(4). The solar panel is installed outdoors, and then connected to the camera;

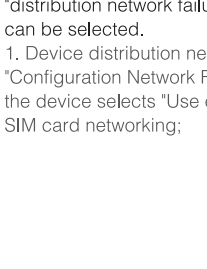

3.3.9

3.3.9 Ceiling installation

 (1). Use the mounting sticker to locate and bore holes, and the cement wall must be nailed into the rubber plug;

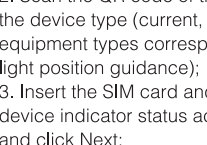


(2). The pole installation

(1). Fix the iron plate behind the battery compartment of the dome camera with screws;

(2). Install the camera on the pole by holding the hoop;

(3). Solar holder installation;

 
(4). The solar panel is installed outdoors, and then connected to the camera;

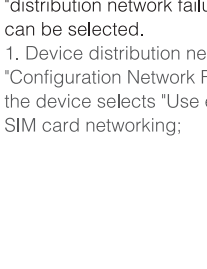

3.3.10

3.3.10 Wall installation

 (1). Use the mounting sticker to locate and bore holes, and the cement wall must be nailed into the rubber plug;

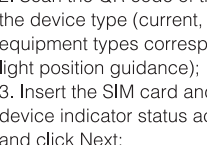


(2). The pole installation

(1). Fix the iron plate behind the battery compartment of the dome camera with screws;

(2). Install the camera on the pole by holding the hoop;

(3). Solar holder installation;

 
(4). The solar panel is installed outdoors, and then connected to the camera;

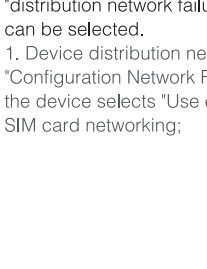

3.3.11

3.3.11 Ceiling installation

 (1). Use the mounting sticker to locate and bore holes, and the cement wall must be nailed into the rubber plug;

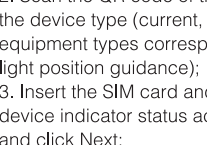


(2). The pole installation

(1). Fix the iron plate behind the battery compartment of the dome camera with screws;

(2). Install the camera on the pole by holding the hoop;

(3). Solar holder installation;

 
(4). The solar panel is installed outdoors, and then connected to the camera;

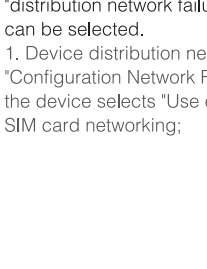

3.3.12

3.3.12 Wall installation

 (1). Use the mounting sticker to locate and bore holes, and the cement wall must be nailed into the rubber plug;

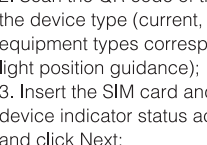


(2). The pole installation

(1). Fix the iron plate behind the battery compartment of the dome camera with screws;

(2). Install the camera on the pole by holding the hoop;

(3). Solar holder installation;

 
(4). The solar panel is installed outdoors, and then connected to the camera;

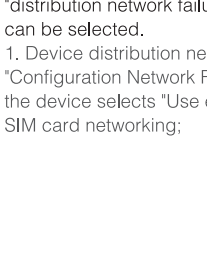

3.3.13

3.3.13 Ceiling installation

 (1). Use the mounting sticker to locate and bore holes, and the cement wall must be nailed into the rubber plug;

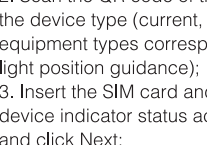


(2). The pole installation

(1). Fix the iron plate behind the battery compartment of the dome camera with screws;

(2). Install the camera on the pole by holding the hoop;

(3). Solar holder installation;

 
(4). The solar panel is installed outdoors, and then connected to the camera;

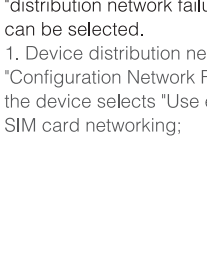

3.3.14

3.3.14 Wall installation

 (1). Use the mounting sticker to locate and bore holes, and the cement wall must be nailed into the rubber plug;

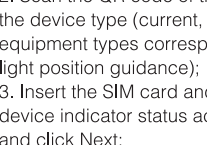


(2). The pole installation

(1). Fix the iron plate behind the battery compartment of the dome camera with screws;

(2). Install the camera on the pole by holding the hoop;

(3). Solar holder installation;

 
(4). The solar panel is installed outdoors, and then connected to the camera;

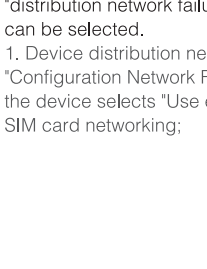

3.3.15

3.3.15 Ceiling installation

 (1). Use the mounting sticker to locate and bore holes, and the cement wall must be nailed into the rubber plug;

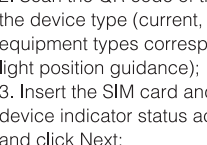


(2). The pole installation

(1). Fix the iron plate behind the battery compartment of the dome camera with screws;

(2). Install the camera on the pole by holding the hoop;

(3). Solar holder installation;

 
(4). The solar panel is installed outdoors, and then connected to the camera;

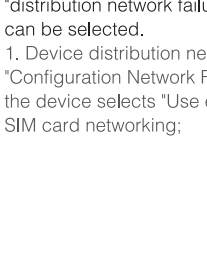

3.3.16

3.3.16 Wall installation

 (1). Use the mounting sticker to locate and bore holes, and the cement wall must be nailed into the rubber plug;

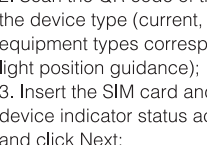


(2). The pole installation

(1). Fix the iron plate behind the battery compartment of the dome camera with screws;

(2). Install the camera on the pole by holding the hoop;

(3). Solar holder installation;

 
(4). The solar panel is installed outdoors, and then connected to the camera;

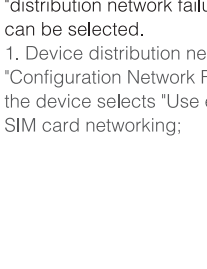

3.3.17

3.3.17 Ceiling installation

 (1). Use the mounting sticker to locate and bore holes, and the cement wall must be nailed into the rubber plug;

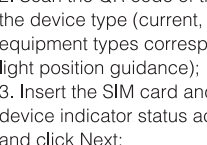


(2). The pole installation

(1). Fix the iron plate behind the battery compartment of the dome camera with screws;

(2). Install the camera on the pole by holding the hoop;

(3). Solar holder installation;

 
(4). The solar panel is installed outdoors, and then connected to the camera;

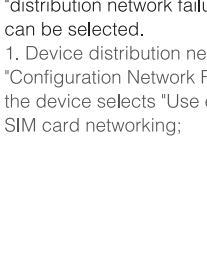

3.3.18

3.3.18 Wall installation

 (1). Use the mounting sticker to locate and bore holes, and the cement wall must be nailed into the rubber plug;

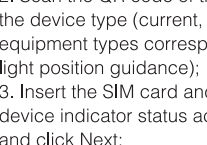


(2). The pole installation

(1). Fix the iron plate behind the battery compartment of the dome camera with screws;

(2). Install the camera on the pole by holding the hoop;

(3). Solar holder installation;

 
(4). The solar panel is installed outdoors, and then connected to the camera;

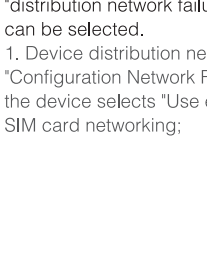

3.3.19

3.3.19 Ceiling installation

 (1). Use the mounting sticker to locate and bore holes, and the cement wall must be nailed into the rubber plug;

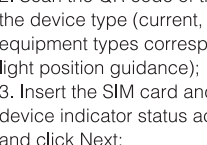


(2). The pole installation

(1). Fix the iron plate behind the battery compartment of the dome camera with screws;

(2). Install the camera on the pole by holding the hoop;

(3). Solar holder installation;

 
(4). The solar panel is installed outdoors, and then connected to the camera;

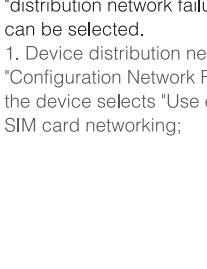

3.3.20

3.3.20 Wall installation

 (1). Use the mounting sticker to locate and bore holes, and the cement wall must be nailed into the rubber plug;

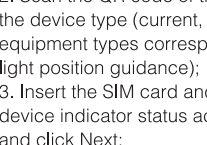


(2). The pole installation

(1). Fix the iron plate behind the battery compartment of the dome camera with screws;

(2). Install the camera on the pole by holding the hoop;

(3). Solar holder installation;

 
(4). The solar panel is installed outdoors, and then connected to the camera;

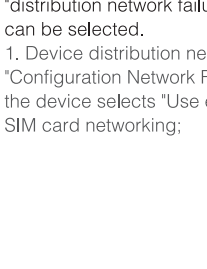

3.3.21

3.3.21 Ceiling installation

 (1). Use the mounting sticker to locate and bore holes, and the cement wall must be nailed into the rubber plug;

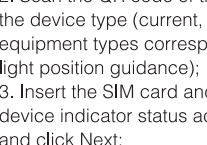


(2). The pole installation

(1). Fix the iron plate behind the battery compartment of the dome camera with screws;

(2). Install the camera on the pole by holding the hoop;

(3). Solar holder installation;

 
(4). The solar panel is installed outdoors, and then connected to the camera;

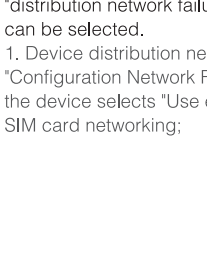

3.3.22

3.3.22 Wall installation

 (1). Use the mounting sticker to locate and bore holes, and the cement wall must be nailed into the rubber plug;

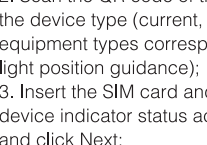


(2). The pole installation

(1). Fix the iron plate behind the battery compartment of the dome camera with screws;

(2). Install the camera on the pole by holding the hoop;

(3). Solar holder installation;

 (4). The solar panel is installed outdoors, and then connected to the camera;

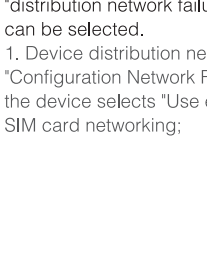

3.3.23

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:?(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception,which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC 's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.