



Diagram illustrating the location of the speaker and other controls on the back of the phone:

- 配对按键 (Pairing key)
- 音量大小 (Volume)
- 切换铃声 (Change ringtone)
- 扬声器 (Speaker)

当电池电量较低时，门铃会发送低电量提醒到绑定的客户端，请将设备充电。充电过程中指示灯为红色，充电完成指示灯熄灭。

直至30秒后设备关机,再次触发门铃才会给您新的消息推送。

5、如果配对失败或需重新配对,请重复配对操作流程。

门铃背面



Diagram of the back of the device showing the following components:

- match button
- volume control
- melody switch
- speaker

red indicator lights on while charging, and lights off after fully charged

5. Working logic or doorbell push: press the doorbell after binding, the app will receive the message push, select "reject" or hang up after answering, the doorbell will enter the shutdown state, which can trigger the doorbell to send messages to the mobile phone again.

If we don't do any processing on the messages, we will only push one message to the mobile phone within 30 seconds to avoid the excessive interference of junk messages caused by others' malicious doorbell ringing. New messages will not be pushed to you until the device is shut down after 30 seconds and the doorbell is triggered again.

16. *Journal of the American Medical Association*, 277: 1005-1006, 1997.

backside of doorbell