

INSTRUCTIONS

AGES 3+

THE PACKAGING AND INSTRUCTION MANUAL MUST BE RETAINED SINCE IT CONTAINS IMPORTANT INFORMATION.

Thank you for using our company's products. In order to have a better understanding of this product, please read the following instructions before use, which will bring you a different operating experience.

This product is suitable for children 3 years old and above. After assembled / charged by adults, play with children again.

Warning: please do not disassemble or modify the product without authorization, any changes may cause the product to not work properly.

SPECIAL WARNING:

 
The output voltage used by the charging plug should be 5V; Please do not use the quick-charging plug and overheated battery charging and results in dangerous matters such as product burnout.

Product Configuration



Vehicle charging and battery installation


Battery installation open the body battery cover, connect the rechargeable battery pack to the power socket, close the battery cover.

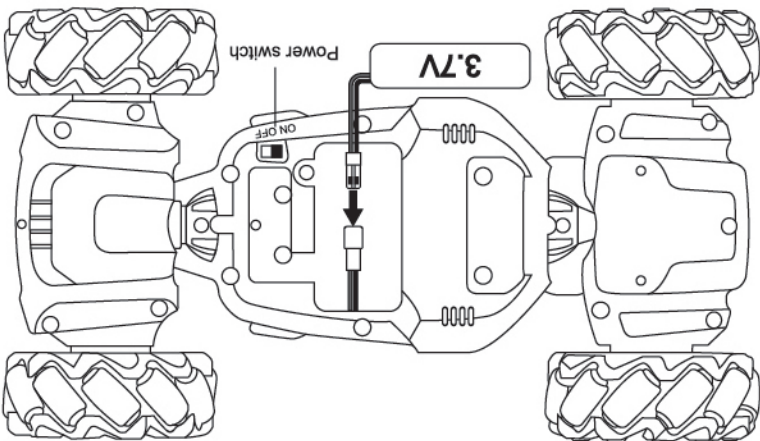

SCREWDRIVERS ARE ONLY USED FOR BATTERY REPLACEMENT. PLEASE KEEP AWAY FROM CHILDREN

Battery Charging Mode

 THIS TOY IS ONLY TO BE CONNECTED TO EQUIPMENT BEARING EITHER OF THE FOLLOWING SYMBOLS: or

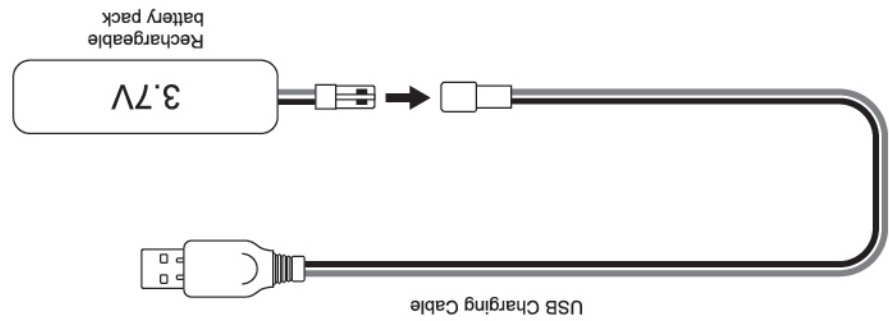


1. Connect the Rechargeable battery pack to the USB charging cable
2. Plug the other end of the USB charging cable into the USB port for charging
Attention: Before the battery of this car is almost depleted during use, it will sound two beeps and automatically shut down. If you need to continue using it, you should replace the battery.

Precautions For Using Water Tanks

- Please add an appropriate amount of clean water to the water tank before use. (As shown in the figure).
- When the water tank is dry, the atomization function cannot continue to operate. Long periods of water less operation can cause circuit board short circuits, leading to disordered or missing vehicle functions.

 Important notice: Due to the small size of the main body of this product and the small capacity of the water tank, only 6 grams of clean water can be added. Spray for 4 times or more. If you need to use the spray function again, add water again. Please insert the mouth of the water bottle into the mouth of the water tank and slowly squeeze it, filling it all at once.

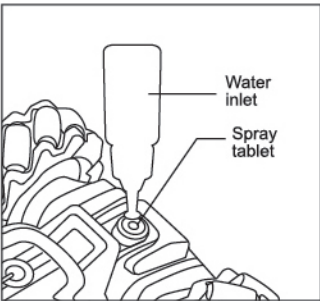



Precautions For Battery Use

- * Before playing please charge the new battery pack.
- * The output voltage used by the charging plug should be 5V;
- * The higher the actual milliampere of the rechargeable battery, the longer the charging time;
- * Rechargeable batteries can only be charged under adult supervision;
- * During charging, the light of the USB charging cable head is on red. When the light goes out, it indicates that the lithium battery is fully charged. The charging time is 3-4 hours.
- * First plug the battery pack plug in the charger, then plug the charger plugged in the socket.
- * Take out and put in the battery according to the mark on the toy battery room;
- * Non-rechargeable batteries cannot be charged;
- * Use only the same or identical battery as recommended;
- * Do not mix-use old and new batteries or different types of batteries;
- * Batteries should be placed in the correct polarity;
- * Remove the exhausted battery from the toy;
- * Power terminals should not be short-circuited;
- * The charger must be checked regularly for damage to its wires, plugs, housings and other components. If damage is found, stop using the charger until it is repaired.

General Trouble Shooting

Symptoms	Cause Of Issue	Approach
Vehicles Can Not Drive	1.The remote control is not connected or remote control car switch is not turned on. 2.The controller or the car does not load the battery proper. 3.The recharge bal battery power is low.	1.Turn on the control car and connect again. 2.Insert the battery into the remote control or remote control car correctly. 3.Charge the battery pack.

  R/C Function introduction and battery installation

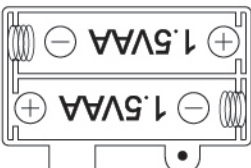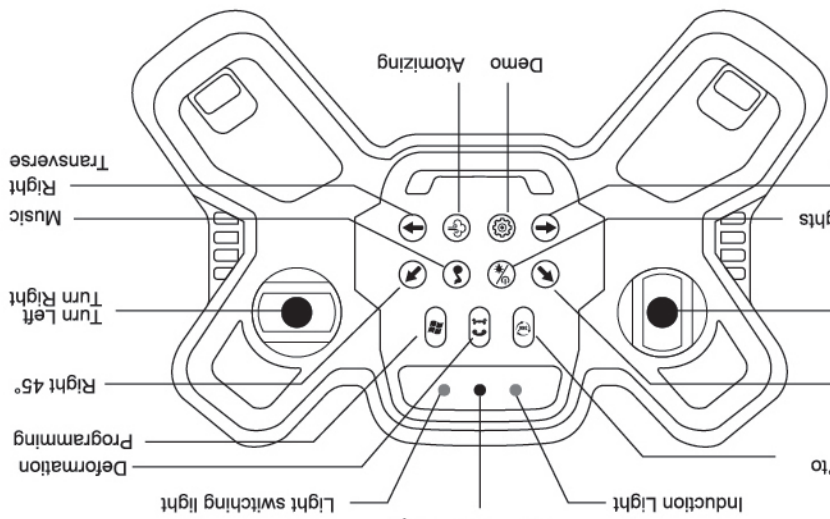

Battery installation

Open the body battery cover and install 2x1.5V "AA" non-rechargeable batteries in the right polarity direction and cover the battery cover.

Note: 1. The effective control distance between the remote controller and the car is about 40 meters. If the frequency is not correct or correct. It will go to sleep after 2 minutes. If it is necessary to operate, restart the power switch of the remote controller and the car.
2. First, turn on the power switch of the car body, and the car lights will flash. Then, turn on the power switch of the remote controller and start frequency matching. If the frequency matching is successful, the car lights will light up.
If the connection is unsuccessful, please repeat the above operation.

Right Transverse	When the r/c car is in the stop state, press down the "right" horizontal travel key, the r/c car travels right horizontal.
Forward/Backward	Push the forward and backward control lever of the remote controller upward, the R/C car goes forward. Push the control lever downward, the R/C car goes backward.
Turn Left/Turn Right	Push the joystick left and right of the remote control to the left, and the remote control vehicle will turn left. Push the joystick to the right to turn the remote control vehicle to the right.

FCC Compliance Statements

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.