 


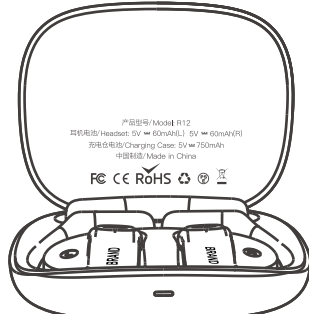


R12
Open Wearable Stereo

1
Headset connection

First Connection
Turn on bluetooth
Open the earphone box and approach the unlocked mobilephone Search, for bluetooth device and click on the link


Second Connection
Open the headphone box and the headphones will automatically connect to the phone

 2
Function

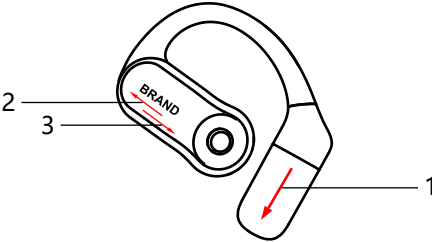


1.In this direction, the battery can be unplugged and replaced
2.Slide in this direction on the face cover, and you can hear two "Beep, beep" to increase the volume
3.Slide in this direction on the face cover, and hear two "Beep, beep" to reduce the volume

 3
Multipoint connection

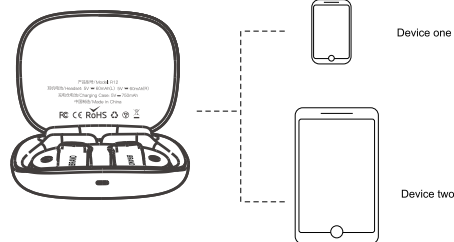

Enable multipoint connection: After the first device is connected, turn off the Bluetooth function of the first device, and the second device can search for connection.
After connecting the second device, turn on the Bluetooth function of the first device, and the earbuds will automatically reconnect with the first device.

 4
Factory Reset

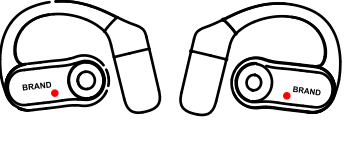

Left ear touch point
Right ear touch point

1.Touching either side of the left and right earbuds 6 times in a row will erase all pairing history of Bluetooth and complete the factory reset.
2.Touch the right ear twice to enter the Bluetooth pairing mode, and the Bluetooth can be searched for connection.

Note: Do not use one ear to operate this function. If you touch this function by mistake, please restore the other earphone to factory settings as well. Then touch the right earbud twice to enter pairing mode and reconnect the device.

5
Headset function operation

Function	Use in both ears	Use in one ear
Pause/play	Touch any earbud once	Touch it
Pause/resume	Double touch any earbud for 2 seconds	Double and hold the earbuds for 2 seconds
Previous song	Double-touch any earphone	Touch twice
Next song	Touch any earphone three times	Touch three times
Volume up	Double (up) on the left/right ear	Double (up) on the earphone
Volume down	Double (down) on the left/right ear	Double (down) on the earphone touch area above 20mm
Factory reset	Touch any earphone six times	
Answer the call	Touch any earbud once	Touch it
Hang up	Double-touch any earphone	Touch twice
Reject a call	Double-touch any earphone	Touch twice
Manual shutdown	Press and hold any earphone for 10 seconds	Press and hold the earbuds for 10 seconds
Manual shutdown	Press and hold both left and right earphones for 10 seconds	Press and hold the earbuds for 10 seconds

6
The headphones are lit up

Mode	White light	Green light	Remark
charge	Solid on	Not lit	
Fully charged	Not lit	Not lit	
Power up and wait for pairing	The white and green lights flash alternately		
Left and right earphones are lit up	Left and right earphones flash 3 times	Not lit	
Open the charging compartment	The left and right earphones flash 3 times	Not lit	
When a call comes in	Solid on	Not lit	
On a call	Flash 1 time in 5 seconds	Not lit	
Low power	Flash 1 time every 1 min	Not lit	
bootable	Not lit	Bright for 2 seconds	
Shutdown	Bright for 2 seconds	Not lit	
Factory reset	Not lit	Bright for 2 seconds	
warehousing	Not lit	Flash slowly once	

7
The charging compartment is lit up

Mode	White light	green light	Charge light
charge	Not lit	Not lit	Solid on
Fully charged	Not lit	Solid on	Not lit
Headphones are lit up	Not lit	Take 1 breath	Not lit
The battery is out	Not lit	Not lit	Not lit
Charge the earbuds and the charging compartment	Not lit	Solid on	Not lit
Single earphone is lit up	Breathes 3 times	Not lit	Not lit
Single earphone is lit up	Take 1 breath	Not lit	Not lit
Single earphone is lit up	Not lit	Not lit	Not lit
open the charging compartment	breathes: 10s-10s	Not lit	Breathes 4 times
open the charging compartment	breathes: 10s-10s	Not lit	Breathes 3 times
breathes: 10s-10s	Not lit	Breathes 2 times	Not lit
breathes: 10s-10s	Not lit	Take 1 breath	Not lit
breathes: 10s-10s	Not lit	Not lit	Take 1 breath

8
Description of the feature definition

Power on: The charging compartment is automatically turned on and automatically paired after opening the cover.
Shutdown: Put into the charging compartment and close the cover, the headset automatically shuts off.
Single ear use: Turn on the charging compartment to start automatic pairing, connect Bluetooth successfully, take out the single ear, cover the charging compartment to use the single ear function.
Automatic back connection: The headset pair name is not deleted when the phone is connected, and the cover can be automatically connected back.

9
Basic functions of the charging case

TWS automatic matching: the earphone is put into the charging compartment, open the upper cover of the charging compartment, and pair the ear successfully.

Headphone version: 5.4
Transmission frequency: 2.4GHz-2.4835GHz ISM Band
MI sensitivity: <123dB
Support Protocols: AVRCP/A2DP/HSP/HFP

10
Precautions for use

The earphones should be stored in a dry and ventilated environment, to avoid oil/water/moisture and dust affecting product performance.
Avoid using stimulants, organic solvents or items containing these ingredients to clean the earphones.
The use of earphones should be correctly as per the specification, pay attention to the influence of environment on the earphones.
In order to ensure the smooth connection, it's recommended that the distance between the earphones and phones with in 10 meters.
If the earphones failed to connect or with poor connection, pls do not take apart the earphones or the accessories on your own. Otherwise, no warranty.
Regarding charging earphones, pls use the standard us cable orported charging cable from our company to charge the earphones

11
Warn

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.
This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
If the equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

12
Warranty Card

1.If the product has any functional problems, you can enjoy the warranty service, the warranty period is 2 years.
2.Man-made damage, broken, artificially scratched, no warranty card is not covered by the warranty.
3.Customers must submit all necessary information (customer name, address, phone number, date of purchase, etc.).
4.Warranty service requires a warranty card and can be operated as required, otherwise no warranty.

Product model: _____
Customer's name: _____
Contact number: _____
Customer's address: _____
Date of purchase: _____