



Install base station


1. Set up the base station and secure it using screw mounts.

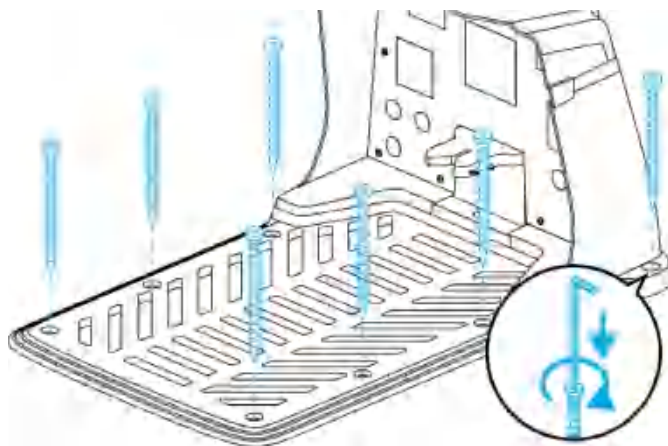

-
- 22 2. Connect the base station's cable to the power adapter. If the base station is too far from a power outlet, use an extension cable to connect the adapter to the station. Make sure to tighten the nuts securely to keep water out.

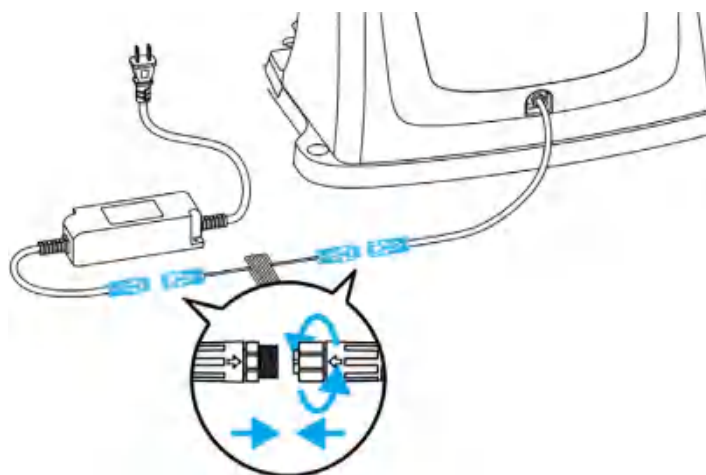


3. Plug the adapter into a 100-240V power outlet.

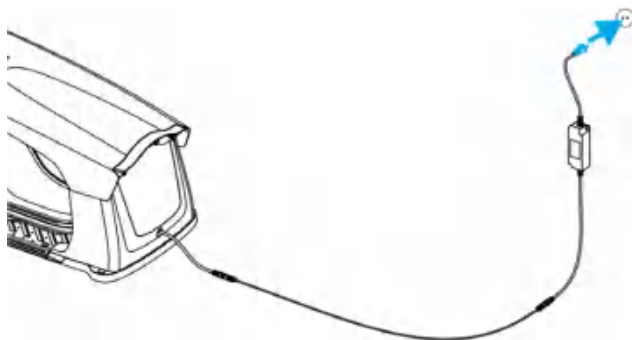

WARNING : For placing and fixing power adapter

- Avoid direct sunlight exposure or direct rain.
- Place in a well-ventilated indoor area.
- Keep it at least 30cm (12") high from the floor to avoid possible damage caused by water.


23

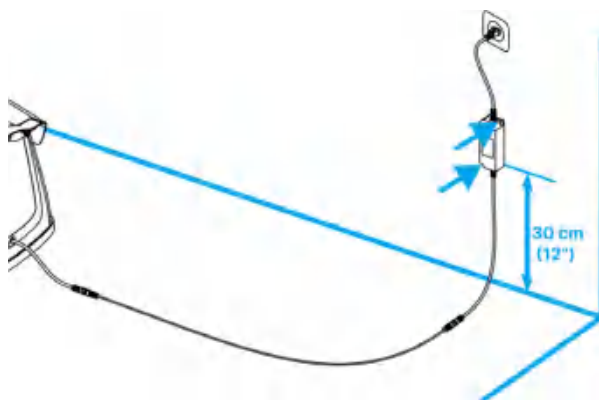


NOTE: If you want your TerraMow to mow in a certain direction of the cutting route, please configure it in the TerraMow app.


Assemble station garage

1. Attach the garage to the top of the station from back to front, make sure the inner protrusion of the garage is inserted into the groove of the station tower.

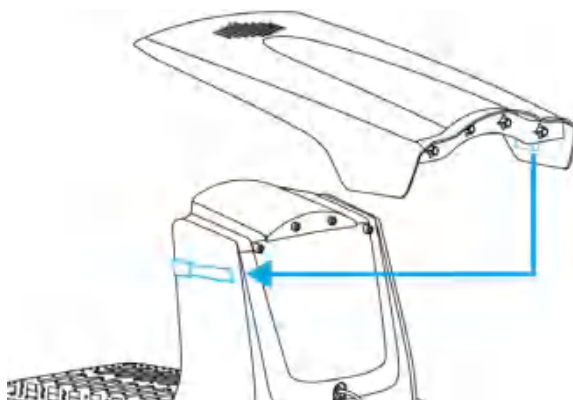

2. Tighten the 4 screws on the back of the garage.

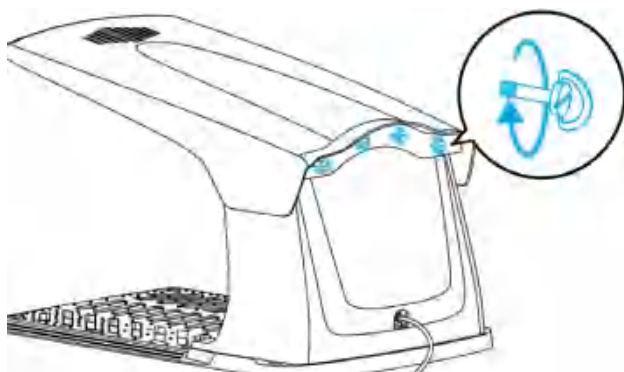

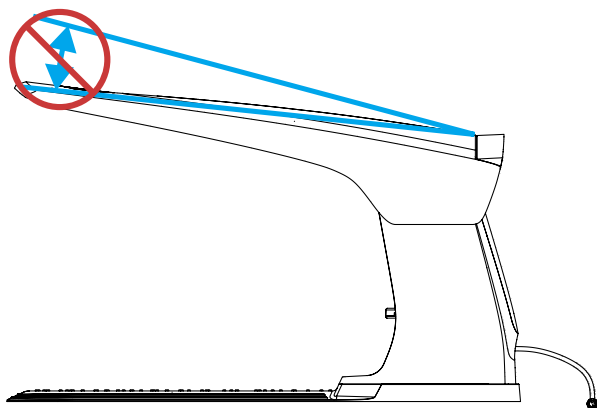

WARNING:


- DO NOT place anything on top of the garage to prevent damage to it or interference with code recognition.
- The garage cannot be lifted.

If it snows a lot or has heavy snowfall, it is recommended to store TerraMow indoors. If TerraMow is stored under the garage, clear snow before starting work.

3.3 Activate TerraMow

Insert safety key

Place your TerraMow upright and insert the safety key into the keyhole at its bottom.

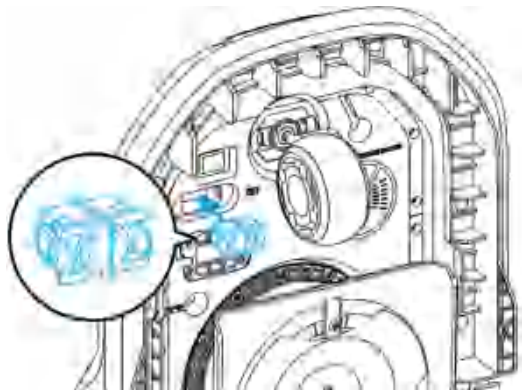

26

WARNING:


- Please make sure the key is correctly oriented.

Connect to the Internet


NOTE :

During connecting, make sure the distance between your phone and TerraMow is less than 3m (10').


1. Turn on the main switch at the bottom of your TerraMow.

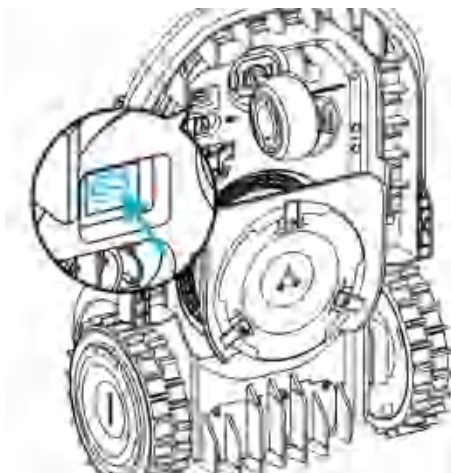


2. Make sure your TerraMow is on the base station.

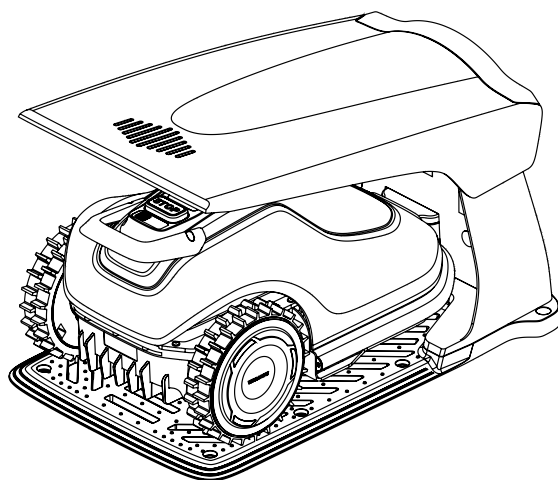


3. Sign in to the App and tap "Add TerraMow".

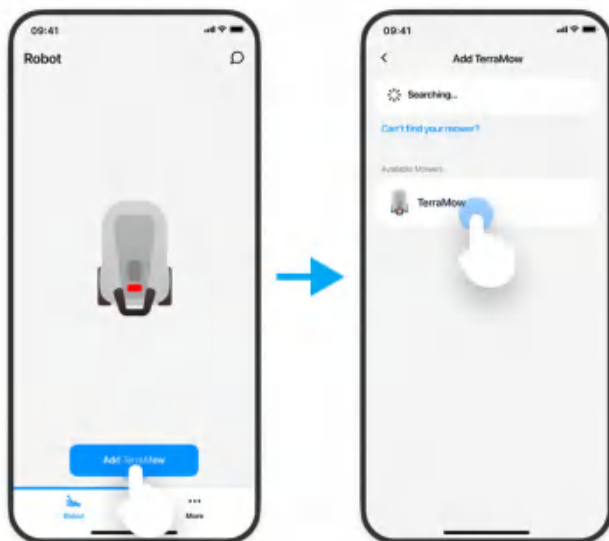

4. Press and hold both the  and  buttons for 5s until the light panel starts white flashing.

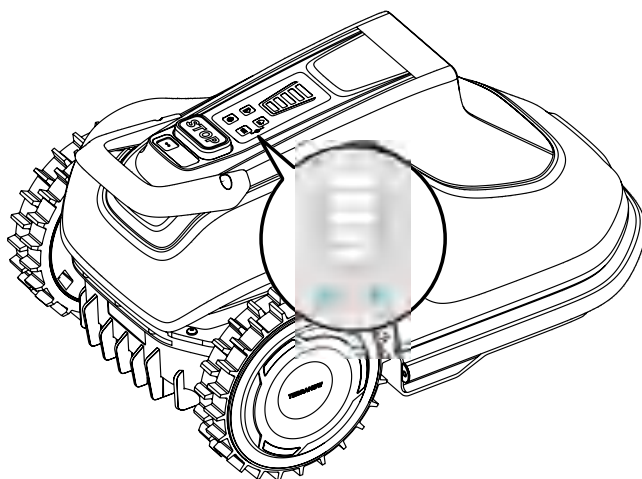

5. Follow the on-screen instructions to connect to the Internet.

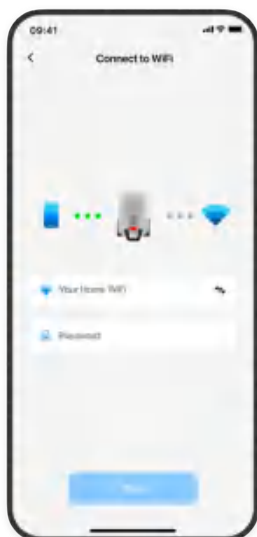

Update to the latest firmware

For a better experience, please update to the latest firmware version before using your TerraMow.


29

- If your TerraMow's firmware version is outdated, you will see a pop-up . Tap the "Update now" button and follow the prompts




- If you don't see the pop-up:

1.Go to "Settings" in the "Robot" tab.

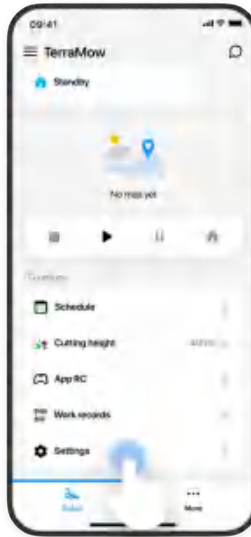

2. Tap "Over-the-Air (OTA) updates" to check for the new update.

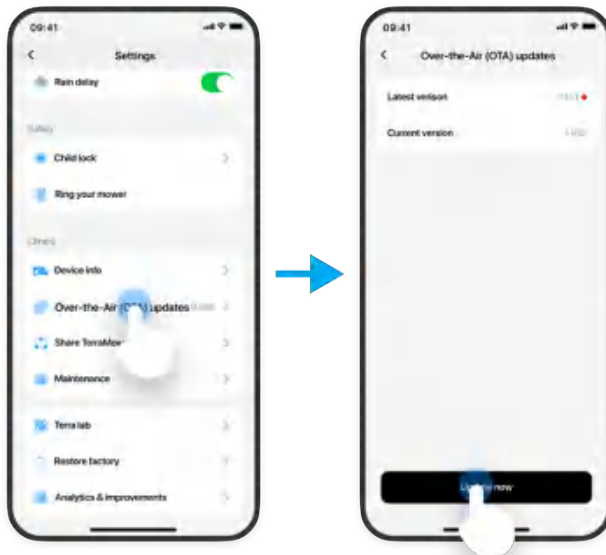

3. If a new version is available, a red dot will appear next to the “Latest version”. Tap “Update now” to start self-check before updating. It takes about 20-30 mins to complete the update.



NOTE:

When updating firmware

- Make sure your TerraMow's battery is above 30%.
- Make sure the main switch is on.
- Always keep your TerraMow parked on the base station.


WARNING:

- DO NOT power off or perform other operations on your TerraMow during updating.

Charge your TerraMow

- Charge for the first time

After long storage, your TerraMow may have a low battery. Please manually place it on the base station and charge fully. Make sure the charging pins both on the station and your TerraMow are in good contact.

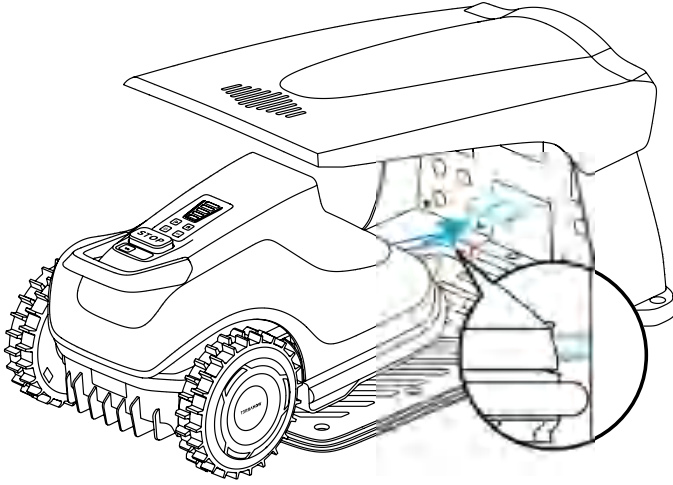

- Auto-charge during daily use

TerraMow returns to the station automatically for charging when the battery is low during daily use, and resumes task when the battery is enough.

- Manual charging during daily use

a. You can tap the  button in the App


b. Or, pause your TerraMow's task and then press the  button, then  button

- Light panel during charging

The light panel indicator bars on your TerraMow display its charging status:

a. The green light flashes while charging, and the bars indicate the current battery level of your TerraMow.

b. After fully charged, the green light remains solid.

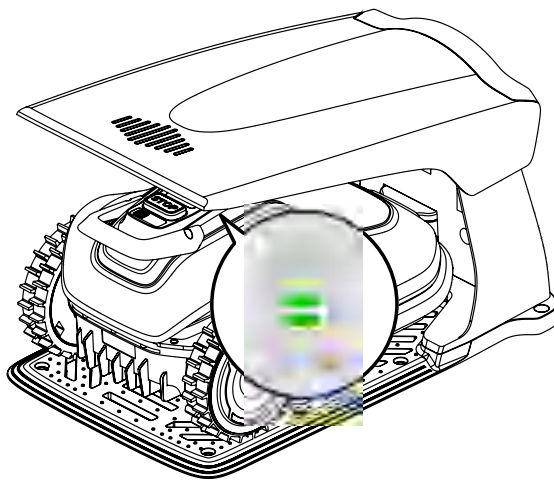

WARNING :

- DO NOT charge if your TerraMow, the power adapter, the base station, or the power outlet is damaged.
- DO NOT charge your TerraMow when the temperature is above 45°C (113 °F), or below 5 °C (41 °F). The battery has built-in temperature protection and will not charge if the limit is exceeded.
- When there is an abnormal smell, sound or light display, stop charging immediately and contact after-sales service.
- Keep away from inflammable and explosive materials when charging.