

PRODUCT DIAGRAM

The diagram illustrates the components of the Bluetooth True Wireless Cord-Free Earbuds system. On the left, two earbuds are shown from the front; one is labeled 'LEFT' and the other 'RIGHT'. A label 'TRUE WIRELESS EARBUDS' points to both. Below them, a label 'LIGHT INDICATOR' points to a small dot on the side of the right earbud. In the center, the 'CHARGING CASE' is shown from the front. Two labels point to the interior of the case: 'EARBUD CHARGE SLOTS' pointing to the top half and 'CHARGING PORT' pointing to the bottom half. On the right side of the case, a label 'LIGHT INDICATOR' points to a small dot.

FRONT INSIDE

INSTRUCTION MANUAL

Bluetooth® True Wireless Cord-Free Earbuds

FEATURES

- Works with all Bluetooth®-enabled devices
- Stream audio wirelessly via Bluetooth technology in high quality from up to 33 ft. away
- Integrated rechargeable battery provides hours of playing time wherever you go.
- Charging case provides charge to earbuds

CONTENTS

- 1 Pair True Wireless Earbuds
- 1 Charge Case
- 1 USB Charging Cable
- 1 User Manual

SPECIFICATIONS - Earbuds

- Internal Battery: Rechargeable Li-Ion
- Frequency Response: 20Hz~20KHz
- Sensitivity: 104dB ±3dB
- Impedance: 32 ohms
- Wireless Capability: Up to 33 ft range
- Operating Temperature Range: 0~45°C

CHARGING THE CHARGE CASE

The charge case is used to charge the earbuds and it must be fully charged before first use. Keep it fully charged regularly for maximum performance. If it has not been used in a while, it is recommended to fully charge the battery. To charge:

1. Insert the USB Type-C connector of the included USB cable into the USB Type-C charging input port on the charge case.
2. Insert the larger USB end of the cable into the USB port of a computer OR into a compatible USB DC 5V wall charger (not included) to charge through a standard wall outlet. The indicator light will blink red while charging and will turn a solid red when charging is complete. Unplug from the power source when charging is complete.
NOTE: If earbuds are inside the charge case, they will pause charging while the case is being charged.

CHARGING THE EARBUDS

The earbuds must be fully charged before first use. The charge case must also be fully charged for maximum performance. To charge:

1. Insert each earbud into the charge slots, ensuring the charge contacts on the bottom of the earbuds line up and connect with the contacts within the charge slots.
2. The indicator light is in a solid red light condition during charging and will turn off when charging is complete. The light indicator on the charge case will turn a solid blue when earbuds are charging and will turn off when earbuds are fully charged.
3. Remove earbuds from the charge case when charging is complete.
NOTE: If earbuds are inside the charge case, they will pause charging while the case is being charged.
NOTE: When battery power is low the LED may blink red and/or there may be an alerting sound, even while music is playing. Fully charge the battery as explained above to resume normal operation.

WIRELESS EARBUDS OPERATION

Wireless playback Via Bluetooth:

1. Make sure both earbuds are charged as explained above.
2. Ensure the Bluetooth function on your mobile device is deactivated.
3. The earbuds automatically turn on when removed from the charging case.
4. After the automatic startup, the red and white lights flash alternately. After the pairing is successful, the main earbud flashes the red and white lights alternately, and the secondary earbud will turn off.
5. To pair the synched earbuds to your audio device, activate its Bluetooth function – it should automatically recognize the earbuds and allow you to select it using the name "PrimeAudio". When successfully connected, a tone will signal and both earbud indicator lights will turn off. You are now set to enjoy audio wirelessly within a 33ft range of the audio device.
6. Before playback, first adjust the volume of your audio device to medium level as a safe starting point. The volume will be controlled solely from your audio device.
7. When playing music, click on each earbud to play or pause music.
8. To answer an incoming call, click the power button on either earbud once – click it once again to end the call.
9. To reject an incoming call, press and hold the power button on either earbud for one second.
10. To disconnect and shut off the earbuds, press and hold the power button on either earbud for around four seconds. You can also deactivate the Bluetooth on your device – be sure to power off the earbuds when not in use.
11. To activate Siri, the Google Assistant or other voice assistants, press and hold the power/play button on either earbud for 1.5 seconds until a tone is heard. (Compatible devices only)
- NOTE:** If there is no signal or audio playback for 5 minutes, the earbuds will automatically shut off.
- NOTE:** Low earbuds power and/or low audio device power may cause poor operation and/or no Bluetooth connection.

BACK INSIDE