


User Manual

C09

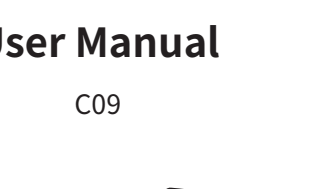

Device Introduction

Thank you for choosing our pet locator. This device is a smart device for real-time tracking of pet locations, designed to ensure the safety of your pets and help you find them quickly when they are lost.

Features

1. Real-time positioning: Accurate positioning through GPS, Wi-Fi and LBS.
2. Trajectory record: Record the historical activity trajectory of your pet.
3. Safety fence: Set a virtual fence and receive instant alerts when your pet leaves the set area.
4. Extremely long battery life: Highly efficient and energy-saving design, it can be used continuously for several days after being fully charged.
5. Waterproof design: Suitable for all weather and environments.

Notes

1. Check the battery level: Check the battery level of the locator frequently to ensure that the positioning function will not fail due to low battery during use. It is recommended to charge it every few days.
2. Ensure fastening: Check regularly whether the locator is firmly fixed to the pet's collar or harness to prevent it from falling off or getting lost during the pet's activities.
3. Avoid water immersion: Although most locators are waterproof, it is recommended to avoid long-term immersion in water or contact with high-pressure water flow to avoid affecting the performance of the device.
4. Update software: Check and update the application and device firmware regularly to ensure that you are using the latest version for optimal performance and the latest features.
5. Usage environment: The accuracy of the locator may be affected in areas with weak signals, such as basements, dense urban buildings, or remote mountainous areas. Try to use it in open areas to ensure good signal reception.
6. Safety fence: Set up appropriate safety fences according to the pet's range of activities and living environment. When the pet leaves the safe area, receive notifications in time and take corresponding measures.
7. Anti-tampering design: If your pet likes to scratch or bite things, choose a locator with an anti-tampering design to prevent the pet from damaging the device.
8. Response notification: When you receive a notification that your pet has left the safe area or a low battery reminder, take appropriate measures in time to ensure the safety of your pet and the normal operation of the device.

Common Problems

 
1. The locator cannot connect to the app: Check that the locator has sufficient battery, make sure Bluetooth is turned on, and try again within the device range.
2. Unable to obtain positioning information: Confirm that the locator is in an open environment with good signal strength. Weak signal areas such as indoors or in basements may affect the positioning effect.
3. Application push delay: Check that the mobile network connection is stable and make sure that notifications are allowed in the application settings.

Maintenance

1. Regular charging: Keep the battery fully charged to ensure the normal operation of the locator.
2. Cleaning equipment: Wipe the locator with a clean soft cloth regularly to prevent dust and dirt from accumulating and affecting the normal operation of the equipment.
3. Environmental factors: Do not expose the locator to extremely high or low temperatures for a long time to avoid damaging the internal circuit.
4. Wear: Regularly check the wear of the fixing belt and locator, and replace damaged parts in time to ensure the safety and reliability of the equipment.

Please read the instructions carefully before use

Product description



Function details:

1. Removable shell
2. SIM card slot
3. Function indicator

5. Switch
6. Charging indicator
7. Length adjustment
8. Unlock button
9. Product OR code

1. Remove the product casing (there is a slot at the bottom right of the casing)

3. Press and hold the middle switch (press and hold for 3 seconds, 3 LE)

4. Scan the QR code on the device (download the required app before)

5. Install the product shell back

to charge. Use the included charging cable to charge the locator during the charging process and turn off when fully charged.

to install the app: Search and download the "365GPS" app in the mobile app store.

to use the app: Open the app, use the account or QR code in the app to complete the registration process.

to use: Select "Bind device" in the app and follow the prompts to connect the locator to the mobile phone. When the locator is turned on and within the Bluetooth range, the app will automatically connect to the locator.

to use: The Positioner: Use the fixing strap to firmly fix the positioner in the location where it will not fall off.

Notice:

to use: Use our GPS positioning device in compliance with relevant national laws and regulations to protect user privacy. Any user who illegally disseminates or uses for other illegal purposes and occasions will be held legally liable.

to use: Please do not use the device for any illegal activities to protect your personal privacy, please do not disclose your GPS device information. If necessary, please change the password in time. If you do not use the device, please contact after-sales customer service in time.

to use: The device requires your local telecom operator network support. Communication may be delayed in some areas with unstable signal.

to use: To power on the device: Press the power button for 3 seconds to turn on the SIM card slot, insert the SIM card when the device is turned on, and press the power button for 3 seconds until 3 LED lights are on, and the device will start.

Turn off: Press and hold the power button for 3 seconds (until 3 LEDs are off together). Press and hold the power button for 3 seconds (without SIM card): Press and hold the power button for 3 seconds (if the LEDs are off together).

If the device cannot be turned on (LED is not on), please charge the battery naturally turn on after charging for a period of time.

If yellow light does not flash after the device is turned on, it means the device is not working properly. Please turn off the device and replace it with another valid SIM card.

The indicator light will light up
 mobile app store, which supports
 to bind the location to your account.
 to bind the location to your account.
 the appropriate position of your pet
 national laws and regulations and
 assembles, modifies and uses the
 responsible in accordance with
 device IMEI number and password
 accidentally forget the device
 to provide data communication,
 signals.
 (LED lights are all off), then press
 after about 2 seconds, the 3 LEDs

LED lights are on).
8 seconds until 3 LED lights are on
turned off.
release when 3 lights are on
the device first. The device will
that the SIM card is invalid or in
card.

[illegible]

Forgot Password

No account yet? [Experience](#)

Network signal: The device network signal is used to understand the connection status between the device and positioning information.

Positioning method: The upper left corner of the map shows the positioning method (such as GPS, Wi-Fi or cellular network), which is used to ensure the best positioning effect.

Movement status: The current movement status of the pet is displayed on the map, such as "stationary" or "moving", to help you understand the pet's movement.

Movement speed: Displays the real-time movement speed of the pet and understand its activity status.

Altitude information: If the device uses GPS positioning, the altitude information will be displayed at the bottom of the interface to provide you with more accurate positioning information.

A screenshot of the Google Maps application interface. The map shows a street view of a city area with a red location pin. A blue line indicates the current location. A yellow location pin is also visible. A search bar at the top left contains the text "KINGSTON, ONTARIO". A status bar at the top shows the time "10:47" and battery level "100%". A bottom navigation bar contains icons for "Home", "History", and "Layers".

- Manual refresh
- Satellite map
- Street view
- GPS Navigation
- SIM card and battery
- GPS positioning altitude
- (Wi-Fi base station locations are not displayed)
- Location Sharing

strength is displayed next to the battery power to help you
he device and the network and ensure accurate transmission

of the main interface displays the current positioning method
h automatically switches according to different environments

atus of the pet is displayed below the location information,
understand the activity of the pet.

ovement speed of the pet, allowing you to grasp the movement
ity intensity.

ositioning, the altitude of the current location will be
vide more comprehensive location information.

device (activate this function, products with speakers will ring), power saving, etc. Click to enter the relevant function interface to directly set and view. Note: The SOS menu supports adding up to three groups of SOS emergency contacts and 50 whitelist numbers (only emergency contacts and whitelist numbers can call the device)

Contacts [New Contact](#)

When you trigger the device SOS panic button, the device will call the following number

Arrest Method Auto Answer Call Voice Double-halk

Number 1: Please enter the number 1

Number 2: Please enter the number 2

Number 3: Please enter the number 3

Save

Contact Whitelist

Find Device

Function	
Contacts	>
Fence	>
Playback	>
First Device	>
Health	>
Power Saving	>
Attendance	>
Alarm	>
Mute	>
Mug	>

of the track query cannot exceed 24 hours. The historical track of many days ago, you can select it in the calendar interface.

Adjust the track playback speed.

The left figure above for the track display method, and users can switch between querying the product movement track within up to 90 days. After clicking the required location on the map and then set the corresponding time range, if the user sets a push message in "Settings" -> "Console", when the product is at the left set range of the electronic fence, the APP will send a push message to the electronic fence.

rn information)

The alarm information of the device in the "Information" menu. If the "Settings" -> "Console", the mobile phone will receive the correct information of the device in the notification bar, as shown in the figure below

OS

04-06-14 15:04:12 359339078068817

oving Alert

04-06-14 15:04:12 359339078068817

the upper left corner of the screen. When you switch it at will, the device will receive a range of electronic signals and receive an alarm.

Change password: When the user turns on the pending push and answers the question, the user can change the password. The user can also change the password from the **Console**: (as shown in the left picture above).

Restore factory settings: When the user turns on the pending push and answers the question, the user can restore the device data and restore it to factory settings when the device left the factory.

LED indicator light

Red light: battery indicator light, slow flash when in standby mode, always on when in power saving mode.

Yellow light: SIM signal light, slow flash when in standby mode, always on when in power saving mode.

Green light: GPS signal light, slow flash when in standby mode, always on when in power saving mode.

in the "Console" window, following figure to set up the device in their needs. The "Console" window is off. Manually set up the device will restart

Figure 1.14: Console window

Figure 1.14 shows the 'Settings' application on an Android phone. The top bar displays 'Settings 1.47'. Below this, there is a profile icon and the text '359339078068817'. A list of settings options is visible, including 'Map settings', 'Positioning mode' (set to 'High'), 'Change Password', 'Console', 'common problem', 'Factory Reset', 'Disclaimer', and 'About'. A 'Log out' button is located at the bottom of the list. At the very bottom of the screen, there are three icons: 'Location', 'Fingerprint', and 'Security'.

sleep mode and will not actively upload the position. It is super low power positioning mode at will.

④ If you do not set the default password, please keep the password properly.

⑤ Please set necessary options according to your needs

⑥ If the GPS tracker is online in the APP, you can use this option to clear the settings. The password will also be restored to the default setting.

⑦ When the battery is low, the LED indicator will flash. The meaning of the flashing means normal, fast flashing means low battery, and when charging.

⑧ When the battery is low, the LED indicator will flash. The meaning of the flashing means normal, fast flashing means searching for signal, and when the signal is found, the LED indicator will flash.

⑨ When the battery is low, the LED indicator will flash. The meaning of the flashing means normal, fast flashing means searching for signal, and when the signal is found, the LED indicator will flash.

Charging type	
Charging voltage	
Battery capacity	
Charging time	
Battery life	About 7 d
Waterproof level	
Operating temperature	

	Material	
	Network	
	APP	

USB to magnetic	a Class
DC5V/1A	are des
3.7V/500mA	in a res
2H	radio fr
ays (depending on usage)	instruc
IP66	Howev
-20—60°C	install
	televisi
	on, the
	followi
	· Reor
	· Incre
	· Conn
	the re
	· Cons
	Caution
	manufa
	This de

ABS+ PC	(2) this that m
GSM/GPRS/GPS	
365GPS	

B digital device, pursuant to part 15 of the FCC Rules, is designed to provide reasonable protection against harmful interference to other licensed operations in the same band. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to your radio or television reception, which can be determined by turning the equipment off and on, you are encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications to this device not approved by the manufacturer could void your authority to operate this equipment. This equipment complies with part 15 of the FCC Rules. Operation of this equipment in a manner not permitted by the instructions may void the user's authority to operate the equipment.

device must accept any interference received, including that which may cause undesired operation.

These limits
interference
can radiate
conformance with the
communications.
occur in a particular
ence to radio or
the equipment off and
by one or more of the
interfer.
ent from that to which
in for help.
explicitly approved by
equipment.
ion is subject to the

cluding interference

E IN CHINA

On standards that were developed by organizations through periodic and thorough evaluation, a substantial safety margin designed to assure the safety of the device for use on the head or on the ear, face or health.

The SAR limit of USA (FCC) is 1.6 W/kg (averaged over 1g of tissue).

The device has also been tested against this SAR limit.

The device is not for typical body-worn operations with the back of the head.

The device, with FCC RF exposure requirements, use accessory operation distance between the user's body and the base station.

The device and similar accessories should not contain metal parts.

The device should not satisfy these requirements may not comply with FCC requirements, and should be avoided.

ation
safety of
36
6 W/
ive device
es that
ck
metallic
ply with

APP

You can download
on Android and

5GPS

A QR code with a blue circular logo on the left side containing a white stylized 'G' with a location pin. The QR code is black and white, with a large black square in the top right corner.

QR code
Download it by searching
on Google and Apple stores