



User Manual

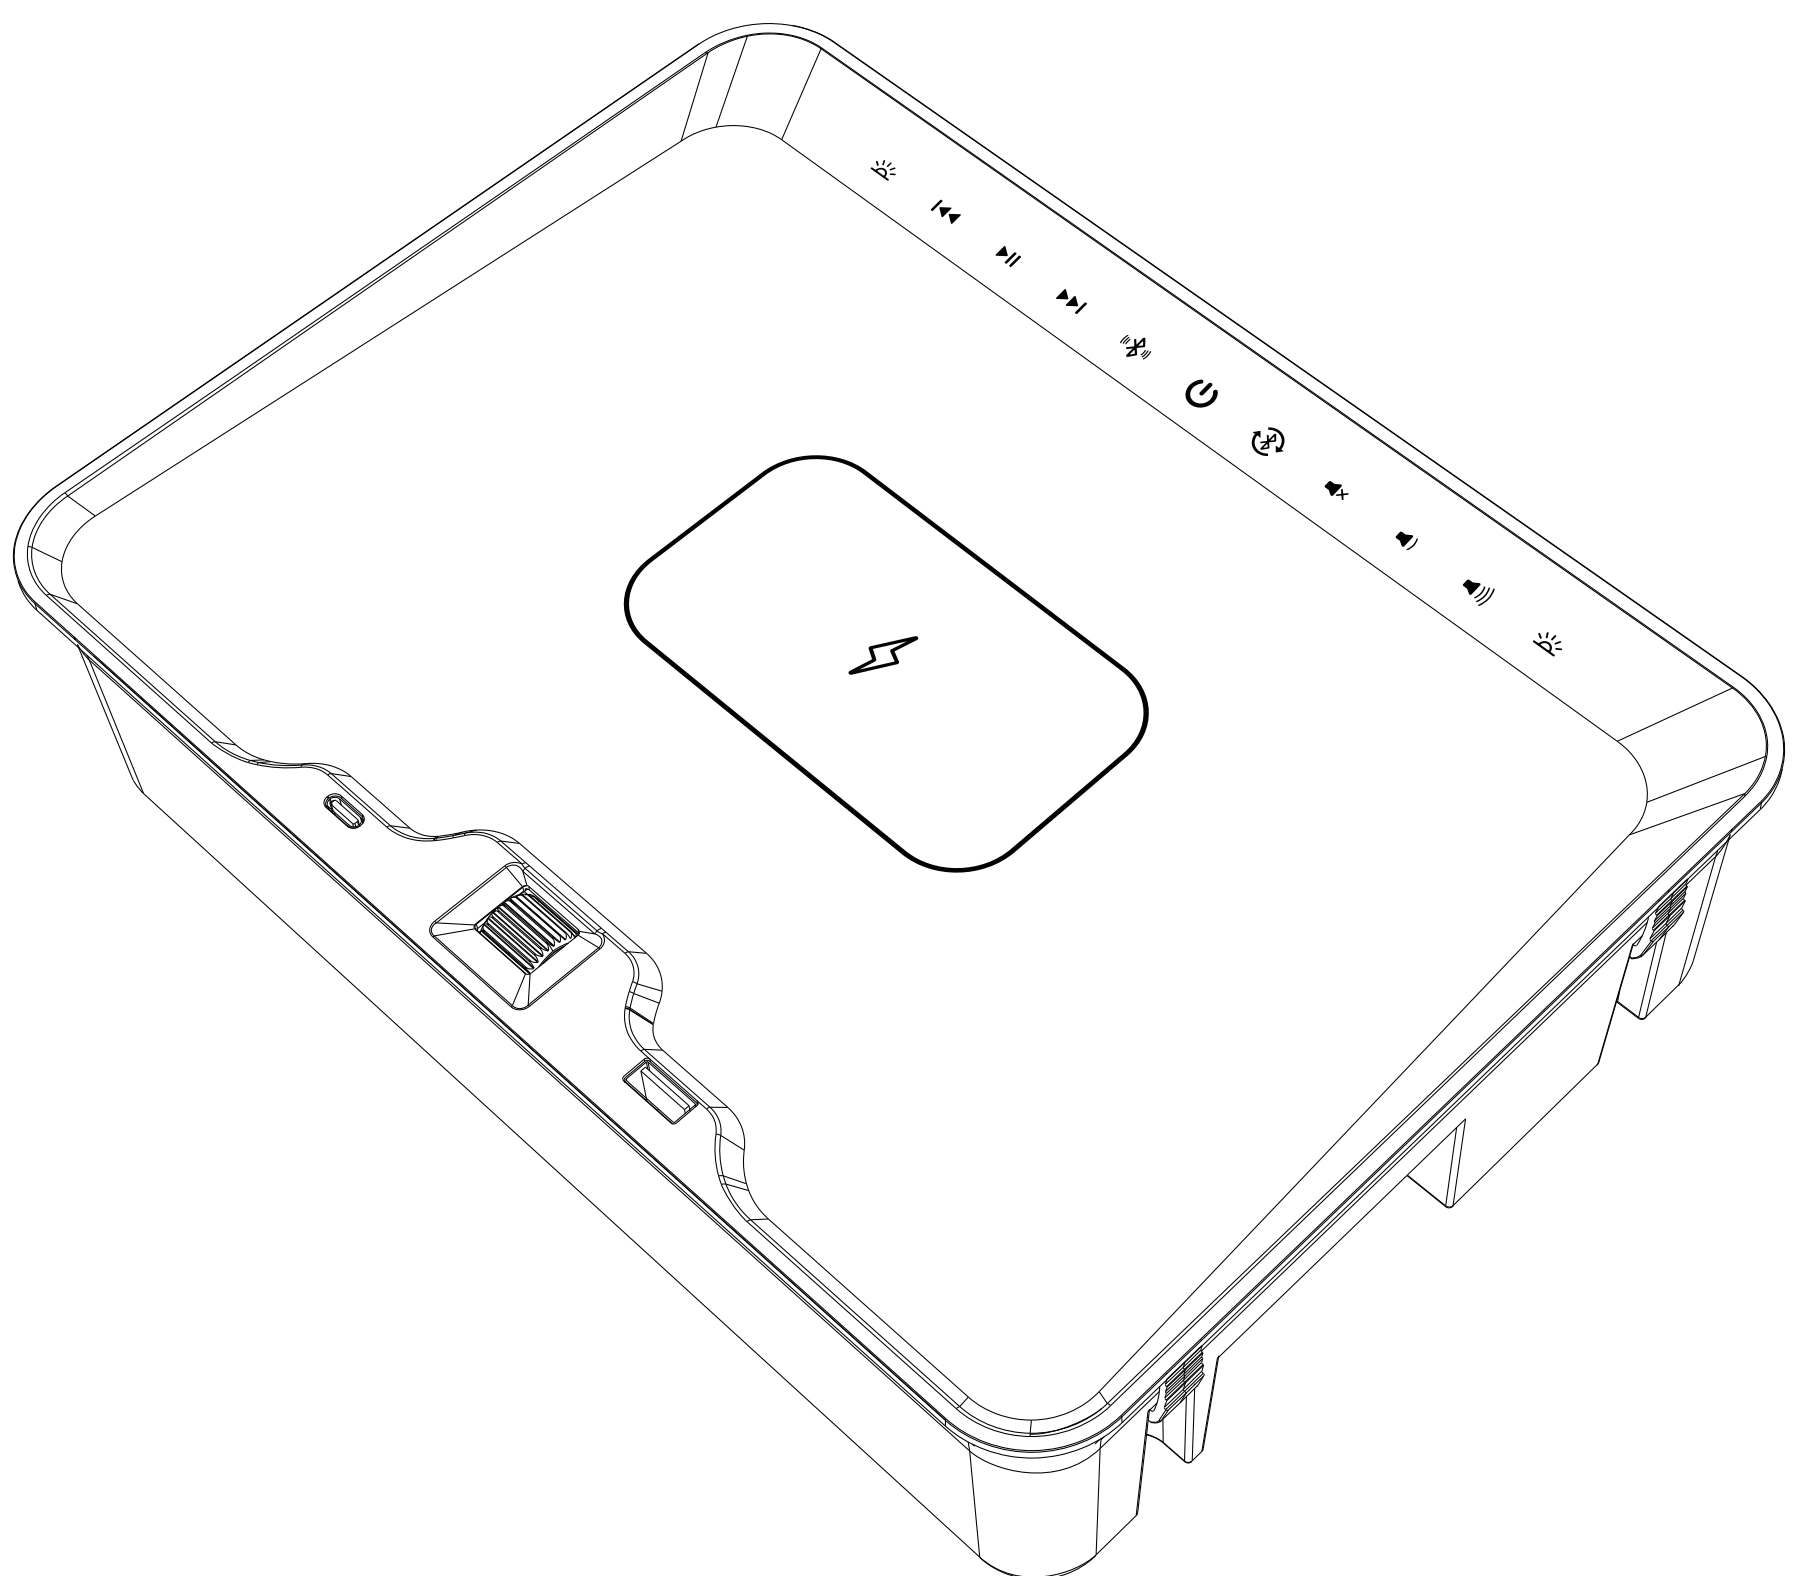

BUTTONS/FUNCTIONS (iTable)

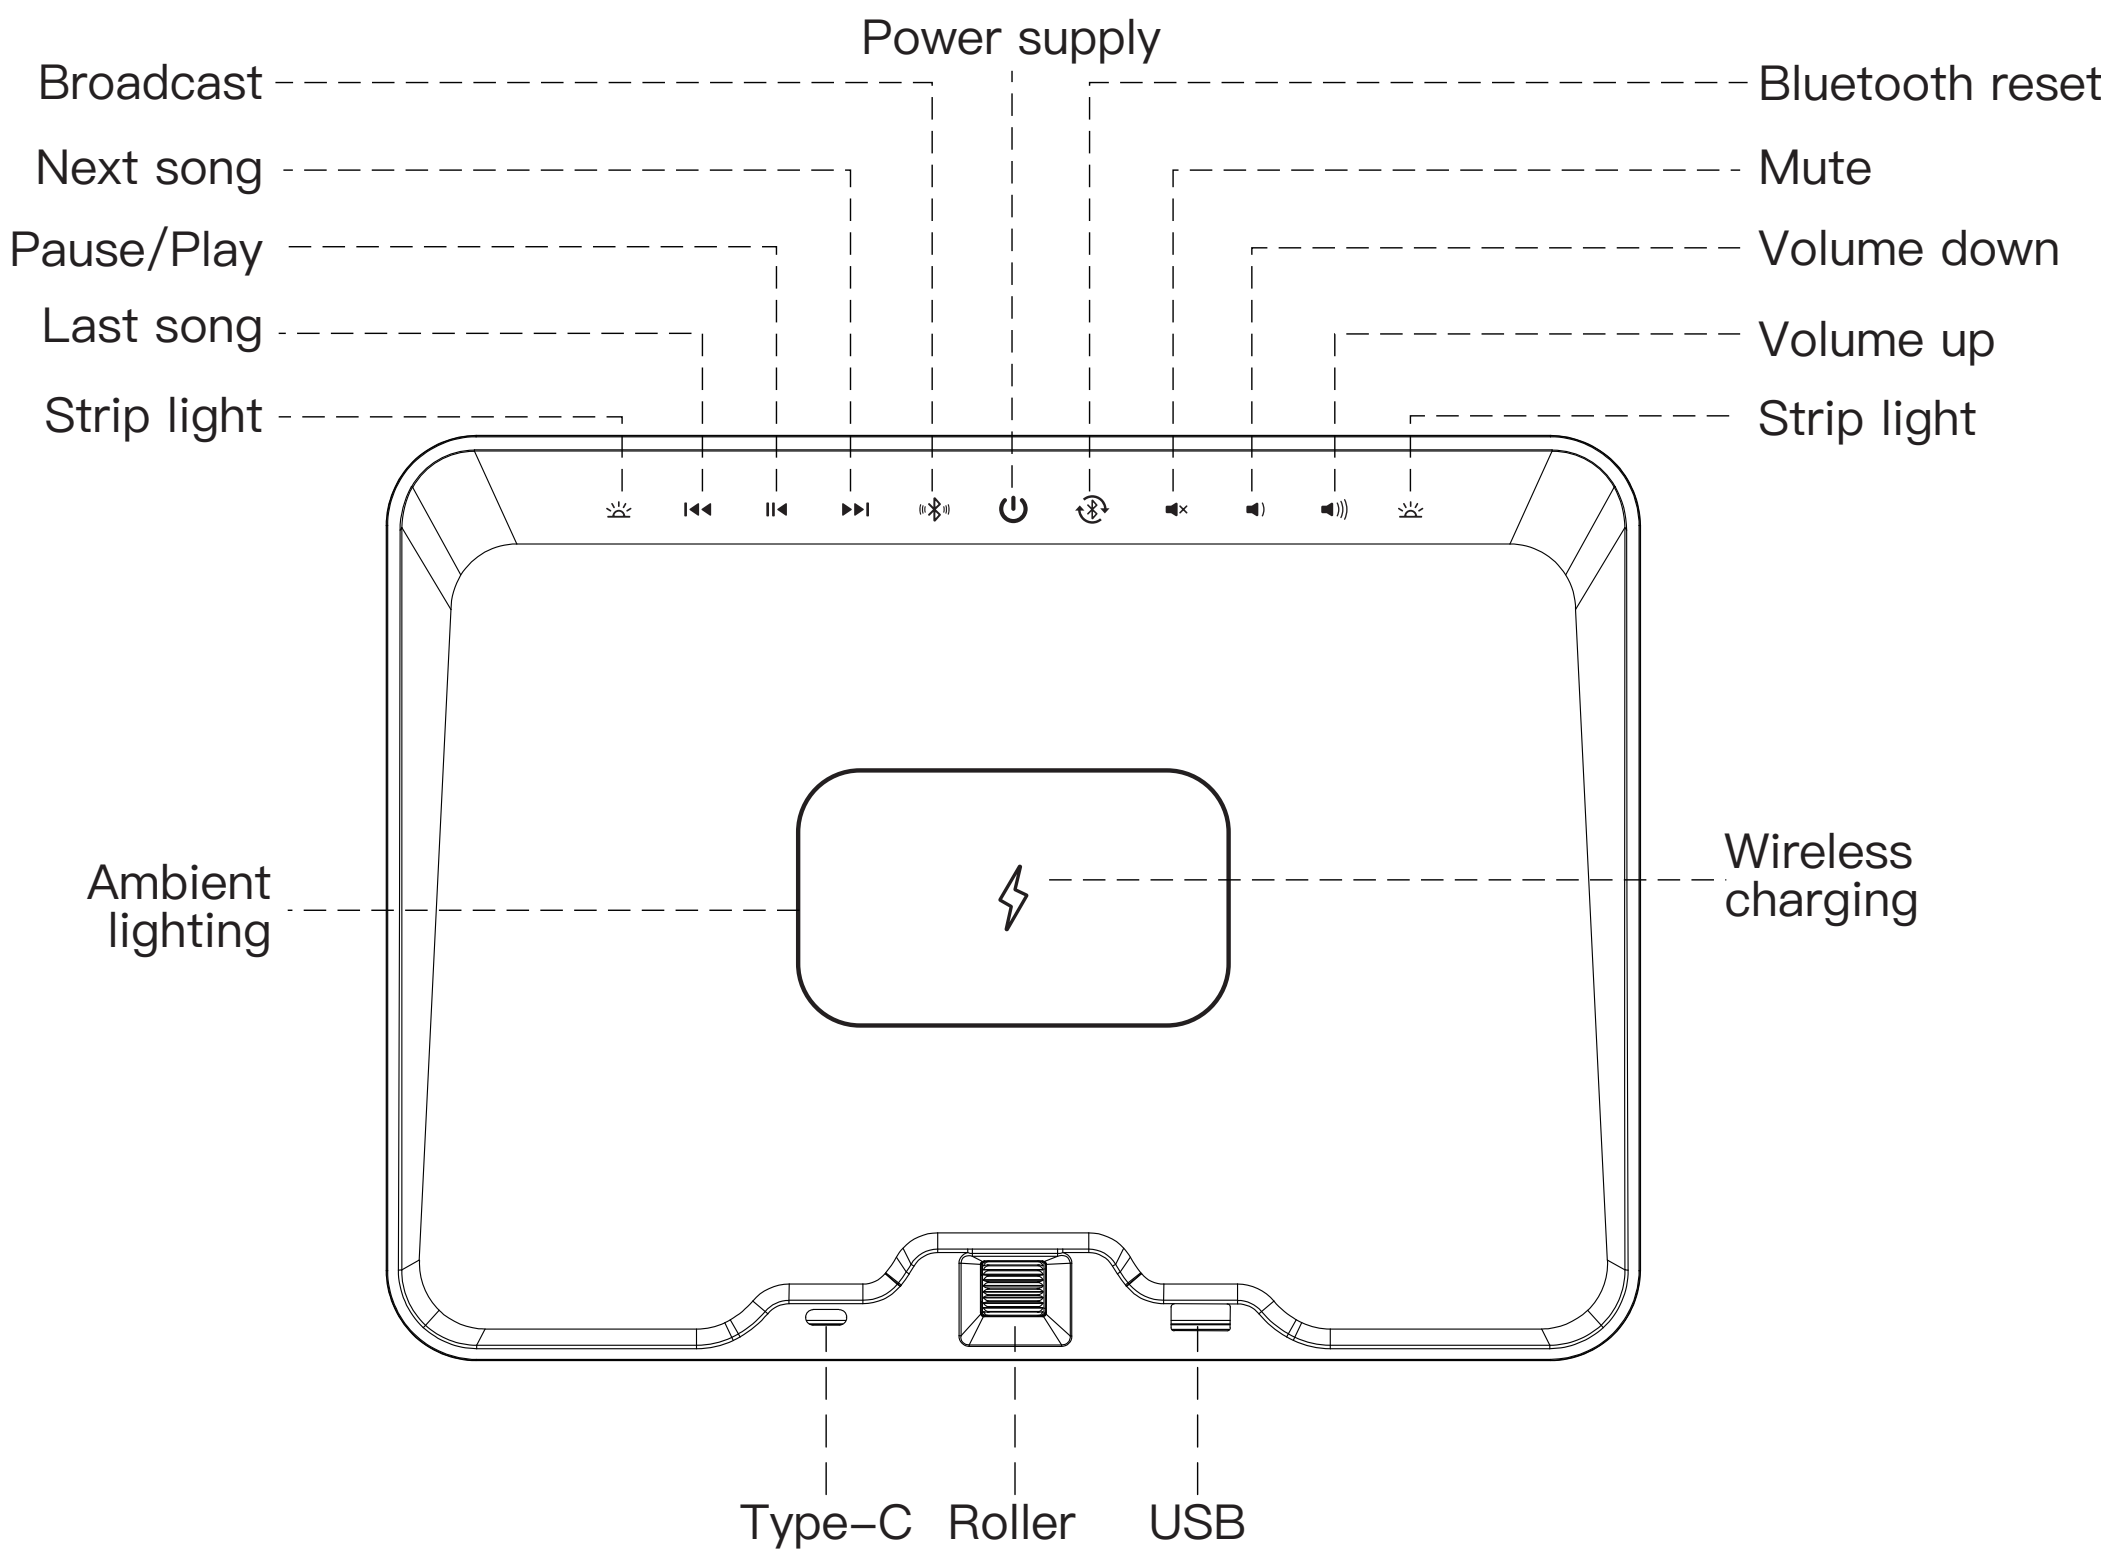

BUTTON/INSTRUCTIONS (iTable)

Button icon	Button name	Function description
	Strip light	Click to turn on the light strip, and click again to turn it off.
	Last song	Click to switch to the last song
	Next song	Click to switch to the next song
	Power supply	Long press to turn on, long press again to turn off.
	Broadcast	Long press to enter the Bluetooth broadcast state, and press again to exit.
	Bluetooth reset	Click to switch the atmosphere light mode, long press to disconnect the connected Bluetooth device
	Mute	Click to turn off/on the Bluetooth speaker volume

	Volume down	Click to reduce the volume of the Bluetooth speaker
	Volume up	Click to increase the volume of the Bluetooth speaker

OPERATION INSTRUCTIONS (iTable)

Power On/Off: After the product is powered on, long press the power button to turn it on/off.

Button background light color change: Click the power on/off button after startup to switch the color of the button background light.

Roller button: The roller button can be used to control the volume of the Bluetooth speaker. Click the roller button to control the opening/closing of the STA motor;

Bluetooth connection: After the product is powered on, the mobile phone turns on Bluetooth and searches for the Bluetooth name of the device to connect, please refer to the user manual interface in the screen Settings for the device’s Bluetooth name. Once connection is successful, the Bluetooth speaker can be used for external playback.

Bluetooth reset:

1. Long press the Bluetooth reset buton for 3s and the buzzer will make a “di” sound to disconnect the currently connected Bluetooth device.
2. Click the Bluetooth reset button to switch between 3 different ambient lighting modes.
Mode 1: When wireless charging is not in use, the decorative light ring does not respond. During the process of wireless charging, the light ring turns blue.
Mode 2: Running light mode.
Mode 3: The color of the light coil changes along with the backlight of the key.

Bluetooth Broadcast bottons: Long press the Bluetooth broadcast button for 3s to enter/exit the broadcast mode. In the broadcast mode, multiple devices can synchronously playing music. The backlight of the button changes to other colors when entering the broadcast mode, and returns to its original state when exiting the broadcast mode.

Bluetooth Broadcast function:

- (1) When product is connected to mobile phone via Bluetooth ,long press for 3s button to turn on Multi–device connection function then the product is as the main unit and wait for other slave units to connect .
- (2) If the product is not connected to the mobile phone via Bluetooth, long press for 3s button to turn on Multi–device connection function, then the product is as a slave device and search for and connect to main unit .
- (3) When the slave device is connected to the main unit, it will play music along with the main unit .

Attention:In the slave state, the Bluetooth of this device cannot be searched, and it can only be searched after turning off its Bluetooth broadcasting function.

Last song: Click the button to switch the last song.

Next song: Press the button to switch to the next song.

Pause/Play: Press the button to pause/continue playing music.

Mute button: Press the button to turn on/off the Bluetooth sound volume.

Volume up: Press the button to increase the volume of the Bluetooth speaker.

Volume down: Press the button to reduce the volume of the Bluetooth speaker.

Attention: Last/Next song, Pause/Play, Mute, Volume up/down buttons can be used only after connecting the Bluetooth of the mobile phone.

Light strip button: Press the button to turn on the light strip. By default, it emits white light. When audio input, the light strip will rhythmically move in sync with the music.

USB flash drive playback function: When the device is powered on, insert a USB flash drive with music into the USB port. After the device recognizes the USB flash drive, it will broadcast the prompt "USB play mode" to enter the USB flash drive playback mode, and the device will start playing the songs on the USB flash drive.

Charging functions: Wireless charging, USB charging, and Type-c charging functions can only be used after the device is turned on. The charging function will automatically turn off when the device is turned off.

Attention: If there is a foreign object between the mobile phone and the wireless charger, but the wireless charger recognizes the mobile phone and charges it, it will cause overheating.

TOUCH SCREEN OPERATION INSTRUCTIONS



Touch Screen:

1.The touch display screen can be operated only after the iTable panel is powered on.

2.Touch the screen to activate the display. The screen will automatically go into sleep mode after 30s without any operation.

L/R : The left and right position buttons have the same function.

Selection of control points:

1. Click the corresponding area of the sofa icon. After clicking, the corresponding area of the icon will turn bright orange.
2. Click on the text indicating the area to switch control of the area.

Open control section : Long press the button to open the control section motor to its maximum position. Release to stop.

Retract control section: Long press the button to retract the control section motor to its minimum position. Release to stop.

All close : Long press the button for a long time, and all the motor parts will retract to the minimum position. Release the button to stop.

Memory 1/2 “M1” /“M2”: Click the button, a pop-up window will appear asking if you want to remember the current position(Yes/No). You can choose to remember the position. When the button is pressed for a long time, all motors will stop running once they reach the remembered position. If the button is released during the motor operation, the motor will stop running. The operation will stop once it reaches the remembered position.

Vibration button:

1. Click the button to open the vibration/Switch the intensity of the vibration (1st weak — 2nd strong); When there is an audio source input, the vibration will follow the rhythm of the audio source. The vibrator won't work when there is no music playing.
2. Long press the button to turn off the vibration.

Heating function button:

1. Click the button to turn on the heating function/switch between heating levels (1st low – 2nd high). Without any operation, it will automatically turn off after 30 minutes.
2. Long press the button to turn off the heating.

Airbag massage button:

Click the button to open the airbag massage / switch between airbag massage modes (Mode 1 – Mode 2). Without any operation, it will automatically shut off after 30 min
Long press the button to turn off the airbag massage.


Storage button : Click the button to open/close the STA motor.

Cup Cold button : Click the button to turn on/off the cooling function of the cup holder. Without any operation, the cooling will automatically stop after 1 hour.

Light strip control button: Click to turn on/off the light strip. By default, it is set to always emit white light. When there is an audio source input, the light strip will rhythmically move in sync with the audio source. Long press the button to enter the light strip settings interface. It can select the color or adjust the brightness of the light strip. Click Save to return to the main interface.

OFF button : Click the button will simultaneously deactivate all the additional functions of the corresponding function position(heating – vibration massage – cooling)

OPERATION INSTRUCTIONS FOR THE HAND CONTROLLER

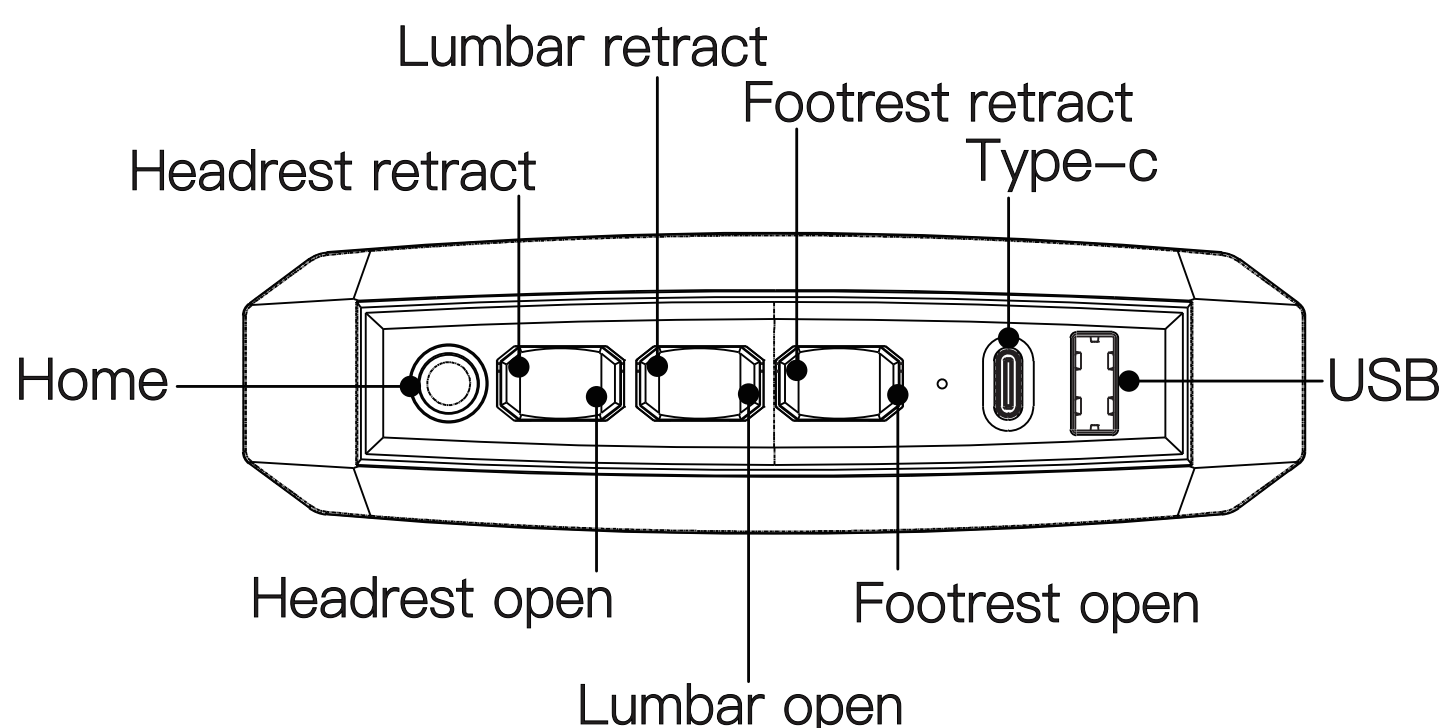

Pairing: After the hand controller is powered on, the touch screen will open the settings. Select “Controller pairing”— Select “Pair with the left/right sofa” Then simultaneously press the “Footrest open” and “Home” buttons for 3 seconds, and the hand controller indicator light will flash. Click on the “Next” button on the touch screen pop-up window to enter the pairing state. After the pairing is successful, the hand controller will make “di di” and the touch screen will display “Pairing successful”.

Child Lock: Press the “Headrest retract” and “Home” buttons simultaneously for 3 seconds to enter/exit the child lock state.

When in the child lock state, any button press on the hand controller will cause the indicator light to flash twice as a prompt, and a pop-up window will appear on the touch screen. The iTable buzzer will make a “di” sound.

Footrest open : long press the button for footrest motor open to the maximum position, release to stop.

Footrest retract : Long press the button for footrest motor retract to the minimum position, then release to stop.

Lumbar open: Long press the button for lumbar motor open to the maximum position, then release to stop.

Lumbar retract: Long press the button for lumbar motor retract to the minimum position, then release to stop.

Headrest open : Long press the button for headrest motor open to the maximum position, release to stop.

Headrest retract : Long press the button for headrest motor retract to the minimum position, release to stop.

Home button: Long press the button to retract all motors back to the minimum position, release to stop.

PRODUCT PARAMETERS

iTable size	286*211*70.3mm
Input	DC29V3A *2
Speaker power	10W*2
Bluetooth version	BT5.2+BLE 5.0
USB and Type-C output	Supports 5V/2A, 9V/2A, 12V/1.5A, with a maximum of 18W.When USB and Type-C are charged simultaneously, each outputs 5V/1A
Wireless charging output	MAX 15W
Screen size	10.1 Inch

COMMON TROUBLESHOOTING

Issue/Malfunction	Possible Causes and Solutions
No power / No response / The light is not on	1.Check if the 29V power indicator light is functioning properly. If it is not on, check for faults in the power socket.
	2. Check if the 29V power supply is faulty and if the power cord is disconnected.
	3. Check if the 01 needle and thread are loose, and if there are any other faulty accessories. Also, check if all the wires are loose or have poor contact.
No sound / Bluetooth cannot be connected	1.No sound: Playback has been paused, speaker extension cable disconnected. Check all connections or reconnect.
	2. Bluetooth connection failed: Already connected to another Bluetooth device. Please press and hold the Bluetooth button for a long time to disconnect the current connection, and then try again.
	3. The mobile phone must be within the effective range. The distance between the mobile phone and this product should not exceed 8 meters. Do not attempt to connect through obstacles.
	4. Due to the Bluetooth auto-connection feature, check if your phone has been paired with two Bluetooth devices. Unpair one of them and then click the play button on your phone.
Wireless charging not working	1.Make sure your phone supports wireless charging.
	2.Make sure there are no metal objects on the back of your phone.
	3.Move the mobile phone to align with the wireless charging position.
	4. The wireless charger has an overheat protection function. If the internal temperature exceeds 65°C, it will pause charging and resume charging when the temperature drops.

The display is not lit up / The touch screen has no response	1. The display screen is not lit: Check if all the wires are loose or have poor contact. Observe if the display screen has any cracks, scratches or other physical damage. If so, it usually needs to be replaced with a new one.
	2.No response when touched: It might be due to loose internal connections or no damage to the screen surface.
The motor doesn't move	1.Problems such as aging and burning out may occur with the motor. Would replacing the motor solve the issue?
	2. Check whether the buttons of the hand controller are damaged, whether the connecting wires are loose or have poor contact, and whether the problem is solved by replacing the hand controller.
Airbag massage not working	1.The issue of the airbag massage not inflating could be due to loose connection wires. The user might have accidentally pressed the mode switch button, resulting in the current mode lacking airbag functionality. Check if the airbag button has been pressed correctly.
	2. If the air pump is running but the massage function is not working, check whether the transparent plastic air tube between the air pump and the airbag has come off, become loose, kinked or flattened.
	3. If not, replace the airbag controller.
The light strip not working.	1.If the light strip doesn't light up, check if the connection wire is loose and if the button is pressed correctly.
	2. If the light strip doesn't light up, check whether the solder joints, LEDs, resistors and copper foil of the light strip are broken or burned out.
	3.Replace the light strips.
	4. Replace the controller if the LED strip button malfunctions.

FCC COMPLIANCE STATEMENT:
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.
Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
FCC Radiation Exposure Statement
This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provided with antenna installation instructions and transmitter operating conditions for satisfying RF exposure