 


DIGITAL CAMERA

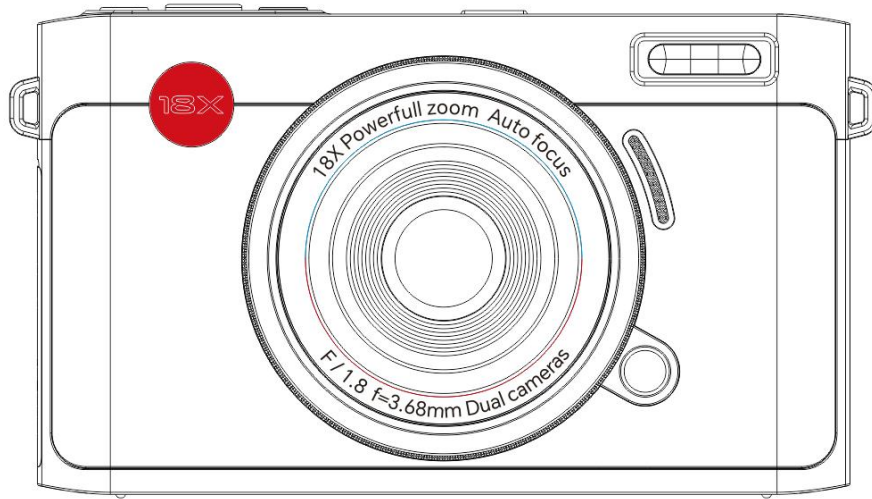

Model:DX8

preface

Thank you very much for purchasing our product. This manual will detail how to operate, product parameters and precautions. Please read and keep it carefully before use. We hope that this product can meet your needs and serve you for a long time! However, because the specifications may be changed due to upgrades, updates, please take the physical matter without notice. The manufacturer reserves the right to change the technology directly without prior notice.

Copyright infringement / privacy announcements

Please note that this product is for personal use only and its use method shall not violate domestic or international copyright / privacy laws. In other words, the recorded images are for personal use only and shall not be released at will. In addition, in some cases, the use of the product to record performances, exhibitions or commercial activities may infringe the copyright or legal rights of others.

Do not touch the lens with your fingers, because the oil on the fingers may stay on the lens, resulting in unclear camera or photography, so please clean the lens regularly.

matters need attention

 
1. High-speed TF memory cards above Class10 must be used, and the new card must be formatted on the machine before use;
2. Make sure there is enough power before use
3. Due to the development of technology, we may make some changes or upgrades to the software or hardware, resulting in the inconsistency with the specification, we will not issue a

change notice, please take the physical object, please forgive me!

4. Please read the manual carefully and keep it for future use

operation manual

Know your camera

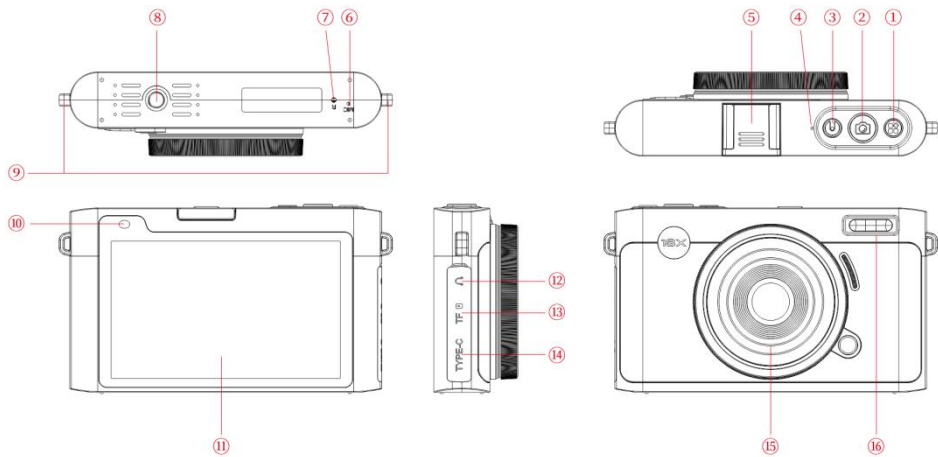

order number	name	function
1	menu key	Click and press to enter the Settings interface, and long press to open and close wifi
2	Take a photo button	In photo mode, press the photo button, and stop recording
3	Power switch key	Digital Zoom Scale-Up (1-18X)
4	pilot lamp	Red light: red light is on when charging, fully off; blue light, on, flashing during video
5	Cold boot seat	Standard cold boot accessory seat
6	microphone	Microphone position, used for recording the sound
7	Reset the hole	For the machine reset and restart

8	Tripod hole	Standard 1 / 4 " tripod nut for mounting a tripod
9	Hang rope hole	It is used to install the hanging rope
10	Deputy lens	5MP secondary lens
11	display screen	4-inch 800 * 480 IPS TFT display, with touch function
12	Headphone hole	Used to connect headphones
13	Memory card slot	Support for the 8-128 GTF card
14	The tp-c hole	For charging and data transmission
15	The main lens	8MP auto focus main lens
16	flash lamp	For shooting when the light filling: automatic, forced, off
17	bellmouth orifice	Speaker voice device
17	flash lamp	It is used to supplement light

Use your camera

1. Camera charging

Insert the Tp-c USB cable into the camera, and the charger is connected to the other end to charge the camera, and the red light is on during the charging. (Charge the machine with 5V1A-2A charger)

2. Switch camera

- a) Touch the camera power button, the camera boot into the working state.
- b) If no operation occurs during the set time, the camera will automatically to save power.
- c) In the boot state, long press the power button, and the camera is shut down. If the machine is down, long press the power button 6S to turn off the machine, and the reboot can work again

 
Micro SD Card formatting

Start the camera, boot the default photo mode, press the key M to open the Settings menu, press the key to select the format, press the middle confirmation key, to format the card.

Please note: 1. Formatting the microSD card removes all the pictures and files in the card. If you do not want to delete these pictures and files, please copy them to your computer, or use a new card.

2. *This machine supports up to 128GB TF card, please format the TF card on the machine for the first time.*


3. Key button and the corresponding function description

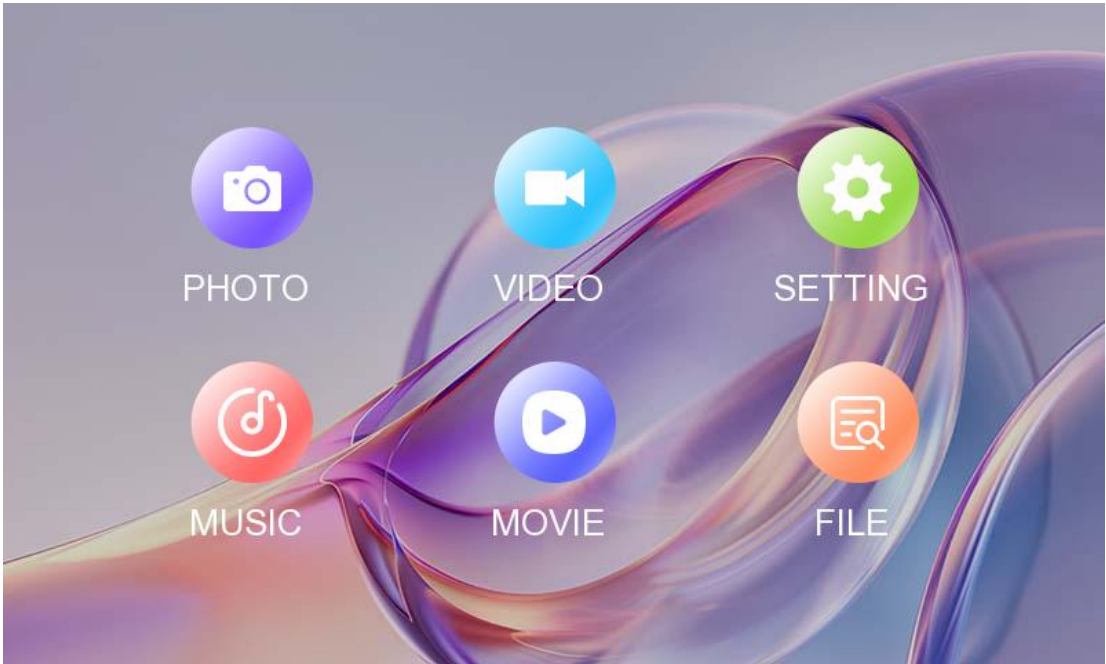

After the camera is turned on, you can click the home button of the screen to enter the home page, where you can choose the photo mode, video mode, Settings, music playback, video playback, and view the photos or video

Photo mode: 1. In the shooting mode, you can click on the photo option below to select:

 Ordinary photo:

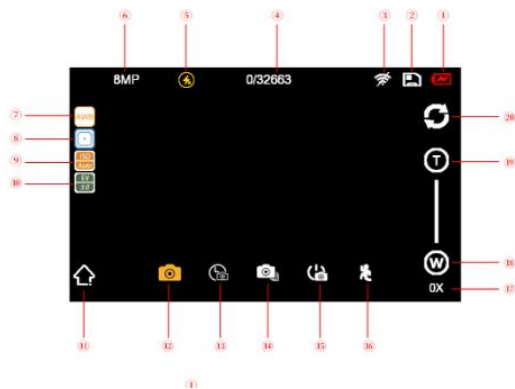

order number	name	function declaration
1	Battery symbol	Charging, power display
2	TF block	Display the TF card status
3	Wifi icon	Show wifi status (off, on, connect) (Note: This feature is only available with wifi configuration machine)
4	Number of shots / remaining shots	Number of shots / remaining sheets is shown
5	flash lamp	Touch to flash off, force flash, automatic flash, or select in the menu settings
6	Photo resolution	The photo resolution (8M, 13M, 36M, 48M, 64M, 72M) can be selected through the menu settings
7	white balance	By menu selection (automatic, sunny, cloudy, incandescent, fluorescent)
8	Optometry mode	Select the average metering and the central metering through the menu setting
9	speed	To set ISO Auto, ISO100, ISO200, ISO400, ISO800, ISO1600, ISO3200, ISO6400 through the menu
10	exposure compensation	EV + / -3, which can be set in the menu
11	principal sheet	Home page button, click to enter the home page selection
12	Photo mode	The photo mode is ordinary photography

13	Photo mode	The photography mode is for automatic photography
14	Photo mode	The photography mode is for continuous photography
15	Photo mode	The photography mode is regular photography
16	Photo mode	The photo-taking mode is for special effects
17	Digital zoom multiple	Digital zoom multiple
18	Digital zoom W	Digital Zoom reduction key (18X-0)
19	Digital zoom T	Digital Zoom Scale Key (0-18X)
20	Lens switch key	Switch main and secondary lenses

Ordinary photo: gently press the shutter button, the opportunity to automatically focus, and then press to the shutter, the camera to complete the photo

Automatic photography: Press the shutter button and the machine takes a photo every 5 seconds until pressing the shutter button again to stop photographing.

Continuous photography: gently press the shutter button, the machine takes 3,5 and 10 photos continuously. In continuous shooting mode, the camera can only take 13MP resolution photos.

Regular photography: press the shutter button, the machine takes a photo in 2 seconds, 5 seconds, 10 seconds

 
Special effect photo: you can choose the corresponding filter to take special effects. In this mode, click the upper left special effect icon to pop up the special effects selection page to select the corresponding effect to take photos.

In the photo mode, you can choose the lens switch button in the upper right corner for the main and secondary lens switch

You can also do 1-18X digital zoom through the W and T keys, but also set the ISO, white balance, metering mode, exposure compensation, photo quality, etc. In the photo mode (continuous photo does not support flash) can click the flash icon to close the flash mode, forced flash, automatic flash set.

Note: When pressing the camera button to take a photo, make sure the hand is stable to keep the photo clear. You can also put the camera on a tripod.

Video mode:

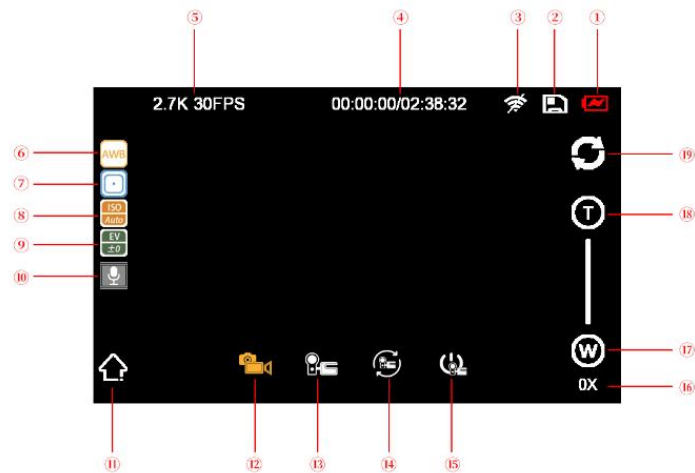

order number	name	function declaration
1	Battery status	Charging and electric charge status
2	TF block	TF card status
3	Wifi symbol	Wifi status (off, on, connect) (Note: This feature is only for the wifi configuration machine)
4	Video time	Video recording time / remaining time left
5	resolution ratio	Video resolution
6	white balance	Represents white balance, automatic, sunny, cloudy, incandescent lamp, fluorescence
7	Optometry mode	Average metering and center metering

8	speed	ISO Auto, ISO100, ISO200, ISO400, ISO800, ISO1600, ISO3200, ISO6400 through the menu
9	exposure compensation	EV + / -3, which can be set in the menu
10	Recording switch	Click the switch recording function, can also be set in the machine menu
11	principal sheet	Return home page
12	Video mode	Ordinary video
13	Video mode	Slow photography
14	Video mode	Circulating video
15	Video mode	Short-time recording
16	Digital zoom	Digital zoom multiple
17	Digital zoom	Digital zoom reduction (18X-0)
18	Digital zoom	Digital Zoom Scale-Up (0-18X)
19	Lens switch key	Main and secondary camera switch button

Ordinary video: gently press the shutter, the camera starts the video, press the shutter again to stop recording, the maximum video time depends on the set resolution, battery level, etc. (the maximum per file is 4GB)

Slow photography: Press the shutter button, the camera starts shooting 1080P / 2X video, and press the shutter button again to end the slow photography

 
Cycle video: gently press the camera shutter, the camera starts to shoot 1 minute, 3 minute, 5 minutes each video, gently press the shutter again to end the shooting (through the menu setting)

Compact video: gently press the shutter, the camera shoots the video at a frame rate of 1,2, and 5 frames per second (set through the menu setting).


In the ordinary video and loop video mode, you can click the microphone icon of the interface to turn off and open the recording. You can also turn on and off the recording in the menu setting.

Music play:

To select music to enter the playlist, select the played file, enter the playback page, click the return button to play in the background, click the close button to exit the playback, the last song, the next song, volume control, music can be played through the built-in speaker, or external stereo headphones

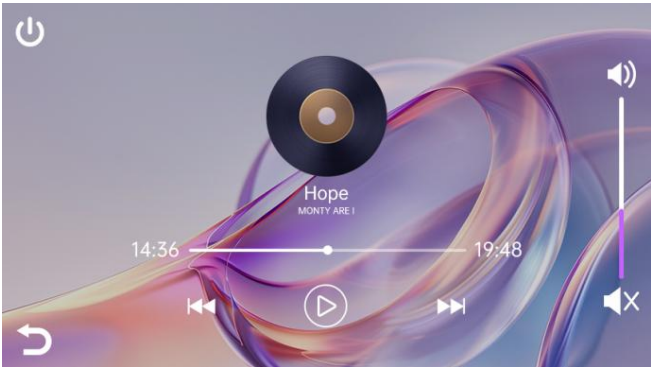

Movie video playback:

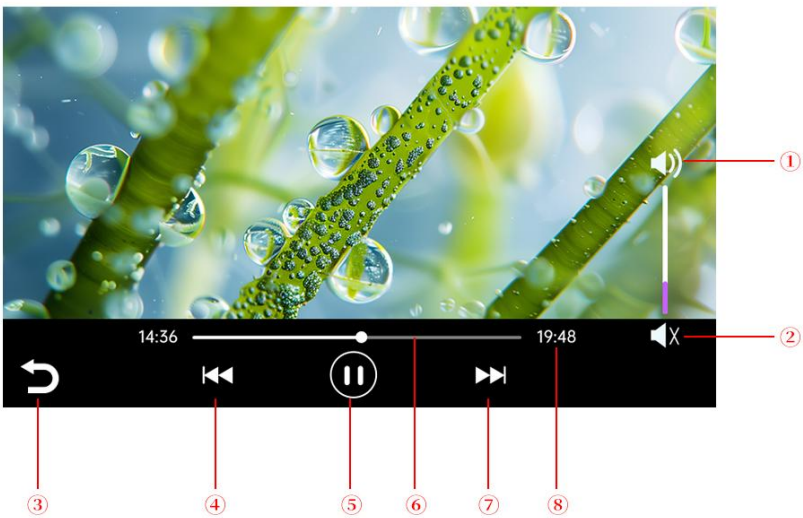 


order number	name	function declaration
1	volume +	Click to increase volume
2	volume-	Click to reduce volume

3	return key	Exit the play and return to the list
4	The last song	The last key
5	pause key	Pause, and start playing
6	progress bar	Displays the playback progress
7	The next song	The next key
8	time	The front is the broadcast time, and the back is the total length of the film

Select the movie to play on the home page, you will enter the movie playlist page, and then click the movie to play, return to exit play, during the last song, the next song, pause, start, volume increase, volume reduction, and headphones can be used outside.

Tips: To use music and movies to play, you need to use the TF card formatted on the machine to copy the file, copy the music file to the music folder of the TF card, and make the movie copy to the movie folder to play normally.

 Shooting file view: shoot the file at the home page point, enter the preview list of the shooting file, click the file to be viewed, you can look back, and the photo can be enlarged, reduced, moved and other operations when looking back. In the review mode, you can also lock or delete the shot fil

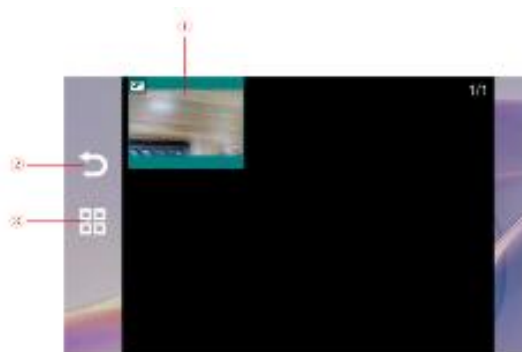

order number	name	function declaration
1	listed files	Shooting thumbnails of the file, click to play
2	return key	Click to return to the previous level

3	function key	Click to delete a single, delete all, add the current, lock all; unlock the current, unlock all
---	--------------	---

 
 
Seven: wifi connection

1. Long press the top menu button to open the wifi connection page or enter the wifi option from the touch to open the wifi
2. Scan the pop-up QR code, download the "Only" One snap app, or directly scan



the QR code below to download the app:

3. Open the mobile phone Settings, find the wifi name: DX8- * * * * * network in the wireless LAN, select the connection, and enter the password: 12345678
4. Only one snap app to open the phone,

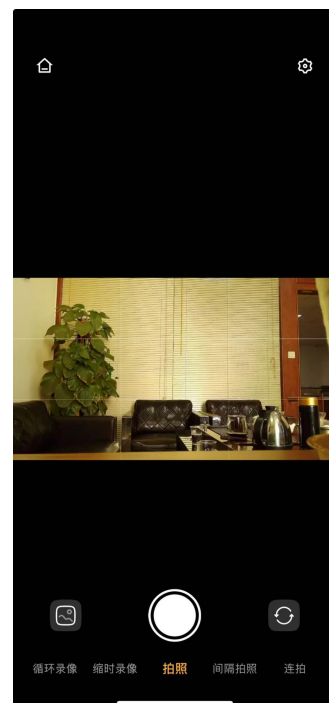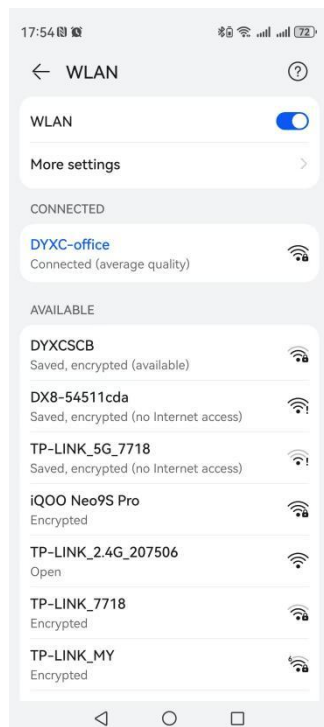

After successful connection, indicate that wifi is connected. Please operate on the mobile phone with the camera for photo, video, view photos and video; setting, etc.

Ⅷ. Computer connection instructions

After connecting the computer and the camera with the USB cable, the option of "Charging mode" / "Mass storage mode / PC camera" will appear on the screen, and click the selection directly.

1. Charging mode, charging the camera, which can be used while charging
2. Large storage mode: After selecting the large storage mode, I can find the corresponding disk in my computer, open the disk, and you can view the photos and videos taken.
3. PC camera: Select this function, so that you can use the camera as a webcam

IX. Technical parameters

master control	AW535
display screen	4-inch HD display with 800 * 480 IPS
Touch function	support
Main camera sensor	1 / 2.9'coms IMX179,8.0MP pixel with a maximum interpolation of 72MP
Secondary camera sensor	1 / 3.2 ' coms OV5695 5.0MP pixel with a maximum interpolation of 72MP
Wifi	2.4G
suona	8R1.5W, Support external headset stereo sound

	playback
Music play	Support MP3, WAV, APE format music playback
Video play	Support for MP4 format video movie playback
focus range	0.5 m-unlimited farsightedness
zooming	18 Times
Photo resolution	8MP/13MP /36MP /48MP/64MP /72MP
Video size	5K30 frames 4K30 frames / 2.7K30 frames / 1080P60 frames / 1080P30 frames
file format	Photo JPG, Video MOV
Time shooting	Support (2S \ 5S \ 10S)
Even clap	Support (take 3 photos with one shutter shot)
Scene mode	support
flash lamp	support

Anti-shake	support
focusing	auto-focusing
filter	Regular, red, blue, green, black and white, infrared, binary, LOMO, Japanese wind, etc
auto shut off	support
Multinational language	support
sound	Built-in microphone
memory card	TF card, with a maximum support of 128G
Computer connection	USB2.0-TP-c
Built-in polymer battery	3.7V 1200mah
charge	5V1.5A TP-c

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.