

PORTABLE AM/FM RADIO PLAYER



Model NO: RX-125BT-S

INSTRUCTION MANUAL

Important safety instructions – please read carefully and keep for future reference

WARNING

TO PREVENT FIRE OR SHOCK HAZARD DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.



WARNING: SHOCK HAZARD- DO NOT OPEN

AVIS: RISQUE DE CHOC ELECTRIQUE -NE PAS



LIGHTNING FLASH WITH ARROWHEAD SYMBOL -

within an equilateral triangle, is intended to alert the user to the presence of uninsulated dangerous voltage within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



EXCLAMATION POINT -within an equilateral triangle is used to indicate that a specific component shall be replaced only by the component specified in that documentation for safety reason.

DRIPPING WARNING

product shall not be exposed to dripping or splashing and that no objects filled with liquids, shall be placed on the product.

VENTILATION WARNING

The normal ventilation of the product shall not be impeded for intended use.



SAFE SOUND

- Notes:
1. Reduce volume before plugging the earphones/headphone.
 2. speaker of the unit is automatically disconnected while earphone /headphones are connected.
 3. Adjust the volume to a comfortable listening volume level.

IMPORTANT! It is recommended not to leave a mobile phone near the unit in order to avoid electromagnetic interference in the speakers.

CAUTION

Dangerous tension inside the product ! DO not open. Risk of electric shock ! NO Parts can be repaired by the end-user - only qualified personnel can repair and maintain this product.

If the electric cord is damaged, it must be replaced by the manufacturer or qualified after-sales personnel in order to avoid any danger.

The product must be installed in accordance with local laws.

Damaged batteries must be properly disposed. In order to protect the environment, please dispose the batteries properly, in accordance with local laws (information is available at your reseller).

To clean the set use a soft dry cloth. DO not use any cleaning agents containing alcohol, ammonia, benzene or abrasive as this may harm the housing.



PREPARATION FOR USE ---POWER SUPPLY

using DC Electric supply

please unplug the product in case of prolonged non-use.

If the supply cable is damaged, it must be replaced by the manufacturer or qualified after-sales personnel to avoid any danger.

This product must be connected to an electrical supply DC 5v-1A CELLPHONE RECHARGING ADAPTOR DIRECTLY

REMARK: PLS Use the correct CE Approval cellphone adaptor to recharge the unit, the original package is not including the Ac adaptor, only include 80cm length USB recharging cable. DO not use the product with a battery different from the one provided.

CAUTION: Explosion risk if the battery is not replaced correctly. DO not attempt to replace the battery with a different battery version. Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine or fire or any other heat sources.


using DC Power inserting Batteries (not included)

1. open the battery compartment. And insert as indicated in the compartment four batteries, type LR14, UM2 or size batteries (not included).
2. Insert batteries into the battery compartment, making sure that the batteries are installed in the designated numerical order and that the proper polarities (+ and -) are maintained, to prevent possible damage to the unit: (preferably Alkaline) with the correct polarity as indicated by the + and - symbols inside the compartment

using DC Power -DC Jack

1. connect the DC 3.5mm cable (not including) to the DC Power Jack and 5v DC adaptor (not including). the power supply is now connected and ready for use.
2. To switch off completely, unplug the Ac adaptor from the wall outlet.
3. unplug the Ac adaptor from the wall outlet to protect your set during heavy thunderstorms.

FM/AM RADIO WITH USB/SD PLAYER with Bluetooth function

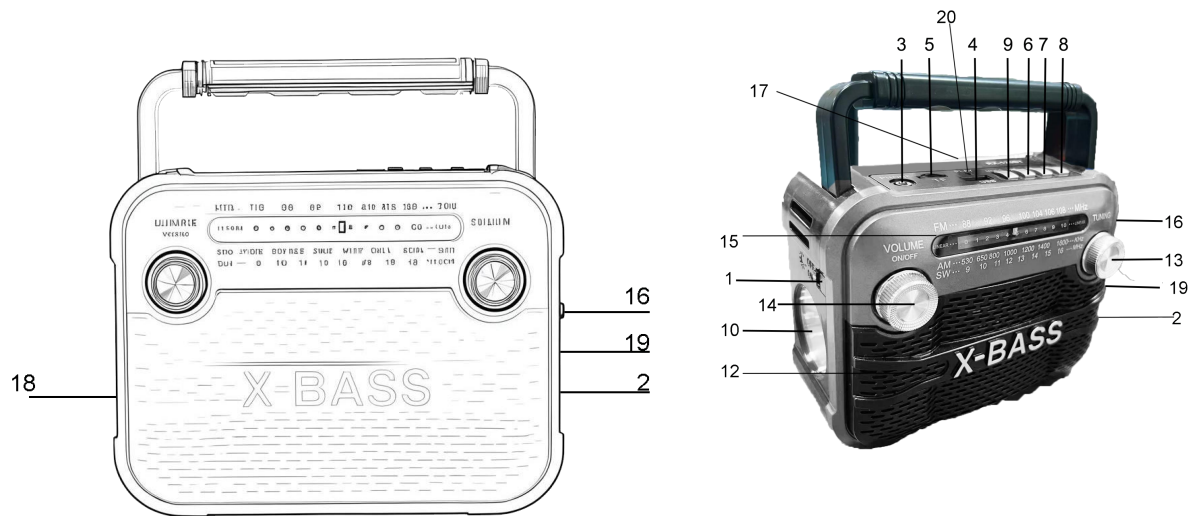

- | | |
|------------------------|------------------------------|
| 1 LAMP OR TORCH SWITCH | 2 MICRO-USB POWER JACK-5V IN |
| 3 PHONE JACK | 4 USB JACK |
| 5 TF JACK | 6 PREV |
| 7 PLAY/PAUSE | 8 NEXT |
| 9 MODE | 10 LED-TORCH |
| | 12 SPEAKER |
| | 14 POWER ON/OFF AND VOLUME |
| | 16 BAND SWITCH |
| | 18 BATTERY DOOR |
| | 20 PLAY LAMP |

RADIO OPERATION

LISTENING TO THE RADIO

1. Turn the Function switch(16)to RADIO position.
2. When connect the DC power inside the DC socket(14),The battery is being charged and the charge LED is on,machine will be worked by DC default.When pull out the DC power,the machine will be worked by battery default.
3. Turn the volume knob(14)adjust it to the appropriate volume.
4. Turn the band switch(16)to FM,turn the tuner(13)and watch the tuning frequency indicating window(7) and indicator select the program which you want to receive.
5. When you receive FM and SW station,please pull out the telescopic antenna(17) to get the best reception by changing it's length and angle.
6. Receiving AM by using the internal magnetic antenna,and you can get the best reception by rotating the direction of the radio.
7. In order not to affect others,please insert the earphones in the earphones in the Headphones jack(3),you can listen to the by earphones.when you would not like to use,please set the switch to OFF position.

MEDIA PLAYER

PLAYING USB Player

- 1.Turn the Function switch(16)to MP3 position And adjust volume knob(12) to the appropriate volume.
The unit will be working in BT/USB/TF playback status
- 2.inserting TF card, USB reader(Maximum support 16G).
- 3.No need to shift among USB/TF card,machine automatically read the first input media device .If firs input TF card,you need to take out TF card, then machine can read MP3music file from U Disc

**Warning**

To assure continued compliance, any changes or modifications not expressly approved by the party. Responsible for compliance could void the user ' s authority to operate this equipment.

FCC Statement

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in the portable exposure condition without restriction.