

VEVOR

Affordable. Reliable. Home Improvement.

SNOW MACHINE

 
MODEL:LM-LED-1500

VEVOR

Affordable. Reliable. Home Improvement.

SNOW MACHINE

MODEL:LM-LED-1500

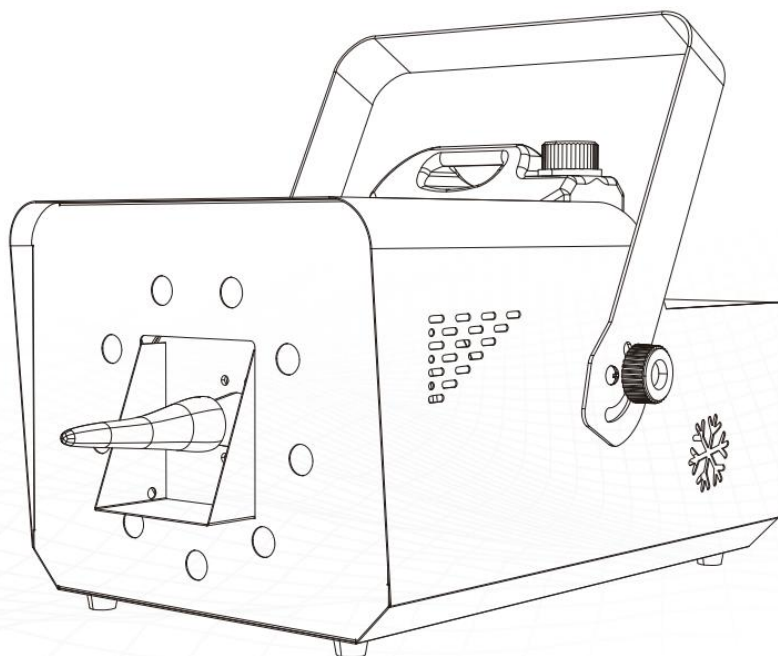

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

	Warning-To reduce the risk of injury, user must read instructions manual carefully.
	This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:(1)This device may not cause harmful interference, and (2)this device must accept any interference received, including interference that may cause undesired operation.

WARNING

Warnings must be followed carefully to avoid body injury, improper use may result in electric shock , fire, personal injury and other damage:

- 1) Keep it unplugged when moving the machine.
- 2) Keep unplugging when installing accessories.
- 3) Place on a flat and stable platform and operate under ventilated conditions.
- 4) Do not use this machine in a hazardous location.
- 5) Do not use when the machine is not working properly.
- 6) Do not disassemble and repair this machine.
- 7) Do not use an unsuitable AC Outlet.
- 8) Do not use the power supply that does not meet the rated voltage. The power supply that does not meet the specified voltage may cause fire or electric shock.
- 9) If the machine is not in use for a long time, please unplug the power cord from the socket.
- 10) Do not use the machine during thunderstorms or lightning to avoid damage to the machine.
- 11) Place the machine smoothly on the flame-retardant table and keep away from flammable and explosive items.
- 12) Please stop using it if the machine smokes, emits a peculiar smell , or becomes noisy and in other abnormal conditions.
- 13) This appliance can be used by children aged 12 and above, persons with impaired physical, sensory or mental capabilities, or those lacking

relevant experience and knowledge, provided that they have received guidance on safe use and understand the potential risks. Children shall not use the appliance for play. Maintenance operations such as cleaning, oil replacement, or component adjustment must be carried out by children under adult supervision.

14) In order to avoid a hazard due to inadvertent resetting of the thermal cutout, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

15) Type X attachment: If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.

16) Remember: Do not remove the cloth cover on the snow machine.

17) When shutting down, first reduce the amount of snowflakes, wait for the blower to blow for about 30 seconds, and then turn off the power(protect the blower, it will not burn out).

18) Don't let the machine work when there is no one, and don't move by children.

19) It is recommended to use high-quality snow oil, otherwise it will affect the effect.

20) Do not spray on people's faces.

21) When the snow oil is used up, don't let the machine work to avoid the pump heating and damaging the components.

22) There will be a certain noise when the product is working, which is a normal phenomenon.

23) If the foam gets into the eyes or mouth, please rinse with water in time. If you feel unwell, please consult a doctor.

24) The strip at the front of the product is the key part of the product to spray snow, please protect it, and do not disassemble, modify or cut it.

FCC INFORMATION

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment!

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This product may cause harmful interference.
- 2) This product must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this product not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

Note: This product has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This product generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the distance between the product and receiver.
- Connect the product to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for assistance.

! WARNING:





1. This product is only suitable for children aged 3+ years.
2. It is necessary to ensure that children use it under the supervision of their parents and do not get too close to them to avoid accidents.
3. This is no food; please do not put it into your mouth.

SPECIFICATION

Model	LM-LED-1500
Product size	470*300*330mm
Voltage	110-120V~ 60Hz
Power	1500W

  
Parts List

A  Snow Machine x1	B  Lifting handle x1	C  Screws1 x2	D  washers x4
E  Oil drum x1	F  Remote control x1	G  Screws2 x2	H  Power cord x1

Installation guide


1.Install Part B(Lifting handle) to Part A(Snow Machine) using hardware

 Snow Machine x1 Lifting handle x1 Screws1 x2 washers x4

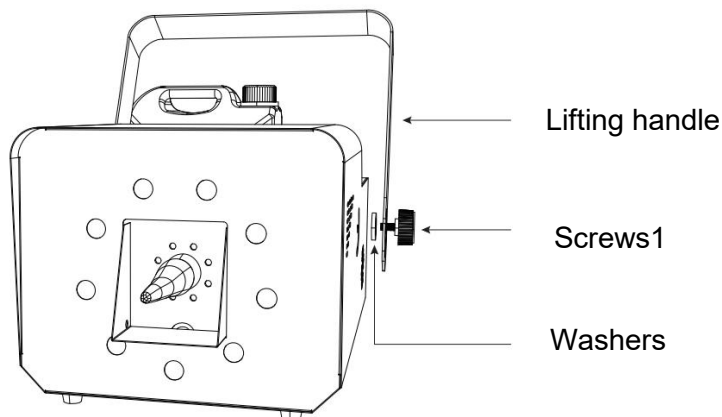

2.Install another screw as shown in the diagram.The washer is installed between the Snow Machine and the Lifting handle.

 
Screws2 x2

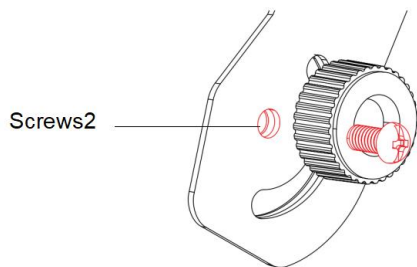

3.Install Part H(Power cord) to Part A (Snow Machine).

Note: The power cord must be securely installed to the Power cord interface.

 Operation guide

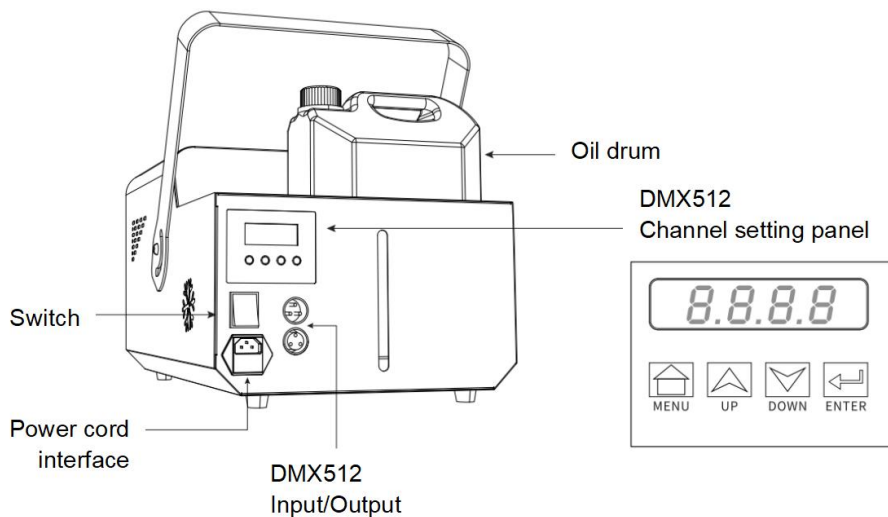


Before using the product, please check with the seller of the snowflake oil for proper use.

Switch key

Make sure the power cord is securely connected to the connector, insert the plug into the socket, press the switch, and the product goes into standby but will not work.

 Remote control

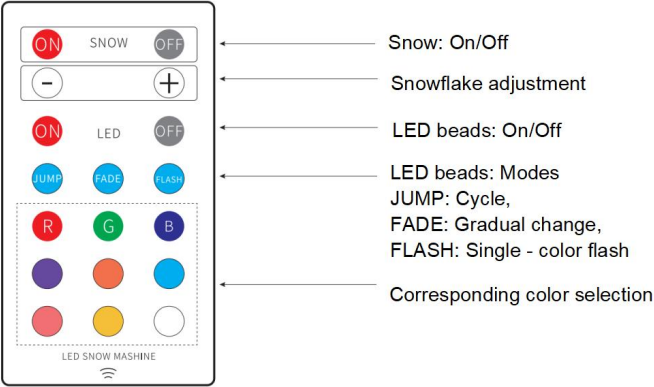

Note: The lighting and the snow machine are independently controlled. To turn them on or off, simply press the corresponding buttons.

DMX512 Channel setting

The default channel of the machine is: 001

CONTROLLER	FUNCTION	NUMERICAL VALUE	ANNOTATION
CH1 :	Snowflake - on/off	Adjust the size from 0 to 100.	0- Off state
CH2 :	Fan - On/Off	Adjust the size of the fan from 0 to 100	
CH3 :	red	Light brightness adjustment from 0 to 255	
CH4 :	green		
CH5 :	blue		
CH6 :	RGB gradient	Speed adjustment from 0 to 255	
CH7 :	LED speed		CH6 needs to be turned on to work

For example:

The machine channel is: 002

THEN THE CONSOLE "CH1" IS AN INVALID CHANNEL. CONTROL STARTING FROM "CH2";
AND SO ON.....

CONTROLLER	FUNCTION	NUMERICAL VALUE	ANNOTATION
C H 1 :	/	/	/
C H 2 :	Snowflake - on/off	Adjust the size from 0 to 100.	0- OFF STATE
C H 3 :	Fan - On/Off	Adjust the size of the fan from 0 to 100	
C H 4 :	red	Light brightness adjustment from 0 to 255	
C H 5 :	green		
C H 6 :	blue		
C H 7 :	RGB gradient	Speed adjustment from 0 to 255	
C H 8 :	LED speed		CH6 needs to be turned on to work

Remote control

Before turning off the product, please press and hold down the "-" key until snow to disappear completely, and then press the key to turn off the product.

The oil in the oil drum ran out during use

Please turn off the machine as soon as the snow stops spraying during use. If you need to continue to use snow machine, add the oil again. Do not continue to use the product after the flake oil is used up, as this will cause damage to the product.

Product maintenance

- 1) After use, clean the oil drum and replace it with clean water, re-start the machine to spray out clean water without foam, and keep the cloth cover clean.
- 2) If you do not use the product for a long time, clean it and save it. When using again, please use the newly purchased flake oil.
- 3) If the snowflakes become smaller or stop working:
 - A. Turn off the power immediately and check whether the power cord and fuse are in good condition;
 - B. Check the stock of snowflake oil in the bottle;
 - C. Check whether the filtering the nozzle, the filter in the bottle and the snow spray cloth are blocked or damaged;

TROUBLESHOOTING

Q: Why does the product not work after turn on?

A: If the product does not appear any sound after the boot:

First make sure that the power cord is firmly connected to the interface of the product, and that the power cord plug is reliably connected to the live plug; If the plug is connected properly and securely, please contact your seller for inspection and after-sales.

Q: If there is a working sound after the boot, but wait for a long time and still do not see the snowflakes?

First, make sure you have added snowflake oil to the oil drum and that the end of the delivery tube is soaked in the oil; Secondly, please contact your flake oil seller to make sure that you have used the flake oil correctly and that there are no quality problems with the flake oil;

If none of the above is a problem but you still can't spray snow, please contact your snowflake machine seller.

Q: Do snowflakes have an unusual smell?

A: The function of the product is to make snowflakes using snowflake oil, and the machine will not produce any odor. If the use of snowflake odor, for your health, please turn off the Product immediately, according to the first point of Product maintenance, wash the product. Then replace it with a better quality oil.

Q: How to deal with the sudden absence of snowflakes during use?

A: Please turn off the product as soon as possible and check that the snow oil is used up. If the oil run out, you can refuel and continue to use. If you stop using the product, please clean the product after use according to the Product maintenance.

Q: If the oil in the oil drum is not used up, can it be used again?

A: It is recommended that the snowflake oil added to the oil drum be used on the same day to avoid blocking the pipeline. You can add the

appropriate amount of snowflake oil to the oil drum according to the required amount. The storage time of the individual flake oil needs to be consulted with the seller from which you purchased the flake oil.

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. Such modifications could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. This equipment complies with FCC's RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or in conjunction with any other antenna or transmitter.

