


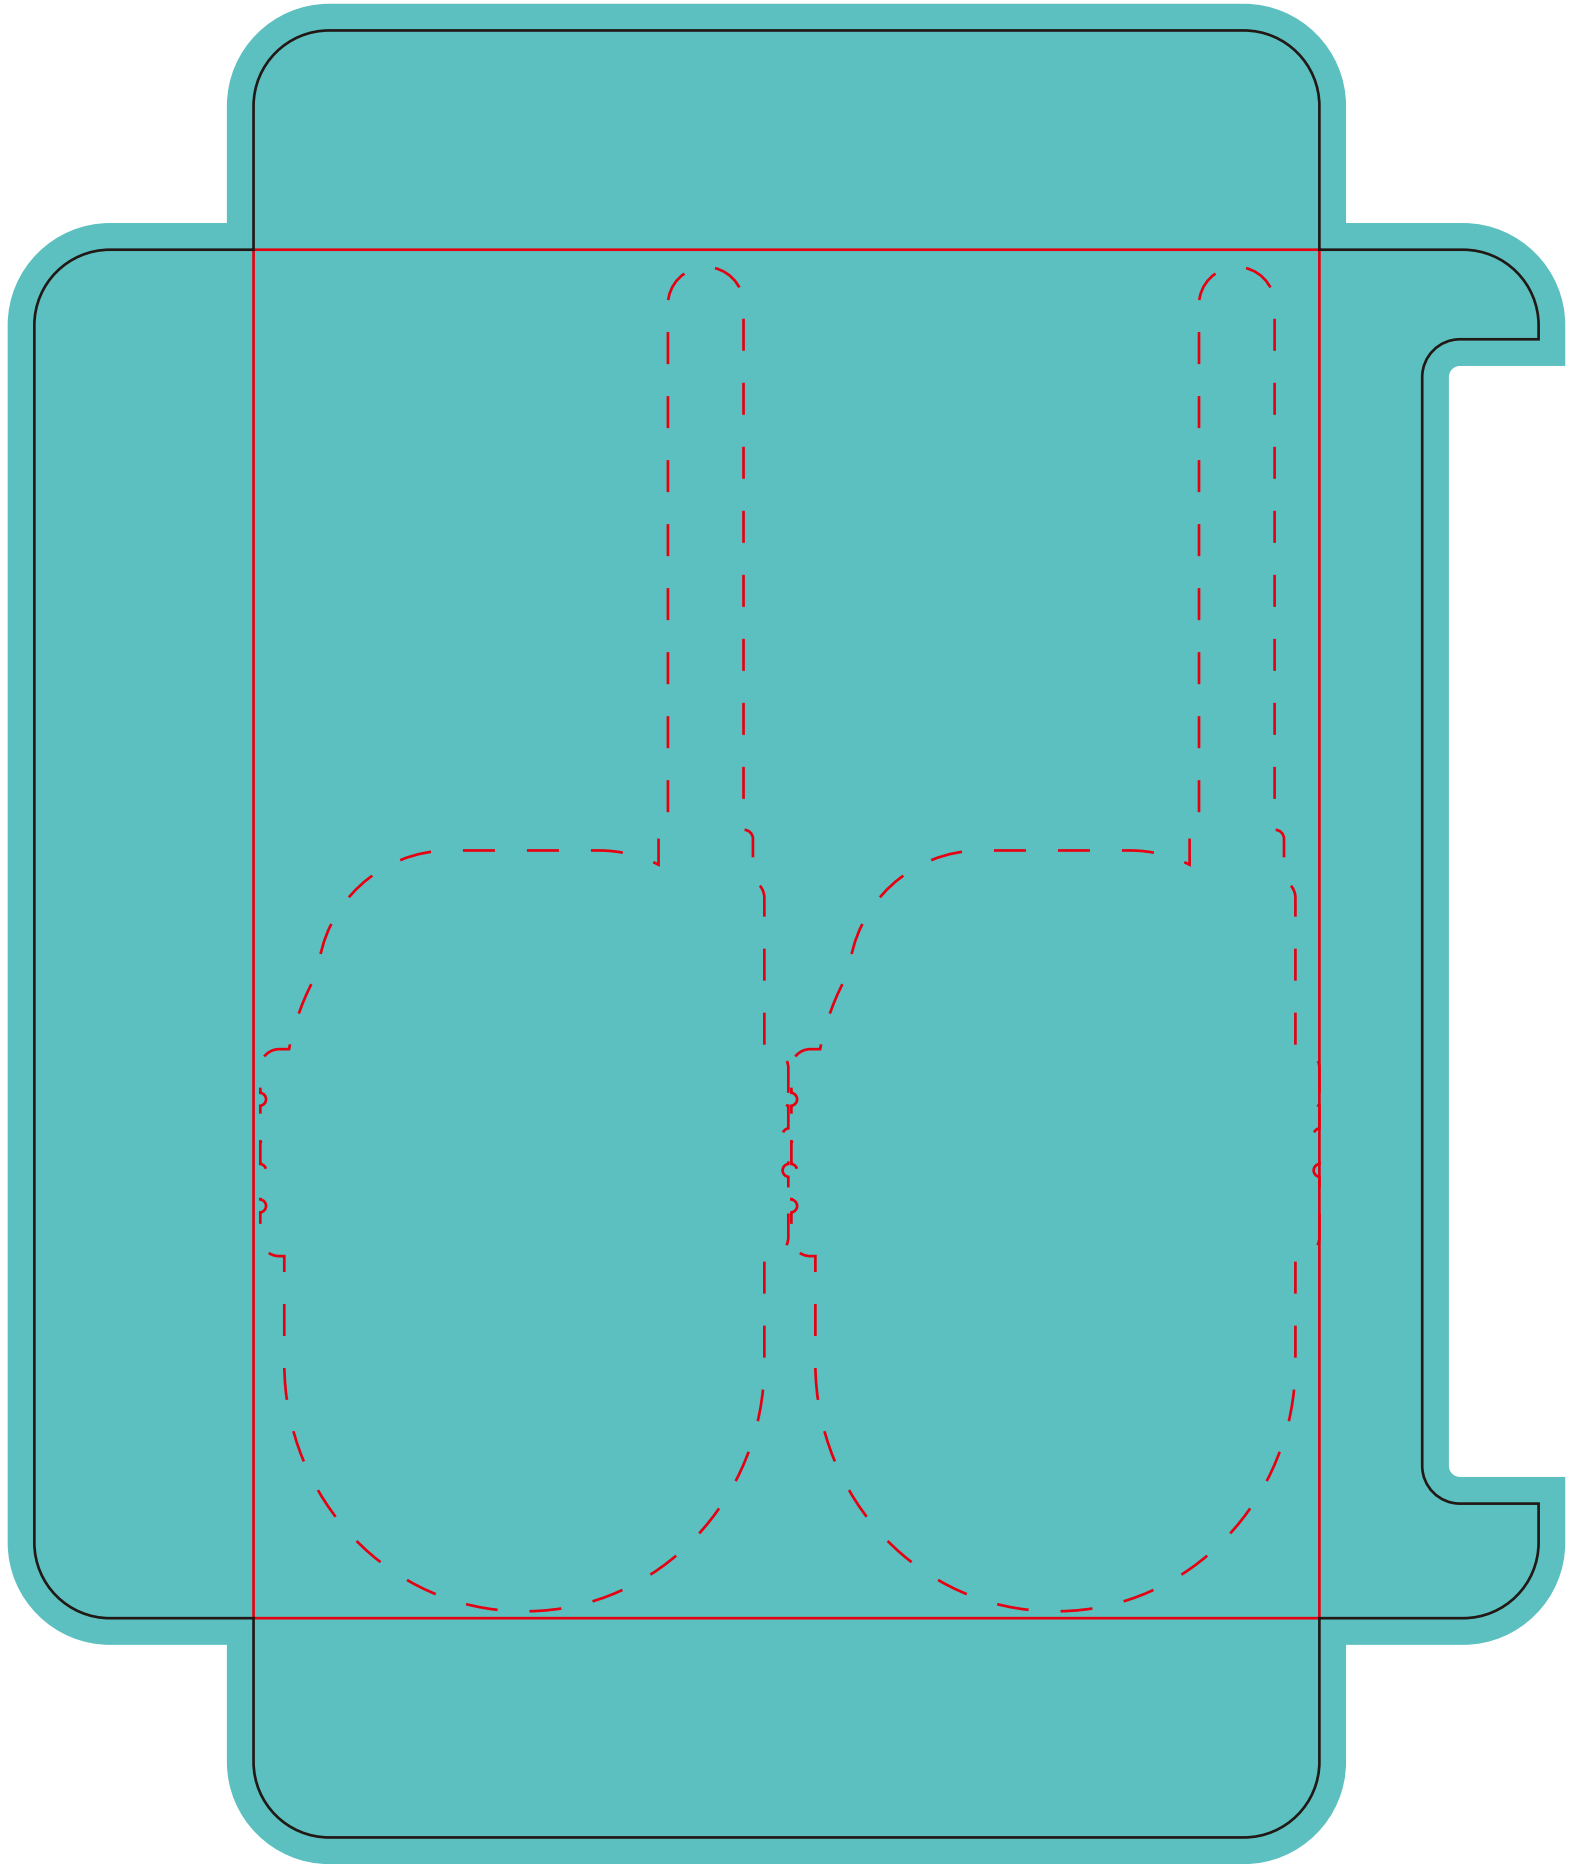

18.8 cm
7.4 inch




3.5 cm
1.38 inch

15 cm
5.91 inch



	A/W NO.	M/DEPT..	DESIGNER	DATE
	SZ25DTS62101047Y	SZ_M21	Pepper	2025/04/14
	This proprietary artwork and concepts are copyright designs of Fourstar Group Inc. 2025. No part of this artwork may be reproduced or transmitted in any form without express written consent. © Fourstar Group Inc. All Rights Reserved.			

* Please contact Account Executive for availability of design before initiating project *

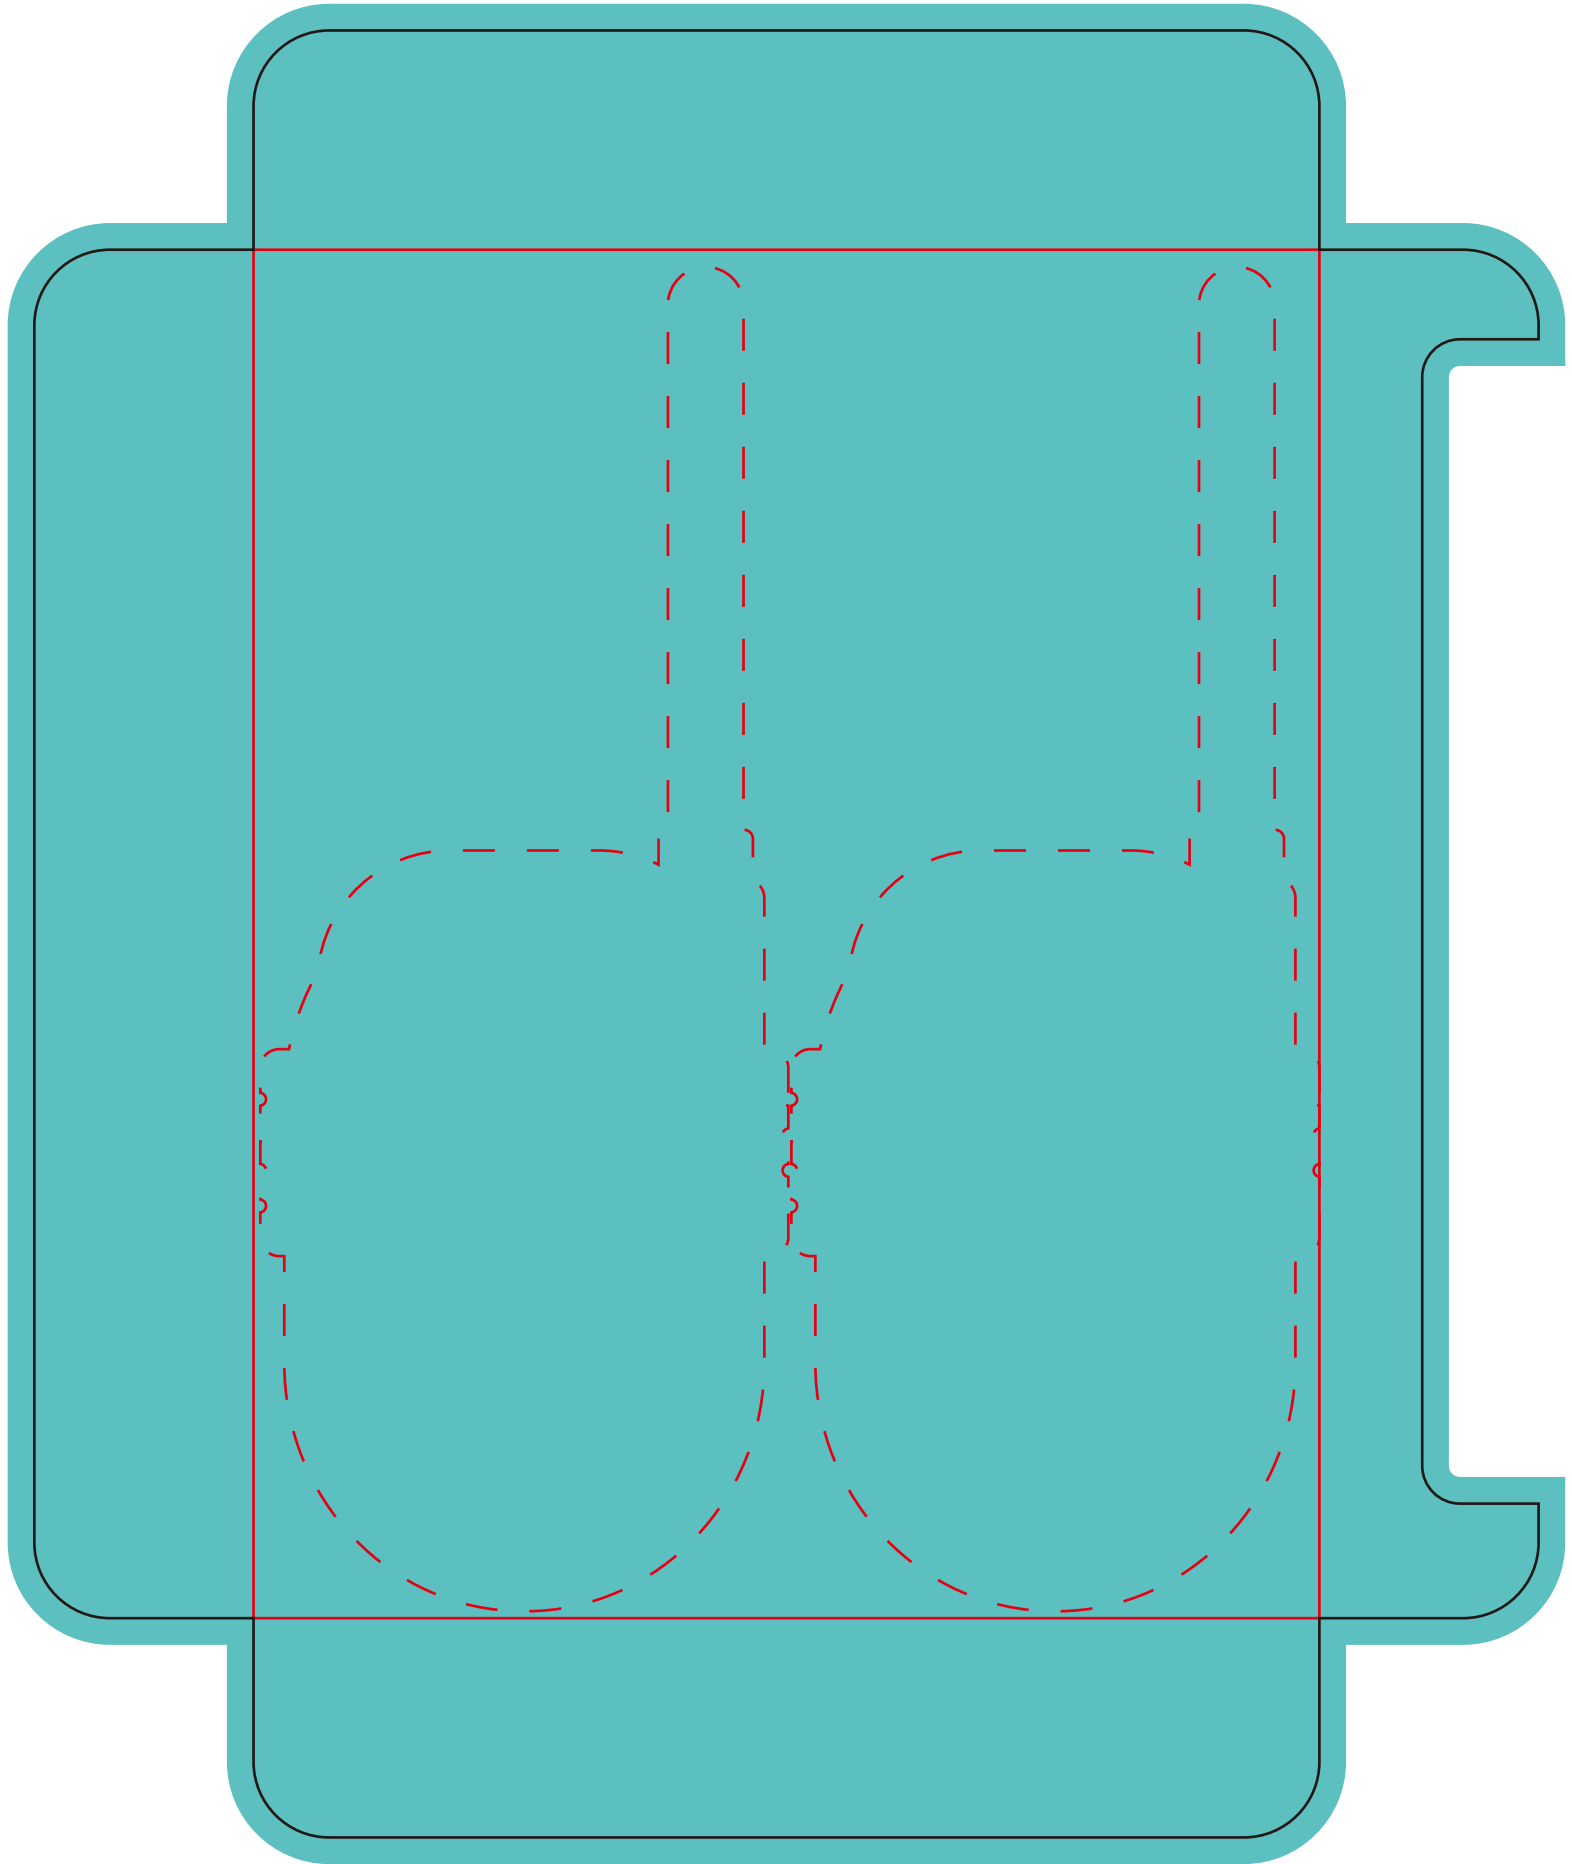

18.8 cm
7.4 inch



INSTRUCTIONS:
• Turn each walkie talkie on.
• Press and hold the push to talk button to communicate.
• Release the push to talk button when you're done speaking to hear your friend from the other walkie-talkie.
• Be sure to turn walkie-talkies off when done playing.

BATTERY REPLACEMENT:
To replace batteries refer to the following directions:
1. One walkie talkie requires 3 new 1.5V AAA batteries (not included).
2. Turn the power switch to the OFF position.
3. Use a Phillips screwdriver to loosen and remove the battery compartment door.
4. Remove old batteries and replace with 3 new 1.5V AAA batteries.
5. Replace the battery compartment door and tighten the screw.

BATTERY CAUTION:
• Alkaline batteries are recommended.
• To avoid battery leakage, do not mix old and new batteries or mix battery types (alkaline, standard or rechargeable batteries) or different brands.
• Do not use rechargeable batteries. Non-rechargeable batteries are not to be recharged.
• Only batteries of the same or equivalent type as recommended are to be used.
• Install batteries with the correct polarity (+ and -).
• The supply terminals are not to be short-circuited.
• If batteries are loose, bend out the contacts for a tight fit.
• Keep loose batteries out of reach of children.
• Do not use if battery compartment cover is loose or missing. Keep battery compartment cover secured with screw.
• Exhausted batteries are to be removed from toy. Immediately and safely dispose of any used batteries.
• Do not dispose of this product in fire, battery inside this product may explode or leak.
• When toy is not in use for an extended period of time, remove batteries to prevent possible leakage and damage to the unit.
• Check the product periodically for signs of damage to electrical parts; do not play with product until damage has been properly assessed.

MAKE SURE THE BATTERIES ARE PROPERLY INSTALLED AND INSERTED CORRECTLY AND ALWAYS FOLLOW BOTH THE PRODUCT AND BATTERY MANUFACTURER'S INSTRUCTIONS TO ENSURE PROPER SAFETY AND OPERATION. BATTERY REPLACEMENT MUST ALWAYS BE DONE BY ADULT.

Never let a child use this product unless battery door is secured. Batteries are small objects and could be ingested. Keep all batteries away from small children.

Remove all packaging before giving toy to child. Please keep packaging for future reference. Color, contents and designs may vary.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement:
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.
This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

ALKALINE BATTERIES ARE RECOMMENDED.

Do not put in trash.
Recycle or manage as hazardous waste.



	A/W NO.	M/DEPT..	DESIGNER	DATE
	SZ25DTS62101047Y	SZ_M21	Pepper	2025/04/14

This proprietary artwork and concepts are copyright designs of Fourstar Group Inc. 2025. No part of this artwork may be reproduced or transmitted in any form without express written consent. © Fourstar Group Inc. All Rights Reserved.

* Please contact Account Executive for availability of design before initiating project *