 


INSTRUCTION

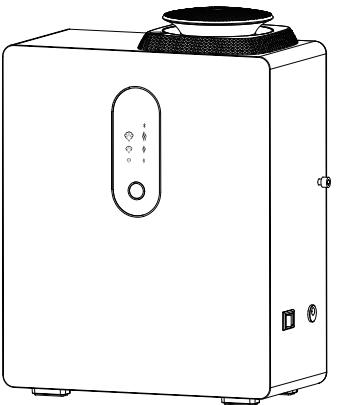

Product User Manual

Product Introduction

The new large-coverage fragrance diffuser series, the black technology magnetic lock protects essential oils from theft, the new high-efficiency silent plug-in atomizer head, and the fragrance diffusion effect are upgraded again: stable mist volume, tiny particles. With a high-speed fan to achieve rapid fragrance diffusion, quick-connect touch control interface. Multiple ways of use: can be placed independently, wall-mounted, connected to the HAVC system, one machine for multiple uses, suitable for different scenarios. It uses a cutting-edge diaphragm air pump, which is silent and durable, with a lifespan of more than 20,000 hours, suitable for hotels, airports, office buildings, cinemas, shopping malls, entertainment clubs and other places.

connect to WiFi through the mobile phone APP , so that the working status of the device can be controlled in the same network even if the user are not there.

 
Notice

Please read this instruction manual carefully before using the equipment and keep it in a safe place.

- Do not use overloaded power sockets, damaged power cables or adapters, otherwise your safety may be endangered. To avoid fire hazards; please replace them in time if found.
- If you are not a technician, please do not try to modify, disassemble, or repair the equipment to avoid damage to the equipment. If the equipment is abnormal, please check whether it is operated according to normal usage requirements or follow the troubleshooting instructions. If the problem cannot be solved, please contact sales in time.
- The equipment must not be inverted or tilted when in use. If the equipment needs to be transported to other locations, please maintain and clean the equipment first (see Equipment Maintenance for details) before packaging and transporting , avoiding essential oil penetration and damage to the equipment.
- Please maintain and clean the equipment regularly to ensure that the equipment is in optimal working condition.


Instructions for refilling essential oil

- Before refilling essential oils, stop the device for 2 minutes, and unscrew the essential oil bottle after the essential oil flows back inside the atomizer head.
- It is recommended to control the amount of essential oil added within 45 days each time to avoid deterioration of essential oils due to oxidation.

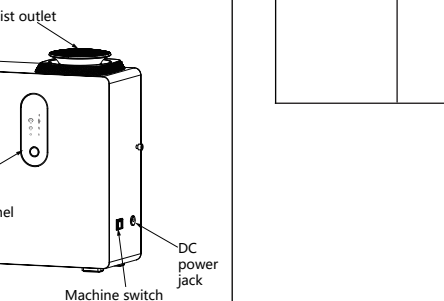

Product parameters

Dimension	W202*D121.2*H322.5(mm)	W242*D121.2*H322.5(mm)	W289*D126.2*H322.5(mm)
Capacity	1000ml	1000ml	1000ml
N.W	3.1KG	3.8KG	5.5KG
Coverage	2000m³	4000m³	7000m³
Voltage	DC12V-2A	DC12V-2A	DC12V-3A
Power	12W	15W	25W
Noise	≤40dB	≤42dB	≤46dB
Packaging size	W248*D181*H390(mm)	W288*D181*H390(mm)	336*D186*H390(mm)


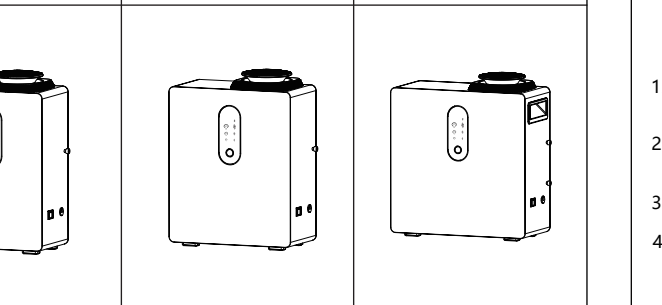 


Parts


Name	Adapter	Key	Hanging plate	Product manual	Atomizer core	Seal ring	Screw/ expansion nail
Thumbnail							
Name	Hexagonal wrench	HVAC connector	Air pipe				
Thumbnail							

Installation Guide

  - Open the lock with the key, pull out the atomizer head and take out the essential oil bottle.
- Put the essential oil into the essential oil bottle and put the essential oil bottle back into the atomizer head.
- Put the atomizer head in and lock it in the card slot.
- Connect the power supply and turn on the power, set the working time, and the device starts working.

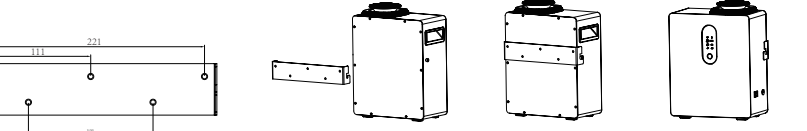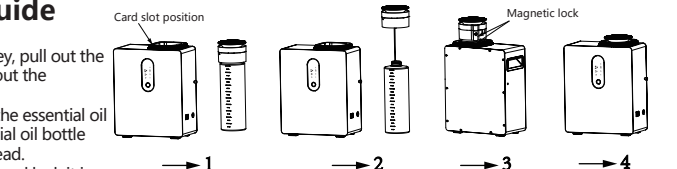


(Front unit of hanging board in mm)

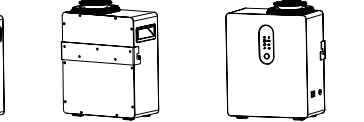 

(Wall mounted installation diagram)

 
HVAC Connection step:
Screw the HVAC Connector into the fog outlet of the atomizer head, insert one end of the Pipe into the HVAC Connector, and check that the connector is firmly inserted.Then connect the other end of pipe with the air inlet port of the Heating Ventilation and Air Conditioning equipment.At last,turn on the fragrance equipment when you run the HVAC equipment,the scented air will circulated and distributed throughout the space, creating a pleasant and inviting ambiance.

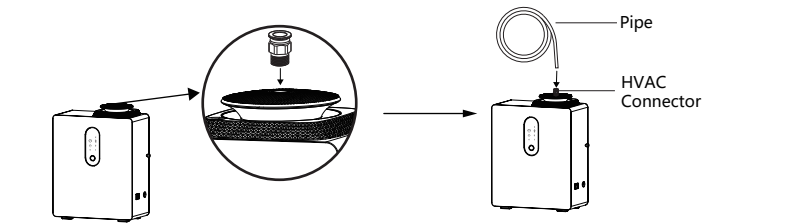

Control panel description

1. WIFI Panel description:

 - Touch switch: Turn on and switch working mode.
- Working gear: 1st gear (60:120, 8H); 2nd gear (60:60, 8H); 3rd gear (120:60, 8H)
- Working indicator: When the machine is turned on, the light will light up from bottom to top in a cycle.
- Wifi mode: Press and hold the touch switch for 2 seconds to switch.
- Network configuration indicator light: Press and hold the touch switch for 5 seconds to switch to the network configuration mode. The indicator light flashes quickly in network configuration mode, After successful network configuration, the indicator light is always on.

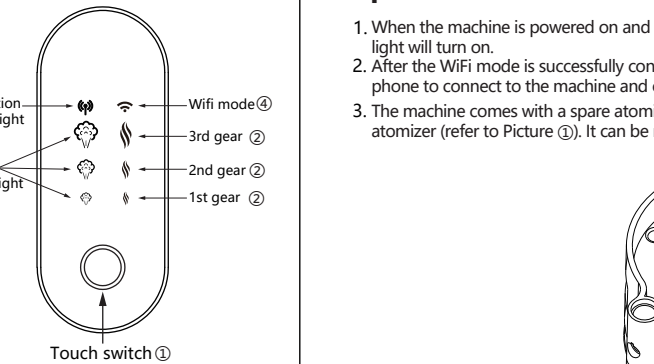


3. Operation instructions

- When the power is turned on, the buzzer sounds once, and the machine is in standby mode. The buzzer will beep briefly every time when there is an interactive operation.
- Touch the switch briefly, and the fan working indicator light up from bottom to top in a cycle. Touch the switch again in sequence, and the machine will cycle between 1st gear, 2nd gear, 3rd gear, and standby. Return to standby mode after any gear working time ends.
- When the machine is working, press and hold the touch switch for 2 seconds, the buzzer will sound once, and the machine will switch working mode.

After long pressing the switch for 5 seconds, it enters the network distribution mode, the network distribution indicator light flashes, and it stays on after the matching is successful. After long pressing the switch for 10 seconds, the machine shuts down, the buzzer beeps once, all lights go out and the device is restored to factory settings.

Tips

 - When the machine is powered on and connected to WiFi, it will first work in the gear mode, and the gear light will turn on.
- After the WiFi mode is successfully connected for the first time, you can directly use the same mobile phone to connect to the machine and operate it in the basic gear mode.
- The machine comes with a spare atomizing core. The spare atomizing core is located at the bottom of the atomizer (refer to Picture ①). It can be replaced at any time when the atomizing core malfunctions.

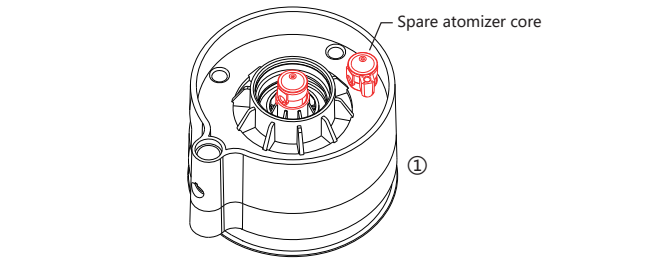

Troubleshooting

Before preparing to repair the equipment, please first try to solve the following problems according to the following methods.

Problem	Solution	Problem	Solution
Equipment does not work	- Please check whether the power adapter is the input voltage and input current required by the machine, and the DC end has been correctly inserted - The working program set by the equipment, whether it is currently in working time	Oil leakage	- Are the essential oil bottle and the atomizer head tightened - Is the atomizer head seal deformed or damaged - Is the atomizer head damaged
No atomization, small atomization	- Is the air pump working, and whether there is airflow at the mist outlet - Are the atomizer core and oil suction pipe loose or blocked - Is the air nozzle seal damaged and detached	Abnormal noise	- The air pump is loose, re-fix the air pump. - The air pump is damaged, replaced with a new one.

Equipment maintenance

In order to ensure the best fragrance diffusion effect, please check and maintain the equipment every six months. When a new fragrance needs to be replaced or the fragrance diffusion effect is weakened, the equipment should also be maintained:

- Unscrew the used essential oil bottle.
- Pour an appropriate amount of alcohol into the essential oil bottle and clean it.
- After cleaning, pour a small amount of alcohol, install the essential oil bottle on the equipment, and turn on the equipment for 5 to 8 minutes.
- After cleaning the equipment, turn off the power.

After-sales service

The equipment is under warranty for one year from the date of sale and shipment, but the outer shell, power supply, wire and external sealing ring and other wearing parts are not covered. Damage caused by human or accident is also not covered by the warranty. Paid repairs are implemented beyond the free warranty period. If you encounter any after-sales problems, please contact the authorized sales service providers in each region, or contact our company's sales center.

Warranty card

This warranty card is a quality guarantee and must be filled out truthfully.

Warranty card 1		Warranty card 2	
Warranty date		Warranty date	
Fault description		Fault description	
Verification date		Verification date	
Maintenance results		Maintenance results	
Maintenance personnel signature		Maintenance personnel signature	

Warning:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference

received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital

device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable

protection against harmful interference in a residential installation. This equipment generates,

uses and can radiate radio frequency energy and, if not installed and used in accordance with

the instructions, may cause harmful interference to radio communications. However, there is no

guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be

determined by turning the equipment off and on, the user is encouraged to try to correct the

interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.

-- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is

connected.

-- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for

compliance could void the user's authority to operate the equipment

Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled

environment.

This equipment should be installed and operated with minimum distance 20cm between the

radiator and your body.